Rev Part	Number	Replaces	Location	Model and Serial Number Range
	53-00300	153-00300, A39070,	Main Gear	120 s/n all (When Equipped With 40-97A / STC
		A39070		SA13GL);
E		A35070	Main Coor	·
.5			Main Gear	140 s/n all (When Equipped With 40-97A / STC
				SA13GL);
E			Main Gear	140A s/n all (When Equipped With 40-97A / STC
				SA13GL);
E			Main Wheel	150C s/n all (When equipped with 40-57A);
С			Main Wheel	150D s/n all (When equipped with 40-79);
С			Main Wheel	150D s/n all (When equipped with 40-79A);
				, , , , , ,
С			Aux Wheel	150D* s/n 15060477 thru 15060772 (When equipped with
				40-76A);
C			Aux Wheel	150E s/n all (When equipped with 40-76A);
С			Main Wheel	150E s/n all (When equipped with 40-79);
С			Main Wheel	150E s/n all (When equipped with 40-79A);
С			Aux Wheel	150F* s/n 15061533 thru 15063457 (When equipped with
			Aux Wileel	
				40-76A);
С			Main Wheel	150F s/n all (When equipped with 40-97);
C			Main Wheel	150F s/n all (When equipped with 40-97A);
C			Main Wheel	150G* s/n 15064533 thru 15065809 (When equipped
				with 40-97);
С			Main Wheel	150G s/n all (When equipped with 40-97A);
D				, , , , , , , , , , , , , , , , , , , ,
			Main Wheel	150H s/n all (When equipped with 40-97A);
D			Main Wheel	150J s/n all (When equipped with 40-97A);
С			Main Wheel	150K s/n all (When equipped with 40-97A);
С			Main Wheel	150L s/n all (When equipped with 40-113);
С			Main Wheel	150M s/n all (When equipped with 40-113);
С			Main Wheel	A150K s/n all (When equipped with 40-97A);
С			Main Wheel	A150L s/n all (When equipped with 40-113);
С			Main Wheel	A150M s/n all (When equipped with 40-113);
С			Aux Wheel	F150F* s/n F150-0001 thru F150-0055 (When equipped
				with 40-76A);
С			Main Wheel	F150F s/n all (When equipped with 40-97);
D			Main Wheel	F150F s/n all (When equipped with 40-97A);
С			Main Wheel	F150G* s/n F150-0068 thru F150-0167 (When equipped
			Wall Wileci	
				with 40-97);
D			Main Wheel	F150G s/n all (When equipped with 40-97A);
D			Main Wheel	F150H s/n all (When equipped with 40-97A);
D			Main Wheel	F150J s/n all (When equipped with 40-97A);
С			Main Wheel	F150K s/n all (When equipped with 40-97A);
¢			Main Wheel	F150L s/n all (When equipped with 40-113);
С			Main Wheel	F150M s/n all (When equipped with 40-113);
c				, , , , ,
			Main Wheel	FA150K s/n all (When equipped with 40-97A);
С			Main Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
				equipped with 40-113);
				· · · ·
				Project Engineer: P.E. Suntable Suntabl
				Daniel Francis 1 100 1 100 1 100 100 100 100 100 100
			1	Date: 78 / 2017 Uste: 10 - 10
			(contractor of 1918 Only of Metales
			,	1-10-10
				McFarlane Aviation, Inc.
				McFarlane McFarlane Aviation, Inc. 696 East 1700 Road
				Baldwin City, Kansas
				ELIGIBILITY: WHEEL SEAL COMPONENTS
	- 2			Size: A Scale: NA Drawn: DPH Sheet: 1 of 141
ΕÎ	01/08/2018	SEE REVISION	SHEET	Drawing Number: REVISION
				6551

05/06/2015

04/15/2015

D

SEE REVISION SHEET

SEE REVISION SHEET

F

Rev Part Number	Replaces 153-00300, A39070	<u>Location</u> Main Wheel	Model and Serial Number Range
^c MC153-00300	153-00300, A39070	Main Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with 40-113);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316) s/n all
			(When equipped with 40-113);
С		Main Wheel	152 s/n all (When equipped with 40-113);
С		Main Wheel	A152 s/n all (When equipped with 40-113);
С		Main Wheel	A152 s/n all (When equipped with D30660-1);
С		Main Wheel	F152 s/n all (When equipped with 40-113);
С		Main Wheel	FA152 s/n all (When equipped with 40-113);
E		Main Gear	170 s/n all (When Equipped With 40-97A / STC
E		Main Gear	SA13GL);
_		Mairi Geal	170A s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Gear	170B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	172 s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	172A s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	172B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	172C s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	172D s/n all (When equipped with 40-113);
		Nose Wheel	172D s/n all (When equipped with 40-55);
_		Main Wheel	172D s/n all (When equipped with 40-97A);
E		Main Gear	172D s/n all (When Equipped With 40-97A / STC SA13GL);
		Main Wheel	172E s/n all (When equipped with 40-113);
		Nose Wheel	172E s/n all (When equipped with 40-76A);
		Main Wheel	172E s/n all (When equipped with 40-97A);
E		Main Gear	172E s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	172F (T-41A) s/n all (When equipped with 40-113);
		Nose Wheel	172F (T-41A) s/n all (When equipped with 40-76A);
		Main Wheel	172F (T-41A) s/n all (When equipped with 40-97A);
С		Aux Wheel	172G* s/n 17253393 thru 17254572 (When equipped
			with 40-55);
		Main Wheel	172G s/n all (When equipped with 40-113);
		Aux Wheel	172G s/n all (When equipped with 40-76A);
		Main Wheel	172G s/n all (When equipped with 40-97A);
		Main Wheel	172H (T-41A) s/n all (When equipped with 40-113);
		Nose Wheel	172H (T-41A) s/n all (When equipped with 40-76A);
		Main Wheel	172H (T-41A) s/n all (When equipped with 40-97A);
		Main Wheel	172I s/n all (When equipped with 40-113);



ev Part Number MC153-00300	Replaces 153-00300, A39070	<u>Location</u> Nose Wheel	Model and Serial Number Range 172I s/n all (When equipped with 40-76A);
		Main Wheel	172I s/n all (When equipped with 40-97A);
		Main Wheel	172K s/n all (When equipped with 40-113);
		Nose Wheel	172K s/n all (When equipped with 40-76A);
		Main Wheel	172K s/n all (When equipped with 40-97A);
		Main Wheel	172L s/n all (When equipped with 40-113);
		Nose Wheel	172L s/n all (When equipped with 40-76A);
		Main Wheel	172L s/n all (When equipped with 40-97A);
		Main Wheel	172M* s/n 17260759 thru 17263458 (When equipped with 40-113);
		Nose Wheel	172M* s/n 17260759 thru 17263458 (When equipped with 40-76A);
		Main Wheel	172M* s/n 17260759 thru 17263458 (When equipped with 40-97A);
		Main Wheel	172M* s/n 17263459 thru 17267584 (When equipped with 40-113);
		Main Wheel	172N s/n all (When equipped with 40-113);
		Main Wheel	172P s/n all (When equipped with 40-113);
		Main Wheel	172Q s/n all (When equipped with 40-113);
		Main Wheel	172R s/n all (When equipped with 40-113);
		Main Wheel	172RG s/n all (When equipped with 40-113);
		Main Wheel	172S s/n all (When equipped with 40-113);
		Main Wheel	F172D s/n all (When equipped with 40-113);
		Nose Wheel	F172D s/n all (When equipped with 40-55);
		Main Wheel	F172D s/n all (When equipped with 40-97A);
		Main Wheel	F172E s/n all (When equipped with 40-113);
		Nose Wheel	F172E s/n all (When equipped with 40-76A);
		Main Wheel	F172E s/n all (When equipped with 40-97A);
		Main Wheel	F172F s/n all (When equipped with 40-113);
		Nose Wheel	F172F s/n all (When equipped with 40-76A);
		Main Wheel	F172F s/n all (When equipped with 40-97A);
		Main Wheel	F172G s/n all (When equipped with 40-113);
		Nose Wheel	F172G s/n all (When equipped with 40-76A);
		Main Wheel	F172G s/n all (When equipped with 40-97A);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped with 40-113);
		Nose Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped with 40-76A);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped with 40-97A);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equippe with 40-113);
		Nose Wheel	F172H* s/n F17200655 thru F17200754 (When equippe with 40-76A);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equippe with 40-97A);



Rev Part Number	<u>Replaces</u>	<u>Location</u>	Model and Serial Number Range
MC153-00300	153-00300, A39070	Main Wheel	F172K s/n all (When equipped with 40-113);
		Nose Wheel	F172K s/n all (When equipped with 40-76A);
		Main Wheel	F172K s/n all (When equipped with 40-97A);
		Main Wheel	F172L s/n all (When equipped with 40-113);
		Nose Wheel	F172L s/n all (When equipped with 40-76A);
		Main Wheel	F172L s/n all (When equipped with 40-97A);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
			with 40-113);
		Aux Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
			with 40-76A);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
			with 40-97A);
		Main Wheel	F172M* s/n F17201235 thru F17201514 (When equipped
			with 40-113);
		Main Wheel	F172N s/n all (When equipped with 40-113);
		Main Wheel	F172P s/n all (When equipped with 40-113);
		Main Wheel	FP172 s/n all (When equipped with 40-113);
С		Aux Wheel	FP172 s/n all (When equipped with 40-55);
		Main Wheel	FP172 s/n all (When equipped with 40-97A);
		Main Wheel	FR172E s/n all (When equipped with 40-113);
		Aux Wheel	FR172E s/n all (When equipped with 40-713); FR172E s/n all (When equipped with 40-76A);
		Main Wheel	FR172E s/n all (When equipped with 40-97A);
		Main Wheel	FR172E s/n all (When equipped with 40-97A); FR172F s/n all (When equipped with 40-113);
		Aux Wheel	, , , , ,
			FR172F s/n all (When equipped with 40-76A);
		Main Wheel	FR172F s/n all (When equipped with 40-97A);
		Main Wheel	FR172G s/n all (When equipped with 40-113);
		Aux Wheel	FR172G s/n all (When equipped with 40-76A);
		Main Wheel	FR172G s/n all (When equipped with 40-97A);
		Main Wheel	FR172H s/n all (When equipped with 40-113);
		Aux Wheel	FR172H s/n all (When equipped with 40-76A);
		Main Wheel	FR172H s/n all (When equipped with 40-97A);
		Main Wheel	FR172J s/n all (When equipped with 40-113);
		Aux Wheel	FR172J s/n all (When equipped with 40-76A);
		Main Wheel	FR172J s/n all (When equipped with 40-97A);
		Main Wheel	FR172K s/n all (When equipped with 40-113);
		Main Wheel	P172D s/n all (When equipped with 40-113);
		Nose Wheel	P172D s/n all (When equipped with 40-55);
_		Main Wheel	P172D s/n all (When equipped with 40-97A);
E		Main Gear	P172D s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-113);
		Aux Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-76A);
		Main Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-97A);
		Main Wheel	R172F (T-41D) s/n all (When equipped with 40-113);
		Aux Wheel	R172F (T-41D) s/n all (When equipped with 40-76A);
		Main Wheel	R172F (T-41D) s/n all (When equipped with 40-97A);
			McFarlane Aviation, Inc.
			MCFarlane 696 East 1700 Road
			Baldwin City, Kansas
		Title:	ELIGIBILITY: WHEEL SEAL COMPONENTS
			CESSNA
		Size:	
1		Size.	1 110

Drawing Number:

6551

REVISION

F

	<u>eplaces</u> 3-00300, A39070	Location Main Wheel Aux Wheel Main Wheel Main Wheel Aux Wheel Aux Wheel Main Wheel Main Wheel Main Gear	Model and Serial Number Range R172G (T-41C,D) s/n all (When equipped with 40-113); R172G (T-41C,D) s/n all (When equipped with 40-76A); R172G (T-41C,D) s/n all (When equipped with 40-97A); R172H (T-41D) s/n all (When equipped with 40-113); R172H (T-41D) s/n all (When equipped with 40-76A); R172H (T-41D) s/n all (When equipped with 40-97A); R172K s/n all (When equipped with 40-113); 175 s/n all (When Equipped With 40-97A / STC
E	3-00300, A39070	Aux Wheel Main Wheel Main Wheel Aux Wheel Main Wheel Main Wheel	R172G (T-41C,D) s/n all (When equipped with 40-76A); R172G (T-41C,D) s/n all (When equipped with 40-97A); R172H (T-41D) s/n all (When equipped with 40-113); R172H (T-41D) s/n all (When equipped with 40-76A); R172H (T-41D) s/n all (When equipped with 40-97A); R172K s/n all (When equipped with 40-113);
E		Main Wheel Main Wheel Aux Wheel Main Wheel Main Wheel	R172G (T-41C,D) s/n all (When equipped with 40-97A); R172H (T-41D) s/n all (When equipped with 40-113); R172H (T-41D) s/n all (When equipped with 40-76A); R172H (T-41D) s/n all (When equipped with 40-97A); R172K s/n all (When equipped with 40-113);
E		Main Wheel Aux Wheel Main Wheel Main Wheel	R172H (T-41D) s/n all (When equipped with 40-113); R172H (T-41D) s/n all (When equipped with 40-76A); R172H (T-41D) s/n all (When equipped with 40-97A); R172K s/n all (When equipped with 40-113);
E		Aux Wheel Main Wheel Main Wheel	R172H (T-41D) s/n all (When equipped with 40-76A); R172H (T-41D) s/n all (When equipped with 40-97A); R172K s/n all (When equipped with 40-113);
E		Main Wheel Main Wheel	R172H (T-41D) s/n all (When equipped with 40-97A); R172K s/n all (When equipped with 40-113);
E		Main Wheel	R172K s/n all (When equipped with 40-113);
E			
E		Main Gear	
			SA13GL);
E		Main Gear	175A s/n all (When Equipped With 40-97A / STC SA13GL);
		Main Gear	175B s/n all (When Equipped With 40-97A / STC
E		Main Gear	SA13GL);
_		Main Geal	175C s/n all (When Equipped With 40-97A / STC SA13GL);
		Aux Wheel	177 s/n all (When equipped with 40-76A);
		Main Wheel	177 s/n all (When equipped with 40-97A);
		Main Wheel	177A s/n all (When equipped with 40-97A);
		Main Wheel	177B* s/n 17701371 thru 17701530 (When equipped with
			40-97A);
		Main Wheel	177B* s/n 17701531 thru 17702752 (When equipped with
			40-113);
		Main Wheel	177RG s/n all (When equipped with 40-113);
		Main Wheel	F177RG s/n all (When equipped with 40-113);
E		Main Gear	180 s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Gear	180 s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Gear	180 s/n all (When Equipped With 40-97A / STC
E		Main Coor	SA13GL);
		Main Gear	180A s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Gear	180A s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Gear	180A s/n all (When Equipped With 40-97A / STC
E		Main Gear	SA13GL);
_		Main Gear	180B s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Gear	180B s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Gear	180B s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Gear	180C s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Gear	180C s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);



Rev Part Number	Replaces	<u>Location</u>	Model and Serial Number Range
^E MC153-00300	153-00300, A39070	Main Gear	180C s/n all (When Equipped With 40-97A / STC
E		Main Oann	SA13GL);
_		Main Gear	180D s/n all (When Equipped With 40-75B / STC
E			SA62GL);
_		Main Gear	180D s/n all (When Equipped With 40-75D or 40-75T /
E			STC SA63GL);
_		Main Gear	180D s/n all (When Equipped With 40-97A / STC
E			SA13GL);
_		Main Gear	180E s/n all (When Equipped With 40-75B / STC
E			SA62GL);
_		Main Gear	180E s/n all (When Equipped With 40-75D or 40-75T /
E			STC SA63GL);
_		Main Gear	180E s/n all (When Equipped With 40-97A / STC
E			SA13GL);
		Main Gear	180F s/n all (When Equipped With 40-75B / STC
E		Main Oann	SA62GL);
		Main Gear	180F s/n all (When Equipped With 40-75D or 40-75T /
E		Main Coor	STC SA63GL);
		Main Gear	180F s/n all (When Equipped With 40-97A / STC
D		Main Mhaal	SA13GL);
E		Main Wheel	180G s/n all (When equipped with 40-75 or 40-75B);
_		Main Gear	180G s/n all (When Equipped With 40-75D or 40-75T /
D		Main Wheel	STC SA63GL);
E		Main Wheel	180H s/n all (When equipped with 40-75 or 40-75B);
_		Main Gear	180H s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Gear	180H s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	180H* s/n 18052011 thru 18052284 (When equipped with
			40-75D);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When Equipped
			With 40-75B / STC SA62GL);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
			40-75D);
E		Main Gear	180J* s/n 18052285 thru 18052384 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			40-75B);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			40-75D);
E		Main Gear	180J* s/n 18052385 thru 18052770 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	180K s/n all (When equipped with 40-75B);
D		Main Wheel	180K s/n all (When equipped with 40-75D);
E		Main Gear	180K s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
1			



David Namahari	Danis	1 4:	Madal and Ossial Number Danse
Rev Part Number MC153-00300	Replaces 153-00300, A39070	<u>Location</u> Main Gear	Model and Serial Number Range
WC 155-00500	155-00500, A59070	Main Geal	182 s/n all (When Equipped With 40-97A / STC
E		Main Coor	SA13GL);
_		Main Gear	182A s/n all (When Equipped With 40-97A / STC
E		Main Ones	SA13GL);
		Main Gear	182B s/n all (When Equipped With 40-97A / STC
E		M : 0	SA13GL);
		Main Gear	182C s/n all (When Equipped With 40-97A / STC
E			SA13GL);
		Main Gear	182D s/n all (When Equipped With 40-97A / STC
D		A 10/1 I	SA13GL);
D		Aux Wheel	182E s/n all (When equipped with 40-55);
E		Aux Wheel	182E s/n all (When equipped with 40-76A);
_		Main Gear	182E s/n all (When Equipped With 40-97A / STC
			SA13GL);
D		Aux Wheel	182F* s/n 18254424 thru 18254699 (When equipped with
_			40-76A);
E		Main Gear	182F s/n all (When Equipped With 40-97A / STC
			SA13GL);
D		Aux Wheel	182F* s/n 18254700 thru 18255058 (When equipped with
			40-55);
D		Aux Wheel	182G s/n all (When equipped with 40-76A);
E		Main Gear	182G s/n all (When Equipped With 40-97A / STC
			SA13GL);
D		Aux Wheel	182H s/n all (When equipped with 40-76A);
D		Main Wheel	182H s/n all (When equipped with 40-97A);
D		Aux Wheel	182J s/n all (When equipped with 40-76A);
D		Main Wheel	182J s/n all (When equipped with 40-97A);
D		Aux Wheel	182K s/n all (When equipped with 40-76A);
D		Main Wheel	182K s/n all (When equipped with 40-97A);
D		Aux Wheel	182L s/n all (When equipped with 40-76A);
D		Main Wheel	182L s/n all (When equipped with 40-97A);
D		Aux Wheel	182M s/n all (When equipped with 40-76A);
D		Main Wheel	182M s/n all (When equipped with 40-97A);
D		Main Wheel	182N* s/n 18260056 thru 18260445 (When equipped with
			40-97A);
D		Aux Wheel	182N s/n all (When equipped with 40-76A);
D		Main Wheel	182N* s/n 18260446 thru 18260825 (When equipped with
			40-113);
D		Main Wheel	182P* s/n 18260826 thru 18262465 (When equipped with
_			40-113);
D		Main Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
			40-113);
D		Main Wheel	182Q s/n all (When equipped with 40-113);
D		Main Wheel	182S s/n all (When equipped with 40-75B);
D		Main Wheel	182T s/n all (When equipped with 40-75B);
D		Main Wheel	A182J s/n all (When equipped with 40-97A);
1			



<u>ev</u> <u>Par</u> MC	rt Number 3153-00300	Replaces 153-00300, A39070	<u>Location</u> Aux Wheel	Model and Serial Number Range A182K s/n all (When equipped with 40-76A);
D		•	Main Wheel	A182K s/n all (When equipped with 40-97A);
)			Aux Wheel	A182L s/n all (When equipped with 40-76A);
)			Main Wheel	A182L s/n all (When equipped with 40-97A);
			Main Wheel	A182N* s/n A182-0117 thru A182-0136 (When equipped
				with 40-97A);
			Aux Wheel	A182N s/n all (When equipped with 40-76A);
			Main Wheel	A182N* s/n A182-0137 thru A182-0148 (When equipped with 40-113);
			Main Wheel	F182P s/n all (When equipped with 40-113);
			Main Wheel	F182Q s/n all (When equipped with 40-113);
			Main Wheel	T182T s/n all (When equipped with 40-75B);
			Main Gear	185 s/n all (When Equipped With 40-75B / STC SA62GL);
			Main Gear	185 s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
			Main Gear	185A s/n all (When Equipped With 40-75B / STC SA62GL);
			Main Gear	185A s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
			Main Gear	185B s/n all (When Equipped With 40-75B / STC SA62GL);
			Main Gear	185B s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
			Main Wheel	185C s/n all (When equipped with 40-75 or 40-75B);
			Main Gear	185C s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
			Main Wheel	185D s/n all (When equipped with 40-75 or 40-75B);
			Main Gear	185D s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
			Main Wheel	185E s/n all (When equipped with 40-75 or 40-75B);
			Main Gear	185E s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
			Main Wheel	A185E* s/n 185-0968 thru 185-1599 (When Equipped With 40-75B / STC SA62GL);
			Main Gear	A185E* s/n 185-0968 thru 185-1599 (When Equipped With 40-75D or 40-75T / STC SA63GL);
			Main Wheel	A185E* s/n 185-1471 thru 185-1599 (When equipped with 40-75D);
			Main Wheel	A185E* s/n 18501600 thru 18502090 (When Equipped With 40-75B / STC SA62GL);
			Main Wheel	A185E* s/n 18501600 thru 18502090 (When equipped with 40-75D);
			Main Gear	A185E* s/n 18501600 thru 18502090 (When Equipped With 40-75D or 40-75T / STC SA63GL);



Rev Part Number	<u>Replaces</u>	<u>Location</u>	Model and Serial Number Range
E MC153-00300	153-00300, A39070	Main Wheel	A185F* s/n 18502091 thru 18502310 (When Equipped
			With 40-75B / STC SA62GL);
D		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
_			with 40-75D);
E		Main Gear	A185F* s/n 18502091 thru 18502310 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	A185F* s/n 18502311 thru 18504448 (When equipped with 40-75B);
D		Main Wheel	A185F* s/n 18502311 thru 18504448 (When equipped with 40-75D);
D		Main Wheel	188 s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	188A s/n all (When equipped with 40-75B);
)		Main Wheel	188B s/n all (When equipped with 40-75B);
)		Main Wheel	188B s/n all (When equipped with 40-98A);
)		Main Wheel	A188 s/n all (When equipped with 40-75B);
)		Main Wheel	A188A s/n all (When equipped with 40-75B);
)		Main Wheel	A188B* s/n 18800833 thru 18802348 (When equipped
			with 40-75B);
D		Main Wheel	A188B* s/n 18800833 thru 18802348 (When equipped
			with 40-98A);
)		Main Wheel	A188B* s/n 18802349 thru 18803973 (When equipped
			with 40-98A);
)		Main Wheel	A-188B s/n all (When equipped with 40-75B);
)		Main Wheel	A-188B s/n all (When equipped with 40-98A);
)		Main Wheel	A188B (w/ large hopper)* s/n 18800833T thru 18802348T (When equipped with 40-75B);
)		Main Wheel	A188B (w/ large hopper)* s/n 18800833T thru 18802348T
			(When equipped with 40-98A);
)		Main Wheel	A188B (w/ large hopper)* s/n 18802349T thru 18803973T
			(When equipped with 40-98A);
		Main Wheel	A-A188B s/n all (When equipped with 40-75B);
		Main Wheel	A-A188B s/n all (When equipped with 40-98A);
		Main Wheel	T188C s/n all (When equipped with 40-98A);
		Aux Wheel	210-5 (205) s/n all (When equipped with 40-55);
		Main Wheel	210-5 (205) s/n all (When equipped with 40-67);
		Main Wheel	210-5A (205A) s/n all (When equipped with 40-75);
		Main Wheel	210-5A (205A) s/n all (When equipped with 40-75B);
)		Aux Wheel	210-5A (205A) s/n all (When equipped with 40-76);
)		Aux Wheel	210-5A (205A) s/n all (When equipped with 40-76A);
)		Main Wheel	206 s/n all (When equipped with 40-75B);
)		Main Wheel	206 s/n all (When equipped with 40-75D);
i.		Main Gear	206 s/n all (When Equipped With 40-75D or 40-75T /
)		Aux Wheel	STC SA63GL); 206 s/n all (When equipped with 40-76A);
)		Main Wheel	206 s/n all (When equipped with 40-76A); 206H s/n all (When equipped with 40-75B);
D		Main Wheel	206H s/n all (When equipped with 40-75B); 206H s/n all (When equipped with 40-75D);
		iviali i vvileel	ZUUM S/II AII (WIIEII EYUIDDEU WILII 4U-/ SD),



Rev Part Number	Replaces	Location Main Wheel	Model and Serial Number Range
D MC153-00300	153-00300, A39070	Main Wheel	206H s/n all (When equipped with 40-76A);
D		Main Wheel	P206 s/n all (When equipped with 40-75B);
E		Main Wheel	P206 s/n all (When equipped with 40-75D);
		Main Gear	P206 s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL):
D		Aux Wheel	P206 s/n all (When equipped with 40-76A);
D		Main Wheel	P206A s/n all (When equipped with 40-75A);
D		Main Wheel	P206A s/n all (When equipped with 40-75D);
D		Aux Wheel	P206A s/n all (When equipped with 40-76A);
D		Main Wheel	P206B s/n all (When equipped with 40-75B);
D		Main Wheel	P206B s/n all (When equipped with 40-75D);
D		Aux Wheel	
D		Main Wheel	P206B s/n all (When equipped with 40-76A);
D		Main Wheel	P206C s/n all (When equipped with 40-75B);
D		Aux Wheel	P206C s/n all (When equipped with 40-75D);
D			P206C s/n all (When equipped with 40-76A);
D		Main Wheel	P206D s/n all (When equipped with 40-75B);
D		Main Wheel	P206D s/n all (When equipped with 40-75D);
D		Aux Wheel	P206D s/n all (When equipped with 40-76A);
D		Main Wheel	P206E s/n all (When equipped with 40-75B);
D		Main Wheel	P206E s/n all (When equipped with 40-75D);
D		Aux Wheel	P206E s/n all (When equipped with 40-76A);
D		Main Wheel	T206H s/n all (When equipped with 40-75B);
D		Main Wheel	T206H s/n all (When equipped with 40-75D);
D		Main Wheel	T206H s/n all (When equipped with 40-76A);
D		Main Wheel	TP206A s/n all (When equipped with 40-75B);
D		Main Wheel	TP206A s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206A s/n all (When equipped with 40-76A);
D		Main Wheel	TP206B s/n all (When equipped with 40-75B);
D		Main Wheel	TP206B s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206B s/n all (When equipped with 40-76A);
D D		Main Wheel	TP206C s/n all (When equipped with 40-75B);
D		Main Wheel	TP206C s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206C s/n all (When equipped with 40-76A);
		Main Wheel	TP206D s/n all (When equipped with 40-75B);
D		Main Wheel	TP206D s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206D s/n all (When equipped with 40-76A);
, D		Main Wheel	TP206E s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206E s/n all (When equipped with 40-76A);
D		Main Wheel	TU206A s/n all (When equipped with 40-75B);
D		Main Wheel	TU206A s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206A s/n all (When equipped with 40-76A);
D		Main Wheel	TU206B s/n all (When equipped with 40-75B);
D		Main Wheel	TU206B s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206B s/n all (When equipped with 40-76A);
D		Main Wheel	TU206C s/n all (When equipped with 40-75B);
D		Main Wheel	TU206C s/n all (When equipped with 40-75D);



D D (N)			M
Rev Part Number	Replaces	Location	Model and Serial Number Range
D MC153-00300	153-00300, A39070	Aux Wheel	TU206C s/n all (When equipped with 40-76A);
D		Main Wheel	TU206D s/n all (When equipped with 40-75B);
D		Main Wheel	TU206D s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206D s/n all (When equipped with 40-76A);
		Main Wheel	TU206E s/n all (When equipped with 40-75B / STC
D		Main Mhaal	SA62GL);
E		Main Wheel	TU206E s/n all (When equipped with 40-75D);
		Main Gear	TU206E s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
D		Aux Wheel	TU206E s/n all (When equipped with 40-76A);
D		Main Wheel	TU206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75B / STC SA62GL);
D		Main Wheel	TU206F* s/n U20601701 thru U20602199 (When
			equipped with 40-75D);
E		Main Gear	TU206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75D or 40-75T / STC SA63GL);
D		Aux Wheel	TU206F* s/n U20601701 thru U20602199 (When
			equipped with 40-76A);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-75B / STC SA62GL);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-75D);
D		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-76A);
D		Main Wheel	TU206G s/n all (When equipped with 40-75B);
D		Main Wheel	TU206G s/n all (When equipped with 40-75D);
E		Main Gear	TU206G s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
D		Aux Wheel	TU206G s/n all (When equipped with 40-76A);
D		Main Wheel	U206 s/n all (When equipped with 40-75B);
D		Main Wheel	U206 s/n all (When equipped with 40-75D);
E		Main Gear	U206 s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	U206 s/n all (When equipped with 40-76A);
D		Main Wheel	U206A s/n all (When equipped with 40-75B);
D		Main Wheel	U206A s/n all (When equipped with 40-75D);
D		Aux Wheel	U206A s/n all (When equipped with 40-76A);
D		Main Wheel	U206B s/n all (When equipped with 40-75B);
D		Main Wheel	U206B s/n all (When equipped with 40-75D);
D		Aux Wheel	U206B s/n all (When equipped with 40-76A);
D		Main Wheel	U206C s/n all (When equipped with 40-75B);
D		Main Wheel	U206C s/n all (When equipped with 40-75D);
D		Aux Wheel	U206C s/n all (When equipped with 40-76A);
D		Main Wheel	U206D s/n all (When equipped with 40-75B);
D		Main Wheel	U206D s/n all (When equipped with 40-75D);
D		Aux Wheel	U206D s/n all (When equipped with 40-76A);



Rev Part Number MC153-00300	Replaces 153-00300, A39070	<u>Location</u> Main Wheel	Model and Serial Number Range
WC 193-00300	155-00500, A59070	Main Wileei	U206E s/n all (When equipped with 40-75B / STC SA62GL):
D		Main Wheel	U206E s/n all (When equipped with 40-75D);
D		Aux Wheel	U206E s/n all (When equipped with 40-76A);
D		Main Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
		Main Wilcei	with 40-75B / STC SA62GL);
D		Main Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
		Wall Wilco	with 40-75D);
E		Main Gear	U206F* s/n U20601701 thru U20602199 (When
		Main Ocai	Equipped With 40-75D or 40-75T / STC SA63GL);
D		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
		Aux Wilcol	with 40-76A);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
		Wall Wilco	with 40-75B / STC SA62GL);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
		Main Wilooi	with 40-75D);
D		Aux Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
		7.67. 7.1.00.	with 40-76A);
D		Main Wheel	U206G s/n all (When equipped with 40-75B);
D		Main Wheel	U206G s/n all (When equipped with 40-75D);
E		Main Gear	U206G s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	U206G s/n all (When equipped with 40-76A);
D		Main Wheel	207 s/n all (When equipped with 40-75B);
D		Main Wheel	207 s/n all (When equipped with 40-75D);
D		Aux Wheel	207 s/n all (When equipped with 40-76A);
D		Main Wheel	207A s/n all (When equipped with 40-75B);
D		Main Wheel	207A s/n all (When equipped with 40-75D);
D		Aux Wheel	207A s/n all (When equipped with 40-76A);
D		Main Wheel	T207 s/n all (When equipped with 40-75B);
D		Main Wheel	T207 s/n all (When equipped with 40-75D);
D		Aux Wheel	T207 s/n all (When equipped with 40-76A);
D		Main Wheel	T207A s/n all (When equipped with 40-75B);
D		Main Wheel	T207A s/n all (When equipped with 40-75D);
D		Aux Wheel	T207A s/n all (When equipped with 40-76A);
E		Main Gear	210 s/n all (When Equipped With 40-75B / STC
			SA52GL);
E		Main Gear	210A s/n all (When Equipped With 40-75B / STC
			SA52GL);
E		Main Gear	210B s/n all (When Equipped With 40-75B / STC
			SA52GL);
D		Main Wheel	210C s/n all (When equipped with 40-21);
E		Main Gear	210C s/n all (When Equipped With 40-75B / STC
			SA52GL);
D		Main Wheel	210D s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	210E s/n all (When equipped with 40-75 or 40-75B);



Rev Part Number MC153-00300	Replaces 153-00300, A39070	<u>Location</u> Main Wheel	Model and Serial Number Range 210F s/n all (When equipped with 40-75 or 40-75B);
D	100-00000, 700010	Main Wheel	210G s/n all (When equipped with 40-75B);
D		Main Wheel	210H s/n all (When equipped with 40-75B);
D		Main Wheel	210J s/n all (When equipped with 40-75B);
D		Main Wheel	210K s/n all (When equipped with 40-75B);
E		Main Gear	
		Iviairi Geai	210K s/n all (When Equipped With 40-75B / STC SA52GL);
E		Main Wheel	210L s/n all (When Equipped With 40-75B / STC SA52GL);
E		Main Wheel	210M s/n all (When Equipped With 40-75B / STC SA52GL);
D		Main Wheel	210N* s/n 21062955 thru 21064135 (When equipped with 40-75B);
D		Main Wheel	210N* s/n 21064136 thru 21064822 (When equipped with
			40-75B);
D		Main Wheel	210N* s/n 21064823 thru 21064897 (When equipped with
			40-142);
D		Main Wheel	210R s/n all (When equipped with 40-142);
D		Main Wheel	P210N s/n all (When equipped with 40-142);
E		Main Wheel	P210N s/n all (When Equipped With 40-75B / STC SA52GL);
D		Main Wheel	P210R s/n all (When equipped with 40-142);
D		Main Wheel	P210R s/n all (When equipped with 40-75B);
D		Main Wheel	T210F s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	T210G s/n all (When equipped with 40-75B);
D		Main Wheel	T210H s/n all (When equipped with 40-75B);
D		Main Wheel	T210J s/n all (When equipped with 40-75B);
E		Main Wheel	T210K s/n all (When Equipped With 40-75B / STC
		Wall Wilcel	SA52GL);
E		Main Wheel	T210L s/n all (When Equipped With 40-75B / STC SA52GL);
E		Main Wheel	T210M s/n all (When Equipped With 40-75B / STC SA52GL);
D		Main Wheel	T210N* s/n 21062955 thru 21064135 (When equipped with 40-75B);
D		Main Wheel	T210N* s/n 21064136 thru 21064822 (When equipped with 40-75B);
D		Main Wheel	T210N* s/n 21064823 thru 21064897 (When equipped with 40-142);
D		Main Wheel	T210R s/n all (When equipped with 40-142);
D		Main Wheel	T303 s/n all (When equipped with 40-142);
D		Main Wheel	T303 s/n all (When equipped with 40-142);
D		Aux Wheel	
		Aux Wileel	336* s/n 336-0001 thru 336-0098 (When equipped with 40-55);
D		Main Wheel	336* s/n 336-0001 thru 336-0098 (When equipped with



Rev Part Number MC153-00300	Replaces 153-00300, A39070	<u>Location</u> Main Wheel	Model and Serial Number Range 336* s/n 336-0075 thru 336-0195 (When equipped with
			40-75B);
D		Aux Wheel	336* s/n 336-0099 thru 336-0195 (When equipped with
			40-73 or 40-76A);
D		Aux Wheel	337 s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	337 s/n all (When equipped with 40-96E);
D		Aux Wheel	337A (USAF O2B) s/n all (When equipped with 40-73 or
			40-76A);
D		Main Wheel	337A (USAF O2B) s/n all (When equipped with 40-96E);
D		Aux Wheel	337B s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	337B s/n all (When equipped with 40-96E);
D		Aux Wheel	337C s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	337C s/n all (When equipped with 40-96E);
D		Aux Wheel	337D s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	337D s/n all (When equipped with 40-96E);
D		Aux Wheel	337E s/n all (When equipped with 40-76A);
D		Main Wheel	337E s/n all (When equipped with 40-96E);
D		Main Wheel	337E s/n all (When equipped with 40-98A);
D		Aux Wheel	337F s/n all (When equipped with 40-76A);
D		Main Wheel	337F s/n all (When equipped with 40-96E);
D		Main Wheel	337F s/n all (When equipped with 40-98A);
D		Aux Wheel	337G s/n all (When equipped with 40-76A);
D		Main Wheel	337G s/n all (When equipped with 40-96E);
D		Main Wheel	337G s/n all (When equipped with 40-98A);
D		Aux Wheel	337H s/n all (When equipped with 40-76A);
D		Main Wheel	337H s/n all (When equipped with 40-96E);
D		Main Wheel	337H s/n all (When equipped with 40-98A);
D		Aux Wheel	F337G s/n all (When equipped with 40-76A);
D		Main Wheel	F337G s/n all (When equipped with 40-96E);
D		Main Wheel	F337G s/n all (When equipped with 40-98A);
D		Aux Wheel	F337H s/n all (When equipped with 40-76A);
D		Main Wheel	F337H s/n all (When equipped with 40-96E);
D		Main Wheel	F337H s/n all (When equipped with 40-98A);
D		Aux Wheel	FT337GP (FP337)* s/n FP3370001 thru FP3370007
			(When equipped with 40-73 or 40-76A);
D		Main Wheel	FT337GP (FP337) s/n all (When equipped with 40-96E
			or 40-98A);
D		Main Wheel	FT337HP (FP337H) s/n all (When equipped with 40-96E
			or 40-98A);
D		Aux Wheel	M337B (USAF O2A) s/n all (When equipped with 40-73
			or 40-76A);
D		Main Wheel	M337B (USAF O2A) s/n all (When equipped with
			40-96E);
D		Main Wheel	P337H s/n all (When equipped with 40-96E or 40-98A);
D		Aux Wheel	T337B s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	T337B s/n all (When equipped with 40-96E);



Rev Part Number MC153-00300	Replaces 153-00300, A39070	<u>Location</u> Aux Wheel	Model and Serial Number Range T337C s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	T337C s/n all (When equipped with 40-96E);
D		Aux Wheel	T337D s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	T337D s/n all (When equipped with 40-96E);
D		Aux Wheel	T337E s/n all (When equipped with 40-76A);
D		Main Wheel	T337E s/n all (When equipped with 40-96E);
D		Main Wheel	T337E s/n all (When equipped with 40-98A);
D		Aux Wheel	T337F s/n all (When equipped with 40-76A);
D		Main Wheel	T337F s/n all (When equipped with 40-96E);
D		Main Wheel	T337F s/n all (When equipped with 40-98A);
D		Main Wheel	T337G s/n all (When equipped with 40-96E or 40-98A);
D		Aux Wheel	T337H s/n all (When equipped with 40-76A);
D		Main Wheel	T337H s/n all (When equipped with 40-96E);
D		Main Wheel	T337H s/n all (When equipped with 40-98A);
D		Main Wheel	T337H-SP s/n all (When equipped with 40-96E or 40-98A);
D		Aux Wheel	340A* s/n 340A1001 thru 340A1817 (When equipped with 40-140A);
D		Aux Wheel	401 s/n all (When equipped with D-76A);
D		Aux Wheel	401A s/n all (When equipped with D-76A);
D		Aux Wheel	401B s/n all (When equipped with D-76A);
D		Aux Wheel	402 s/n all (When equipped with D-76A);
D		Aux Wheel	402A s/n all (When equipped with D-76A);
D		Aux Wheel	402B* s/n 402B0001 thru 402B1323 (When equipped with D-76A);
D		Aux Wheel	402C s/n all (When equipped with 40-140A);
D		Aux Wheel	404 s/n all (When equipped with 40-140A);
D		Aux Wheel	406 s/n all (When equipped with 40-140A);
D		Aux Wheel	F406* s/n F406-0001 thru F406-9999 (When equipped
			with 40-140A);
D		Aux Wheel	411 s/n all (When equipped with 40-76A);
D		Aux Wheel	411A s/n all (When equipped with 40-76A);
D		Aux Wheel	414 s/n all (When equipped with 40-140A);
D		Aux Wheel	414A s/n all (When equipped with 40-140A);
D		Aux Wheel	421C s/n all (When equipped with 40-140A);
D		Aux Wheel	425 s/n all (When equipped with 40-140A);
D		Aux Wheel	441 s/n all (When equipped with 40-140A);
E MC153-00400	153-00400, 3022	Main Geer	120 s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Geer	140 s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Geer	140A s/n all (When Equipped With 40-97A / STC SA13GL);
С		Main Wheel	150D s/n all (When equipped with 40-79);
· ·		Main Wheel	150D s/n all (When equipped with 40-79A);



Rev Part Numb		<u>Location</u> Main Wheel	Model and Serial Number Range 150E s/n all (When equipped with 40-79);
c 1010-103-00	193-00400, 3022	Main Wheel	150E s/n all (When equipped with 40-79);
С		Main Wheel	150F s/n all (When equipped with 40-97);
С		Main Wheel	150F s/n all (When equipped with 40-97A);
С		Main Wheel	150G* s/n 15064533 thru 15065809 (When equipped
			with 40-97);
С		Main Wheel	150G s/n all (When equipped with 40-97A);
С		Main Wheel	150H s/n all (When equipped with 40-97A);
С		Main Wheel	150J s/n all (When equipped with 40-97A);
С		Main Wheel	150K s/n all (When equipped with 40-97A);
С		Main Wheel	150L s/n all (When equipped with 40-113);
С		Main Wheel	150M s/n all (When equipped with 40-113);
С		Main Wheel	A150K s/n all (When equipped with 40-97A);
С		Main Wheel	A150L s/n all (When equipped with 40-113);
С		Main Wheel	A150M s/n all (When equipped with 40-113);
С		Main Wheel	F150F s/n all (When equipped with 40-97);
С		Main Wheel	F150F s/n all (When equipped with 40-97A);
С		Main Wheel	F150G* s/n F150-0068 thru F150-0167 (When equipped
			with 40-97);
С		Main Wheel	F150G s/n all (When equipped with 40-97A);
С		Main Wheel	F150H s/n all (When equipped with 40-97A);
С		Main Wheel	F150J s/n all (When equipped with 40-97A);
С		Main Wheel	F150K s/n all (When equipped with 40-97A);
С		Main Wheel	F150L s/n all (When equipped with 40-113);
С		Main Wheel	F150M s/n all (When equipped with 40-113);
С		Main Wheel	FA150K s/n all (When equipped with 40-97A);
С		Main Wheel	FA150L* s/n FA1500082 thru FA1500120 (When equipped with 40-113);
С		Main Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with 40-113);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316) s/n all
			(When equipped with 40-113);
С		Main Wheel	152 s/n all (When equipped with 40-113);
С		Main Wheel	A152 s/n all (When equipped with 40-113);
С		Main Wheel	A152 s/n all (When equipped with D30660-1);
С		Main Wheel	F152 s/n all (When equipped with 40-113);
С		Main Wheel	FA152 s/n all (When equipped with 40-113);
E		Main Geer	170 s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Geer	170A s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Geer	170B s/n all (When Equipped With 40-97A / STC SA13GL);
Е		Main Geer	172 s/n all (When Equipped With 40-97A / STC SA13GL);

Title:	McFarlane Aviation, Inc. 696 East 1700 Road Baldwin City, Kansas									
ridei	ELIGIBILITY: WHEEL SEAL COMPONENTS CESSNA									
Size:	A	Scale:	NA	Drawn:	DPH		Sheet:	16	of	140
Drawing	Drawing Number: 6551							REVISION		
										F

Rev Part Number MC153-00400	Replaces 153-00400, 3022	<u>Location</u> Main Geer	Model and Serial Number Range 172A s/n all (When Equipped With 40-97A / STC
	,,		SA13GL);
E		Main Geer	172B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Geer	172C s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	172D s/n all (When equipped with 40-113);
		Main Wheel	172D s/n all (When equipped with 40-97A);
E		Main Geer	172D s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	172E s/n all (When equipped with 40-113);
		Main Wheel	172E s/n all (When equipped with 40-97A);
E		Main Geer	172E s/n all (When Equipped With 40-97A / STC SA13GL);
		Main Wheel	172F (T-41A) s/n all (When equipped with 40-113);
		Main Wheel	172F (T-41A) s/n all (When equipped with 40-97A);
		Main Wheel	172G s/n all (When equipped with 40-113);
		Main Wheel	172G s/n all (When equipped with 40-97A);
		Main Wheel	172H (T-41A) s/n all (When equipped with 40-113);
		Main Wheel	172H (T-41A) s/n all (When equipped with 40-97A);
		Main Wheel	172I s/n all (When equipped with 40-113);
		Main Wheel	172I s/n all (When equipped with 40-97A);
		Main Wheel	172K s/n all (When equipped with 40-113);
		Main Wheel	172K s/n all (When equipped with 40-97A);
		Main Wheel	172L s/n all (When equipped with 40-113);
		Main Wheel	172L s/n all (When equipped with 40-97A);
		Main Wheel	172M* s/n 17260759 thru 17263458 (When equipped
			with 40-113);
		Main Wheel	172M* s/n 17260759 thru 17263458 (When equipped
		Main What	with 40-97A);
		Main Wheel	172M* s/n 17263459 thru 17267584 (When equipped
		Main Wheel	with 40-113);
		Main Wheel Main Wheel	172N s/n all (When equipped with 40-113);
		Main Wheel	172P s/n all (When equipped with 40-113); 172Q s/n all (When equipped with 40-113);
		Main Wheel	172R s/n all (When equipped with 40-113);
		Main Wheel	172RG s/n all (When equipped with 40-113);
		Main Wheel	172S s/n all (When equipped with 40-113);
		Main Wheel	F172D s/n all (When equipped with 40-113);
		Main Wheel	F172D s/n all (When equipped with 40-97A);
		Main Wheel	F172B s/n all (When equipped with 40-97A);
		Main Wheel	F172E s/n all (When equipped with 40-97A);
		Main Wheel	F172E 3/1 all (When equipped with 40-31A);
		Main Wheel	F172F s/n all (When equipped with 40-97A);
		Main Wheel	F172G s/n all (When equipped with 40-113);
		Main Wheel	F172G s/n all (When equipped with 40-97A);
		William William	20 on all (triton oquipped with 40 orry,
l .			



Rev Part Number MC153-00400	Replaces 153-00400, 3022	<u>Location</u> Main Wheel	Model and Serial Number Range F172H* s/n F172-0320 thru F172-0654 (When equipped
			with 40-113);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped
			with 40-97A);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
			with 40-113);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
			with 40-97A);
		Main Wheel	F172K s/n all (When equipped with 40-113);
		Main Wheel	F172K s/n all (When equipped with 40-97A);
		Main Wheel	F172L s/n all (When equipped with 40-113);
		Main Wheel	F172L s/n all (When equipped with 40-97A);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
			with 40-113);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
			with 40-97A);
		Main Wheel	F172M* s/n F17201235 thru F17201514 (When equipped
			with 40-113);
		Main Wheel	F172N s/n all (When equipped with 40-113);
		Main Wheel	F172P s/n all (When equipped with 40-113);
		Main Wheel	FP172 s/n all (When equipped with 40-113);
		Main Wheel	FP172 s/n all (When equipped with 40-97A);
		Main Wheel	FR172E s/n all (When equipped with 40-113);
		Main Wheel	FR172E s/n all (When equipped with 40-97A);
		Main Wheel	FR172F s/n all (When equipped with 40-113);
		Main Wheel	FR172F s/n all (When equipped with 40-97A);
		Main Wheel	FR172G s/n all (When equipped with 40-113);
		Main Wheel	FR172G s/n all (When equipped with 40-97A);
		Main Wheel Main Wheel	FR172H s/n all (When equipped with 40-113);
		Main Wheel	FR172H s/n all (When equipped with 40-97A); FR172J s/n all (When equipped with 40-113);
		Main Wheel	FR172J s/n all (When equipped with 40-97A);
		Main Wheel	FR172K s/n all (When equipped with 40-113);
		Main Wheel	P172D s/n all (When equipped with 40-113);
		Main Wheel	P172D s/n all (When equipped with 40-97A);
E		Main Geer	P172D s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-113);
		Main Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-97A);
		Main Wheel	R172F (T-41D) s/n all (When equipped with 40-113);
		Main Wheel	R172F (T-41D) s/n all (When equipped with 40-97A);
		Main Wheel	R172G (T-41C,D) s/n all (When equipped with 40-113);
		Main Wheel	R172G (T-41C,D) s/n all (When equipped with 40-97A);
		Main Wheel	R172H (T-41D) s/n all (When equipped with 40-113);
		Main Wheel	R172H (T-41D) s/n all (When equipped with 40-97A);
		Main Wheel	R172K s/n all (When equipped with 40-113);
		Г	■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■
			MCFarlane 696 East 1700 Road Baldwin City, Kansas



Rev Part Number MC153-00400	Replaces 153-00400, 3022	<u>Location</u> Main Geer	Model and Serial Number Range 175 s/n all (When Equipped With 40-97A / STC
	100 00 100, 0022	Main Cool	SA13GL);
E		Main Geer	175A s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Geer	175B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Geer	175C s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	177 s/n all (When equipped with 40-97A);
		Main Wheel	177A s/n all (When equipped with 40-97A);
		Main Wheel	177B* s/n 17701371 thru 17701530 (When equipped with 40-97A);
		Main Wheel	177B* s/n 17701531 thru 17702752 (When equipped with
			40-113);
		Main Wheel	177RG s/n all (When equipped with 40-113);
		Main Wheel	F177RG s/n all (When equipped with 40-113);
E		Main Geer	180 s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Geer	180 s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Geer	180 s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Geer	180A s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Geer	180A s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Geer	180A s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Geer	180B s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Geer	180B s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Geer	180B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Geer	180C s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Geer	180C s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Geer	180C s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Geer	180D s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Geer	180D s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Geer	180D s/n all (When Equipped With 40-97A / STC SA13GL);
			//



Rev Part Number MC153-00400	Replaces 153-00400, 3022	<u>Location</u> Main Geer	Model and Serial Number Range 180E s/n all (When Equipped With 40-75B / STC
WIG 100 00 100	100 00 100, 0022	Wall Gool	SA62GL);
E		Main Geer	180E s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Geer	180E s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Geer	180F s/n all (When Equipped With 40-75B / STC
_			SA62GL);
E		Main Geer	180F s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Geer	180F s/n all (When Equipped With 40-97A / STC
		Main 300i	SA13GL);
D		Main Wheel	180G s/n all (When equipped with 40-75 or 40-75B);
E		Main Geer	180G s/n all (When Equipped With 40-75D or 40-75T/
			STC SA63GL);
D		Main Wheel	180H s/n all (When equipped with 40-75 or 40-75B);
E		Main Geer	180H s/n all (When Equipped With 40-75B / STC
_			SA62GL);
E		Main Geer	180H s/n all (When Equipped With 40-75D or 40-75T /
D		Main Wheel	STC SA63GL);
		Main Wheel	180H* s/n 18052011 thru 18052284 (When equipped with 40-75D):
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When Equipped
			With 40-75B / STC SA62GL);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
			40-75D);
E		Main Geer	180J* s/n 18052285 thru 18052384 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
D		Main Wheel	40-75B); 180J* s/n 18052385 thru 18052770 (When equipped with
		Main Wilcon	40-75D);
E		Main Geer	180J* s/n 18052385 thru 18052770 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	180K s/n all (When equipped with 40-75B);
D E		Main Wheel	180K s/n all (When equipped with 40-75D);
_ E		Main Geer	180K s/n all (When Equipped With 40-75D or 40-75T /
E		Main Geer	STC SA63GL); 182 s/n all (When Equipped With 40-97A / STC
		Wall Occi	SA13GL);
E		Main Geer	182A s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Geer	182B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Geer	182C s/n all (When Equipped With 40-97A / STC
			SA13GL);
İ			



Day Day No. 1	Danis	1 4: -	Madaland Oscial Novahan D
Rev Part Number MC153-00400	<u>Replaces</u> 153-00400, 3022	<u>Location</u> Main Geer	Model and Serial Number Range
- IVIC 155-00400	155-00400, 3022	Main Geel	182D s/n all (When Equipped With 40-97A / STC
E		Main Coor	SA13GL);
_		Main Geer	182E s/n all (When Equipped With 40-97A / STC
E			SA13GL);
_		Main Geer	182F s/n all (When Equipped With 40-97A / STC
_			SA13GL);
E		Main Geer	182G s/n all (When Equipped With 40-97A / STC
			SA13GL);
D		Main Wheel	182H s/n all (When equipped with 40-97A);
D		Main Wheel	182J s/n all (When equipped with 40-97A);
D		Main Wheel	182K s/n all (When equipped with 40-97A);
D		Main Wheel	182L s/n all (When equipped with 40-97A);
D		Main Wheel	182M s/n all (When equipped with 40-97A);
D		Main Wheel	182N* s/n 18260056 thru 18260445 (When equipped with
			40-97A);
D		Main Wheel	182N* s/n 18260446 thru 18260825 (When equipped with
			40-113);
D		Main Wheel	182P* s/n 18260826 thru 18262465 (When equipped with
			40-113);
D		Main Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
			40-113);
D		Main Wheel	182Q s/n all (When equipped with 40-113);
D		Main Wheel	182S s/n all (When equipped with 40-75B);
D		Main Wheel	182T s/n all (When equipped with 40-75B);
D		Main Wheel	A182J s/n all (When equipped with 40-97A);
D		Main Wheel	A182K s/n all (When equipped with 40-97A);
D		Main Wheel	A182L s/n all (When equipped with 40-97A);
D		Main Wheel	A182N* s/n A182-0117 thru A182-0136 (When equipped
			with 40-97A);
D		Main Wheel	A182N* s/n A182-0137 thru A182-0148 (When equipped
			with 40-113);
D		Main Wheel	F182P s/n all (When equipped with 40-113);
D		Main Wheel	F182Q s/n all (When equipped with 40-113);
D		Main Wheel	T182T s/n all (When equipped with 40-75B);
E		Main Geer	185 s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Geer	185 s/n all (When Equipped With 40-75D or 40-75T /
		Maii Cool	STC SA63GL);
E		Main Geer	185A s/n all (When Equipped With 40-75B / STC
		Wall Occi	SA62GL);
E		Main Geer	185A s/n all (When Equipped With 40-75D or 40-75T /
		Maii Occi	STC SA63GL);
E		Main Geer	
		IVIAIII GEEI	185B s/n all (When Equipped With 40-75B / STC
E		Main Coor	SA62GL);
=		Main Geer	185B s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
1			

McFarlane •					696	arlane Av East 170 Iwin City,	0 Road			
Title:	Title: ELIGIBILITY: WHEEL SEAL COMPONENTS CESSNA									
Size:	A	Scale:	NA	Drawn:	DPH		Sheet:	21	of	140
Drawin	Drawing Number: 6551							REVISION		
										Г

Rev Part Number MC153-00400	Replaces 153-00400, 3022	<u>Location</u> Main Wheel	Model and Serial Number Range 185C s/n all (When equipped with 40-75 or 40-75B);
E		Main Geer	185C s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	185D s/n all (When equipped with 40-75 or 40-75B);
E		Main Geer	185D s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	185E s/n all (When equipped with 40-75 or 40-75B);
E		Main Geer	185E s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Wheel	A185E* s/n 185-0968 thru 185-1599 (When Equipped
			With 40-75B / STC SA62GL);
E		Main Geer	A185E* s/n 185-0968 thru 185-1599 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	A185E* s/n 185-1471 thru 185-1599 (When equipped with 40-75D);
E		Main Wheel	A185E* s/n 18501600 thru 18502090 (When Equipped
			With 40-75B / STC SA62GL);
D		Main Wheel	A185E* s/n 18501600 thru 18502090 (When equipped
			with 40-75D);
E		Main Geer	A185E* s/n 18501600 thru 18502090 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
E		Main Wheel	A185F* s/n 18502091 thru 18502310 (When Equipped
			With 40-75B / STC SA62GL);
D		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
			with 40-75D);
E		Main Geer	A185F* s/n 18502091 thru 18502310 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	A185F* s/n 18502311 thru 18504448 (When equipped
			with 40-75B);
D		Main Wheel	A185F* s/n 18502311 thru 18504448 (When equipped
			with 40-75D);
D D		Main Wheel	188 s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	188A s/n all (When equipped with 40-75B);
D		Main Wheel	188B s/n all (When equipped with 40-75B);
D		Main Wheel	188B s/n all (When equipped with 40-98A);
D		Main Wheel	A188 s/n all (When equipped with 40-75B);
D		Main Wheel	A188A s/n all (When equipped with 40-75B);
		Main Wheel	A188B* s/n 18800833 thru 18802348 (When equipped
D		Main Wheel	with 40-75B);
_		IVIAIII VVIIEEI	A188B* s/n 18800833 thru 18802348 (When equipped
D		Main Wheel	with 40-98A); A188B* s/n 18802349 thru 18803973 (When equipped
		IVIAIII VVIICCI	` ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' ' '
D		Main Wheel	with 40-98A); A-188B s/n all (When equipped with 40-75B);
D		Main Wheel	A-188B s/n all (When equipped with 40-98A);
		Mail Milee	7. 1000 3/11 all (Which equipped with 40-30/1),



D D (N)			
Rev Part Number MC153-00400	Replaces 153-00400, 3022	<u>Location</u> Main Wheel	Model and Serial Number Range
WC 133-00400	133-00400, 3022	IVIAIII VVIICEI	A188B (w/ large hopper)* s/n 18800833T thru 18802348T (When equipped with 40-75B);
D		Main Wheel	,
		IVIAIII VVIICEI	A188B (w/ large hopper)* s/n 18800833T thru 18802348T
D		Main Wheel	(When equipped with 40-98A);
		IVIAIII VVIICEI	A188B (w/ large hopper)* s/n 18802349T thru 18803973T
D		Main Wheel	(When equipped with 40-98A); A-A188B s/n all (When equipped with 40-75B);
D		Main Wheel	A-A188B s/n all (When equipped with 40-98A);
D		Main Wheel	T188C s/n all (When equipped with 40-98A);
D D		Main Wheel	
D D		Main Wheel	210-5A (205A) s/n all (When equipped with 40-75); 210-5A (205A) s/n all (When equipped with 40-75B);
D			
D		Main Wheel Main Wheel	206 s/n all (When equipped with 40-75B);
E			206 s/n all (When equipped with 40-75D);
		Main Geer	206 s/n all (When Equipped With 40-75D or 40-75T /
D		Main Wheel	STC SA63GL);
D		Main Wheel	206H s/n all (When equipped with 40-75B);
D		Main Wheel	206H s/n all (When equipped with 40-75D);
D		Main Wheel	P206 s/n all (When equipped with 40-75B);
E		Main Wheel	P206 s/n all (When equipped with 40-75D);
		Main Geer	P206 s/n all (When Equipped With 40-75D or 40-75T /
D		NA = : NA/I= = = I	STC SA63GL);
D		Main Wheel	P206A s/n all (When equipped with 40-75B);
D		Main Wheel	P206A s/n all (When equipped with 40-75D);
D		Main Wheel	P206B s/n all (When equipped with 40-75B);
D		Main Wheel	P206B s/n all (When equipped with 40-75D);
D		Main Wheel	P206C s/n all (When equipped with 40-75B);
D		Main Wheel	P206C s/n all (When equipped with 40-75D);
D		Main Wheel	P206D s/n all (When equipped with 40-75B);
D		Main Wheel	P206D s/n all (When equipped with 40-75D);
D		Main Wheel	P206E s/n all (When equipped with 40-75B);
D		Main Wheel	P206E s/n all (When equipped with 40-75D);
D		Main Wheel	T206H s/n all (When equipped with 40-75B);
D		Main Wheel	T206H s/n all (When equipped with 40-75D);
D		Main Wheel	TP206A s/n all (When equipped with 40-75B);
D		Main Wheel	TP206A s/n all (When equipped with 40-75D);
D		Main Wheel	TP206B s/n all (When equipped with 40-75B);
		Main Wheel	TP206B s/n all (When equipped with 40-75D);
D		Main Wheel	TP206C s/n all (When equipped with 40-75B);
D		Main Wheel	TP206C s/n all (When equipped with 40-75D);
D		Main Wheel	TP206D s/n all (When equipped with 40-75B);
D		Main Wheel	TP206D s/n all (When equipped with 40-75D);
D		Main Wheel	TP206E s/n all (When equipped with 40-75D);
D		Main Wheel	TU206A s/n all (When equipped with 40-75B);
D		Main Wheel	TU206A s/n all (When equipped with 40-75D);
D		Main Wheel	TU206B s/n all (When equipped with 40-75B);
D		Main Wheel	TU206B s/n all (When equipped with 40-75D);
I .			



Rev Part Number MC153-00400	Replaces 153-00400, 3022	<u>Location</u> Main Wheel	Model and Serial Number Range TU206C s/n all (When equipped with 40-75B);
D IVIC 155-00400	155-00400, 5022	Main Wheel	TU206C s/n all (When equipped with 40-75D);
D		Main Wheel	TU206D s/n all (When equipped with 40-75B);
D		Main Wheel	TU206D s/n all (When equipped with 40-75D);
D		Main Wheel	
		Maiii Wileei	TU206E s/n all (When equipped with 40-75B / STC
D		Main Wheel	SA62GL); TU206E s/n all (When equipped with 40-75D);
E		Main Geer	TU206E s/n all (When Equipped With 40-75D or 40-75T /
		Main Geel	STC SA63GL);
D		Main Wheel	TU206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75B / STC SA62GL);
D		Main Wheel	TU206F* s/n U20601701 thru U20602199 (When
			equipped with 40-75D);
E		Main Geer	TU206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-75B / STC SA62GL);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-75D);
D		Main Wheel	TU206G s/n all (When equipped with 40-75B);
D		Main Wheel	TU206G s/n all (When equipped with 40-75D);
E		Main Geer	TU206G s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	U206 s/n all (When equipped with 40-75B);
D		Main Wheel	U206 s/n all (When equipped with 40-75D);
E		Main Geer	U206 s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	U206A s/n all (When equipped with 40-75B);
D		Main Wheel	U206A s/n all (When equipped with 40-75D);
D		Main Wheel	U206B s/n all (When equipped with 40-75B);
D		Main Wheel	U206B s/n all (When equipped with 40-75D);
D		Main Wheel	U206C s/n all (When equipped with 40-75B);
D		Main Wheel	U206C s/n all (When equipped with 40-75D);
D		Main Wheel	U206D s/n all (When equipped with 40-75B);
D		Main Wheel	U206D s/n all (When equipped with 40-75D);
D		Main Wheel	U206E s/n all (When equipped with 40-75B / STC
D		Main Wheel	SA62GL); U206E s/n all (When equipped with 40-75D);
D		Main Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
			with 40-75B / STC SA62GL);
D		Main Wheel	U206F* s/n U20601701 thru U20602199 (When equipped with 40-75D);
E		Main Geer	U206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with 40-75B / STC SA62GL);
1			



Rev Part Number	Replaces	Location	Model and Serial Number Range
^D MC153-00400	153-00400, 3022	Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with 40-75D);
D		Main Wheel	U206G s/n all (When equipped with 40-75B);
D		Main Wheel	U206G s/n all (When equipped with 40-75D);
E		Main Geer	U206G s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	207 s/n all (When equipped with 40-75B);
D		Main Wheel	207 s/n all (When equipped with 40-75D);
D		Main Wheel	207A s/n all (When equipped with 40-75B);
D		Main Wheel	207A s/n all (When equipped with 40-75D);
D		Main Wheel	T207 s/n all (When equipped with 40-75B);
D		Main Wheel	T207 s/n all (When equipped with 40-75D);
D		Main Wheel	T207A s/n all (When equipped with 40-75B);
D		Main Wheel	T207A s/n all (When equipped with 40-75D);
E		Main Geer	210 s/n all (When Equipped With 40-75B / STC
_			SA52GL);
E		Main Geer	210A s/n all (When Equipped With 40-75B / STC SA52GL);
E		Main Geer	210B s/n all (When Equipped With 40-75B / STC
			SA52GL);
E		Main Geer	210C s/n all (When Equipped With 40-75B / STC
			SA52GL);
D		Main Wheel	210D s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	210E s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	210F s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	210G s/n all (When equipped with 40-75B);
D		Main Wheel	210H s/n all (When equipped with 40-75B);
D		Main Wheel	210J s/n all (When equipped with 40-75B);
D		Main Wheel	210K s/n all (When equipped with 40-75B);
E		Main Geer	210K s/n all (When Equipped With 40-75B / STC
E		Main Wheel	SA52GL);
_		Main Wheel	210L s/n all (When Equipped With 40-75B / STC SA52GL);
E		Main Wheel	210M s/n all (When Equipped With 40-75B / STC
			SA52GL);
D		Main Wheel	210N* s/n 21062955 thru 21064135 (When equipped with
			40-75B);
D		Main Wheel	210N* s/n 21064136 thru 21064822 (When equipped with
			40-75B);
D		Main Wheel	210N* s/n 21064823 thru 21064897 (When equipped with
			40-142);
D		Main Wheel	210R s/n all (When equipped with 40-142);
D		Main Wheel	P210N s/n all (When equipped with 40-142);
E		Main Wheel	P210N s/n all (When Equipped With 40-75B / STC
		man Tilloo	SA52GL);
D		Main Wheel	P210R s/n all (When equipped with 40-142);



Rev Part Number MC153-00400	Replaces	<u>Location</u>	Model and Serial Number Range
^D MC153-00400	153-00400, 3022	Main Wheel	P210R s/n all (When equipped with 40-75B);
D D		Main Wheel	T210F s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	T210G s/n all (When equipped with 40-75B);
		Main Wheel	T210H s/n all (When equipped with 40-75B);
		Main Wheel	T210J s/n all (When equipped with 40-75B);
Ē		Main Wheel	T210K s/n all (When Equipped With 40-75B / STC SA52GL);
į		Main Wheel	T210L s/n all (When Equipped With 40-75B / STC SA52GL);
		Main Wheel	T210M s/n all (When Equipped With 40-75B / STC SA52GL);
		Main Wheel	T210N* s/n 21062955 thru 21064135 (When equipped with 40-75B);
		Main Wheel	T210N* s/n 21064136 thru 21064822 (When equipped
			with 40-75B);
		Main Wheel	T210N* s/n 21064823 thru 21064897 (When equipped with 40-142);
		Main Wheel	T210R s/n all (When equipped with 40-142);
		Main Wheel	T303 s/n all (When equipped with 40-142);
		Main Wheel	T303 s/n all (When equipped with 40-98H);
		Main Wheel	336* s/n 336-0075 thru 336-0195 (When equipped with 40-75B);
		Main Wheel	337 s/n all (When equipped with 40-96E);
		Main Wheel	337A (USAF O2B) s/n all (When equipped with 40-96E)
		Main Wheel	337B s/n all (When equipped with 40-96E);
		Main Wheel	337C s/n all (When equipped with 40-96E);
		Main Wheel	337D s/n all (When equipped with 40-96E);
		Main Wheel	337E s/n all (When equipped with 40-96E);
		Main Wheel	337E s/n all (When equipped with 40-98A);
		Main Wheel	337F s/n all (When equipped with 40-96E);
		Main Wheel	337F s/n all (When equipped with 40-98A);
		Main Wheel	337G s/n all (When equipped with 40-96E);
		Main Wheel	337G s/n all (When equipped with 40-98A);
		Main Wheel	337H s/n all (When equipped with 40-96E);
		Main Wheel	337H s/n all (When equipped with 40-98A);
		Main Wheel	F337G s/n all (When equipped with 40-96E);
		Main Wheel	F337G s/n all (When equipped with 40-98A);
		Main Wheel	F337H s/n all (When equipped with 40-96E);
		Main Wheel	F337H s/n all (When equipped with 40-98A);
		Main Wheel	FT337GP (FP337) s/n all (When equipped with 40-96E
			or 40-98A);
		Main Wheel	FT337HP (FP337H) s/n all (When equipped with 40-96E or 40-98A);
•		Main Wheel	M337B (USAF O2A) s/n all (When equipped with 40-96E);
		Main Wheel	P337H s/n all (When equipped with 40-96E or 40-98A);



	Part Number	Donloos		
D D		Replaces 153-00400, 3022	<u>Location</u> Main Wheel	Model and Serial Number Range T337B s/n all (When equipped with 40-96E);
D	MC153-00400	100-00400, 3022	Main Wheel	T337C s/n all (When equipped with 40-96E);
			Main Wheel	T337D s/n all (When equipped with 40-96E);
			Main Wheel	T337E s/n all (When equipped with 40-96E);
D			Main Wheel	T337E s/n all (When equipped with 40-98A);
D			Main Wheel	T337F s/n all (When equipped with 40-96E);
- D				
D			Main Wheel	T337F s/n all (When equipped with 40-98A);
D			Main Wheel	T337G s/n all (When equipped with 40-96E or 40-98A);
D			Main Wheel	T337H s/n all (When equipped with 40-96E);
D			Main Wheel	T337H s/n all (When equipped with 40-98A);
_			Main Wheel	T337H-SP s/n all (When equipped with 40-96E or 40-98A);
E	MC153-00500	153-00500, B39094	Main Wheel	150C s/n all (When equipped with 40-57A);
F		100 00000, 000007	Main Wheel	180H* s/n 18051775 thru 18051993 (When equipped with
				40-66);
)			Main Wheel	185 s/n all (When equipped with 40-32);
)			Main Wheel	185A s/n all (When equipped with 40-32);
•			Main Wheel	185B s/n all (When equipped with 40-66);
•			Main Wheel	A185E* s/n 185-1150 thru 185-1447 (When equipped
				with 40-66);
0			Main Wheel	210-5 (205) s/n all (When equipped with 40-67);
)			Main Wheel	210C s/n all (When equipped with 40-21);
)			Main Wheel	336* s/n 336-0001 thru 336-0098 (When equipped with
				40-67);
:	MC153-00800	153-00800,	Main Wheel	150A s/n 15059019 thru 15059350 (When equipped with
		153-30048, 153-8,		40-12);
		A30048		
С			Main Wheel	150A s/n 15059019 thru 15059350 (When equipped with
				40-18);
3			Main Wheel	150B s/n 15059351 thru 15059700 (When equipped with
				40-12);
:			Main Wheel	150B s/n 15059351 thru 15059700 (When equipped with
				40-18);
			Main Wheel	150C s/n all (When equipped with 40-19);
;			Aux Wheel	150C* s/n 15059711 thru 15060087 (When equipped with
:			Aux Wheel	40-20); 150C* s/n 15059711 thru 15060087 (When equipped with
			AUN VVIIGGI	40-77);
:			Aux Wheel	40-77), 150D s/n all (When equipped with 40-77);
;			Main Wheel	150D s/n all (When equipped with 40-77);
;			Aux Wheel	150E s/n all (When equipped with 40-76);
			Main Wheel	
;				150E s/n all (When equipped with 40-78);
			Aux Wheel	150F s/n all (When equipped with 40-77);
С			Aux Wheel	150G s/n all (When equipped with 40-77);
с с с			Aux Wheel	150H s/n all (When equipped with 40-77);



Rev Part Number MC153-00800	Replaces	Location Aux Wheel	Model and Serial Number Range 150J s/n all (When equipped with 40-77);
- IVIC 155-00000	153-00800,	Aux Wileel	1503 S/II all (When equipped with 40-77),
	153-30048, 153-8, A30048		
С		Aux Wheel	150K s/n all (When equipped with 40-77);
С		Aux Wheel	150L s/n all (When equipped with 40-77);
С		Aux Wheel	150L s/n all (When equipped with D30500);
С		Aux Wheel	150M* s/n 15075782 thru 15077813 (When equipped with D30500);
С		Aux Wheel	150M s/n all (When equipped with 40-77);
С		Aux Wheel	150M* s/n 15077814 thru 15078321 (When equipped
		7.47. 77.100.	with C30480);
С		Aux Wheel	150M* s/n 15078322 thru 15079405 (When equipped with D30500);
С		Aux Wheel	A150K s/n all (When equipped with 40-77);
С		Aux Wheel	A150L s/n all (When equipped with 40-77);
С		Aux Wheel	A150L s/n all (When equipped with D30500);
С		Aux Wheel	A150M* s/n A1500524 thru A1500653 (When equipped
			with D30500);
С		Aux Wheel	A150M s/n all (When equipped with 40-77);
С		Aux Wheel	A150M* s/n A1500651 thru A1500675 (When equipped
			with C30480);
С		Aux Wheel	A150M* s/n A1500673 thru A1500734 (When equipped with D30500);
С		Aux Wheel	F150F s/n all (When equipped with 40-77);
С		Aux Wheel	F150G s/n all (When equipped with 40-77);
С		Aux Wheel	F150H s/n all (When equipped with 40-77);
С		Aux Wheel	F150J s/n all (When equipped with 40-77);
С		Aux Wheel	F150K s/n all (When equipped with 40-77);
С		Aux Wheel	F150L s/n all (When equipped with 40-77);
С		Aux Wheel	F150L s/n all (When equipped with D30500);
С		Aux Wheel	F150M* s/n F15001144 thru F15001300 (When equipped
С		A 14/1 I	with D30500);
C		Aux Wheel	F150M s/n all (When equipped with 40-77);
C		Aux Wheel	F150M* s/n F15001301 thru F15001378 (When equipped with C30480);
С		Aux Wheel	F150M* s/n F15001379 thru F15001428 (When equipped with D30500);
c		Aux Wheel	FA150K s/n all (When equipped with 40-77);
c		Aux Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
		Aux Wilcoi	equipped with 40-77);
С		Aux Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
		AGA TTIOOI	equipped with D30500);
С		Aux Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
			40-77);



Rev Part Number MC153-00800	Replaces 153-00800,	<u>Location</u> Aux Wheel	Model and Serial Number Range FA150L (with FKA150-2311 and FKA150-2316)* s/n
	153-30048, 153-8,	7.67. 7.1.00.	FA1500121 thru FA1500261 (When equipped with
	A30048		D30500);
С		Aux Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500262 thru FA1500300 (When equipped with
			D30500);
С		Aux Wheel	FA150M (with FKA150-2311 and FKA150-2316) s/n all
			(When equipped with 40-77);
С		Aux Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500301 thru FA1500317 (When equipped with
			C30480);
С		Aux Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500318 thru FA1500336 (When equipped with
			D30500);
С		Aux Wheel	152 s/n all (When equipped with 40-77);
c c		Aux Wheel	152 s/n all (When equipped with D30500);
C		Aux Wheel	A152 s/n all (When equipped with 40-77);
C		Aux Wheel	A152 s/n all (When equipped with D30500);
C		Aux Wheel	F152 s/n all (When equipped with 40-77);
C		Aux Wheel	F152 s/n all (When equipped with D30500);
C		Aux Wheel	FA152 s/n all (When equipped with 40-77);
C		Aux Wheel Aux Wheel	FA152 s/n all (When equipped with D30500);
C		Aux Wheel	172* s/n 46421 thru 46754 (When equipped with 40-18); 172* s/n 46421 thru 46754 (When equipped with 40-77);
С		Aux Wheel	172 s/n all (When equipped with 40-18);
С		Aux Wheel	172A s/n all (When equipped with 40-77);
С		Aux Wheel	172B s/n all (When equipped with 40-18);
С		Aux Wheel	172B s/n all (When equipped with 40-77);
С		Aux Wheel	172C s/n all (When equipped with 40-18);
С		Aux Wheel	172C s/n all (When equipped with 40-77);
		Nose Wheel	172F (T-41A) s/n all (When equipped with 40-77);
		Aux Wheel	172G s/n all (When equipped with 40-77);
		Nose Wheel	172H (T-41A) s/n all (When equipped with 40-77);
		Nose Wheel	172I s/n all (When equipped with 40-77);
		Nose Wheel	172K s/n all (When equipped with 40-77);
		Nose Wheel	172L s/n all (When equipped with 40-77);
		Nose Wheel	172M* s/n 17260759 thru 17263458 (When equipped with 40-77);
		Nose Wheel	172M* s/n 17260835 thru 17263458 (When equipped
		11000 1111001	with D-30500);
		Aux Wheel	172M* s/n 17263459 thru 17266562 (When equipped
			with D-30500);
		Aux Wheel	172M* s/n 17263459 thru 17267584 (When equipped
			with 40-77);
С		Aux Wheel	172M* s/n 17266563 thru 17267200 (When equipped
			with C30480);
			•
1			



Rev Part Number	Replaces	<u>Location</u>	Model and Serial Number Range
^c MC153-00800	153-00800,	Aux Wheel	172M* s/n 17267201 thru 17267584 (When equipped
	153-30048, 153-8,		with D-30500);
	A30048		
		Aux Wheel	172N s/n all (When equipped with 40-77);
		Aux Wheel	172N s/n all (When equipped with D-30500);
		Aux Wheel	172P s/n all (When equipped with 40-77);
		Aux Wheel	172P s/n all (When equipped with D-30500);
		Aux Wheel	172Q s/n all (When equipped with 40-77);
		Aux Wheel	172Q s/n all (When equipped with D-30500);
		Aux Wheel	172R s/n all (When equipped with 40-77);
		Aux Wheel	172RG s/n all (When equipped with 40-77);
		Aux Wheel	172RG s/n all (When equipped with D-30500);
		Aux Wheel	172S s/n all (When equipped with 40-77);
		Nose Wheel	F172F s/n all (When equipped with 40-77);
		Nose Wheel	F172G s/n all (When equipped with 40-77);
		Nose Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped
			with 40-77);
		Nose Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
			with 40-77);
		Nose Wheel	F172K s/n all (When equipped with 40-77);
		Nose Wheel	F172L s/n all (When equipped with 40-77);
		Nose Wheel	F172L* s/n F17200901 thru F17200904 (When equipped
			with D-30500);
		Aux Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
			with 40-77);
		Aux Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
			with D-30500);
		Aux Wheel	F172M* s/n F17201235 thru F17201481 (When equipped
			with D-30500);
		Aux Wheel	F172M* s/n F17201235 thru F17201514 (When equipped
			with 40-77);
С		Aux Wheel	F172M* s/n F17201482 thru F17201514 (When equipped
			with C30480);
		Aux Wheel	F172N s/n all (When equipped with 40-77);
		Aux Wheel	F172N s/n all (When equipped with D-30500);
		Aux Wheel	F172P s/n all (When equipped with 40-77);
		Aux Wheel	F172P s/n all (When equipped with D-30500);
		Aux Wheel	FR172E s/n all (When equipped with 40-77);
		Aux Wheel	FR172E s/n all (When equipped with D-30500);
		Aux Wheel	FR172F s/n all (When equipped with 40-77);
		Aux Wheel	FR172F s/n all (When equipped with D-30500);
		Aux Wheel	FR172G s/n all (When equipped with 40-77);
		Aux Wheel	FR172G s/n all (When equipped with D-30500);
		Aux Wheel	FR172H s/n all (When equipped with 40-77);
		Aux Wheel	FR172H s/n all (When equipped with D-30500);
		Aux Wheel	FR172J s/n all (When equipped with 40-77);



Rev Part Number MC153-00800	Replaces 153-00800,	<u>Location</u> Aux Wheel	Model and Serial Number Range FR172J s/n all (When equipped with D-30500);
100 100 00000	153-30048, 153-8,	AUX WIICCI	Treating of the control of the contr
	A30048		
		Aux Wheel	FR172K s/n all (When equipped with 40-77);
		Aux Wheel	FR172K s/n all (When equipped with D-30500);
		Aux Wheel	R172K s/n all (When equipped with 40-77);
		Aux Wheel	R172K s/n all (When equipped with D-30500);
С		Aux Wheel	175* s/n 55876 thru 56238 (When equipped with 40-18);
С		Aux Wheel	175* s/n 55876 thru 56238 (When equipped with 40-77);
С		Aux Wheel	175A s/n all (When equipped with 40-18);
С		Aux Wheel	175A s/n all (When equipped with 40-77);
С		Aux Wheel	175B s/n all (When equipped with 40-18);
С		Aux Wheel	175B s/n all (When equipped with 40-77);
С		Aux Wheel	175C s/n all (When equipped with 40-18);
С		Aux Wheel	175C s/n all (When equipped with 40-77);
		Aux Wheel	177 s/n all (When equipped with 40-77);
		Aux Wheel	177 s/n all (When equipped with D-30500);
		Aux Wheel	177A s/n all (When equipped with 40-77);
		Aux Wheel	177B s/n all (When equipped with 40-77);
		Aux Wheel	177B* s/n 17701774 thru 17702251 (When equipped with
			D-30500);
С		Aux Wheel	177B* s/n 17702252 thru 17702491 (When equipped with C-30480);
		Aux Wheel	177B* s/n 17702492 thru 17702752 (When equipped with D-30500);
		Aux Wheel	177RG s/n all (When equipped with 40-77);
		Aux Wheel	177RG* s/n 177RG0274 thru 177RG0641 (When
			equipped with D-30500);
		Aux Wheel	177RG* s/n 177RG0642 thru 177RG0911 (When
			equipped with C-30480);
		Aux Wheel	177RG* s/n 177RG0912 thru 177RG1366 (When
			equipped with D-30500);
		Aux Wheel	F177RG s/n all (When equipped with 40-77);
		Aux Wheel	F177RG* s/n F177RG0154 thru F177RG0177 (When
			equipped with D-30500);
D		Aux Wheel	182B* s/n 51887 thru 52358 (When equipped with 40-77
			or 40-35);
D		Aux Wheel	182C s/n all (When equipped with 40-77 or 40-35);
D		Aux Wheel	182D s/n all (When equipped with 40-77 or 40-35);
D		Aux Wheel	182E s/n all (When equipped with 40-35);
D		Aux Wheel	182E s/n all (When equipped with 40-77);
D		Aux Wheel	182H s/n all (When equipped with 40-77);
D		Aux Wheel	182J s/n all (When equipped with 40-77);
D		Aux Wheel	182K s/n all (When equipped with 40-77);
D		Aux Wheel	182L s/n all (When equipped with 40-77);
D		Aux Wheel	182M s/n all (When equipped with 40-77);
1			



Rev Part Number	Replaces	Location	Model and Serial Number Range
D MC153-00800	153-00800,	Aux Wheel	182N s/n all (When equipped with 40-77);
	153-30048, 153-8,		
	A30048		
D		Aux Wheel	182P* s/n 18260826 thru 18262465 (When equipped with
			40-77);
D		Aux Wheel	182P* s/n 18261299 thru 18262465 (When equipped with
			D-30500);
D		Aux Wheel	182P* s/n 18262466 thru 18264743 (When equipped with
			C-30480);
D		Aux Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
			40-77);
D		Aux Wheel	182P* s/n 18264744 thru 18265175 (When equipped with
			D-30500);
D		Aux Wheel	182Q s/n all (When equipped with 40-77);
D		Aux Wheel	182Q s/n all (When equipped with D-30500);
D		Aux Wheel	182R s/n all (When equipped with 40-77);
D		Aux Wheel	182R s/n all (When equipped with D-30500);
D		Aux Wheel	182S s/n all (When equipped with 40-77);
D		Aux Wheel	182T s/n all (When equipped with 40-77);
D		Aux Wheel	A182J s/n all (When equipped with 40-77);
D		Aux Wheel	A182K s/n all (When equipped with 40-77);
D		Aux Wheel	A182L s/n all (When equipped with 40-77);
D		Aux Wheel	A182N s/n all (When equipped with 40-77);
D		Aux Wheel	F182P s/n all (When equipped with 40-77);
D		Aux Wheel	F182P s/n all (When equipped with C-30480);
D D		Aux Wheel	F182Q s/n all (When equipped with 40-77);
D		Aux Wheel	F182Q s/n all (When equipped with D-30500);
D		Aux Wheel	FR182 s/n all (When equipped with 40-77);
D		Aux Wheel	FR182 s/n all (When equipped with D-30500);
D		Aux Wheel	R182 s/n all (When equipped with 40-77);
D		Aux Wheel	R182 s/n all (When equipped with D-30500);
D		Aux Wheel	T182 s/n all (When equipped with 40-77);
D		Aux Wheel	T182 s/n all (When equipped with D-30500);
D		Aux Wheel	T182T s/n all (When equipped with 40-77);
D		Aux Wheel Aux Wheel	TR182 s/n all (When equipped with 40-77);
D		Aux Wheel	TR182 s/n all (When equipped with D-30500); 210-5 (205) s/n all (When equipped with 40-20);
D		Aux Wheel	210-5 (205) s/n all (When equipped with 40-20);
D		Aux	210-5 (205) s/n all (When equipped with 40-77); 210-5A (205A) s/n all (When equipped with 40-76);
D		Aux Wheel	210-5A (205A) s/n all (When equipped with 40-70);
D		Aux Wheel	210-5A (205A) s/r all (When equipped with 40-77);
D		Aux Wheel	206 s/n all (When equipped with D-30500);
D		Aux Wheel	206H s/n all (When equipped with 40-77);
D		Aux Wheel	P206 s/n all (When equipped with 40-77);
D		Aux Wheel	P206 s/n all (When equipped with D-30500);
D		Aux Wheel	P206A s/n all (When equipped with 40-77);
			. 200. tom an (Titlott oquippod tital 10 77);



Rev Part Number MC153-00800	<u>Replaces</u> 153-00800,	<u>Location</u> Aux Wheel	Model and Serial Number Range P206A s/n all (When equipped with D-30500);
	153-30048, 153-8,		
	A30048		
D		Aux Wheel	P206B s/n all (When equipped with 40-77);
D		Aux Wheel	P206B s/n all (When equipped with D-30500);
D		Aux Wheel	P206C s/n all (When equipped with 40-77);
D		Aux Wheel	P206C s/n all (When equipped with D-30500);
D		Aux Wheel	P206D s/n all (When equipped with 40-77);
D		Aux Wheel	P206D s/n all (When equipped with D-30500);
D		Aux Wheel	P206E s/n all (When equipped with 40-77);
D		Aux Wheel	P206E s/n all (When equipped with D-30500);
D		Aux Wheel	T206H s/n all (When equipped with 40-77);
D		Aux Wheel	TP206A s/n all (When equipped with 40-77);
D		Aux Wheel	TP206A s/n all (When equipped with D-30500);
D		Aux Wheel	TP206B s/n all (When equipped with 40-77);
D		Aux Wheel	TP206B s/n all (When equipped with D-30500);
D		Aux Wheel	TP206C s/n all (When equipped with 40-77);
D		Aux Wheel	TP206C s/n all (When equipped with D-30500);
D		Aux Wheel	TP206D s/n all (When equipped with 40-77);
D		Aux Wheel	TP206D s/n all (When equipped with D-30500);
D		Aux Wheel	TP206E s/n all (When equipped with 40-77);
D		Aux Wheel	TP206E s/n all (When equipped with D-30500);
D		Aux Wheel	TU206A s/n all (When equipped with 40-77);
D		Aux Wheel	TU206A s/n all (When equipped with D-30500);
D		Aux Wheel	TU206B s/n all (When equipped with 40-77);
D		Aux Wheel	TU206B s/n all (When equipped with D-30500);
D		Aux Wheel	TU206C s/n all (When equipped with 40-77);
D		Aux Wheel	TU206C s/n all (When equipped with D-30500);
D		Aux Wheel	TU206D s/n all (When equipped with 40-77);
D		Aux Wheel	TU206D s/n all (When equipped with D-30500);
D		Aux Wheel	TU206E s/n all (When equipped with 40-77);
D		Aux Wheel	TU206E s/n all (When equipped with D-30500);
D		Aux Wheel	TU206F* s/n U20601701 thru U20602199 (When
			equipped with 40-77);
D		Aux Wheel	TU206F* s/n U20601701 thru U20602199 (When
			equipped with D-30500);
D		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-77);
D		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with D-30500);
D		Aux Wheel	TU206G s/n all (When equipped with 40-77);
D		Aux Wheel	TU206G s/n all (When equipped with D-30500);
D		Aux Wheel	U206 s/n all (When equipped with 40-77);
D		Aux Wheel	U206 s/n all (When equipped with D-30500);
D		Aux Wheel	U206A s/n all (When equipped with 40-77);
D		Aux Wheel	U206A s/n all (When equipped with D-30500);



Rev Part Number MC153-00800	Replaces 153-00800,	<u>Location</u> Aux Wheel	Model and Serial Number Range U206B s/n all (When equipped with 40-77);
WC 133-0000		Aux Wileel	0200B 3/11 all (When equipped with 40-77),
	153-30048, 153-8, A30048		
D	A30040	Aux Wheel	U206B s/n all (When equipped with D-30500);
D		Aux Wheel	U206C s/n all (When equipped with 40-77);
D		Aux Wheel	U206C s/n all (When equipped with D-30500);
D		Aux Wheel	U206D s/n all (When equipped with 40-77);
D		Aux Wheel	U206D s/n all (When equipped with D-30500);
D		Aux Wheel	U206E s/n all (When equipped with 40-77);
D		Aux Wheel	U206E s/n all (When equipped with D-30500);
D		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
		Ada Wilcoi	with 40-77);
D		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
		Ada Wilcoi	with D-30500);
D		Aux Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
		Ada Wilcoi	with 40-77);
D		Aux Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
		Ada Wilcoi	with D-30500);
D		Aux Wheel	U206G s/n all (When equipped with 40-77);
D		Aux Wheel	U206G s/n all (When equipped with D-30500);
D		Aux Wheel	207 s/n all (When equipped with 40-77);
D		Aux Wheel	207* s/n 20700212 thru 20700362 (When equipped with
		Ada Wilcol	D-30500);
D		Aux Wheel	207A s/n all (When equipped with 40-77);
D		Aux Wheel	207A s/n all (When equipped with D-30500);
D		Aux Wheel	T207 s/n all (When equipped with 40-77);
D		Aux Wheel	T207* s/n 20700212 thru 20700362 (When equipped with
		7.007.	D-30500);
D		Aux Wheel	T207A s/n all (When equipped with 40-77);
D		Aux Wheel	T207A s/n all (When equipped with D-30500);
D		Aux Wheel	210A* s/n 21057734 thru 21057840 (When equipped with
			40-35);
D		Aux Wheel	210B s/n all (When equipped with 40-35);
D		Aux Wheel	210C s/n all (When equipped with 40-68);
D		Aux Wheel	210D s/n all (When equipped with 40-77);
D		Aux Wheel	210E s/n all (When equipped with 40-77);
D		Aux Wheel	210F s/n all (When equipped with 40-77);
D		Aux Wheel	210G s/n all (When equipped with 40-77);
D		Aux Wheel	210H s/n all (When equipped with 40-77);
D		Aux Wheel	210J s/n all (When equipped with 40-77);
D		Aux Wheel	210K s/n all (When equipped with 40-77);
D		Aux Wheel	210L s/n all (When equipped with 40-77);
D		Aux Wheel	210L* s/n 21059662 thru 21061573 (When equipped with
			D-30500);
D		Aux Wheel	210M s/n all (When equipped with 40-77);
D		Aux Wheel	210M s/n all (When equipped with D-30500);
			, , , , , , , , , , , , , , , , , , , ,



ev Part Number MC153-00800	Replaces 153-00800,	<u>Location</u> Aux Wheel	Model and Serial Number Range 210N* s/n 21062955 thru 21064135 (When equipped with
	153-30048, 153-8, A30048		40-77);
D D D D D D D D D D D D D D D D D D D		Aux Wheel	210N* s/n 21062955 thru 21064135 (When equipped with D-30500);
		Aux Wheel	210N* s/n 21064136 thru 21064897 (When equipped with D-30500);
		Aux Wheel	210R s/n all (When equipped with D-30500);
		Aux Wheel	P210N s/n all (When equipped with D-30500);
		Aux Wheel	P210R s/n all (When equipped with D-30500);
		Aux Wheel	T210F s/n all (When equipped with 40-77);
		Aux Wheel	T210G s/n all (When equipped with 40-77);
		Aux Wheel	T210H s/n all (When equipped with 40-77);
		Aux Wheel	T210J s/n all (When equipped with 40-77);
		Aux Wheel	T210K s/n all (When equipped with 40-77);
		Aux Wheel	T210L s/n all (When equipped with 40-77);
		Aux Wheel	T210L* s/n 21059662 thru 21061573 (When equipped with D-30500);
		Aux Wheel	T210M s/n all (When equipped with 40-77);
		Aux Wheel	T210M s/n all (When equipped with D-30500);
		Aux Wheel	T210N* s/n 21062955 thru 21064135 (When equipped with 40-77);
		Aux Wheel	T210N* s/n 21062955 thru 21064135 (When equipped with D-30500);
		Aux Wheel	T210N* s/n 21064136 thru 21064897 (When equipped with D-30500);
		Aux Wheel	T210R s/n all (When equipped with D-30500);
MC153-01000	153-01000, 153-10, 153-10	Main Wheel	150C s/n all (When equipped with 40-57A);
		Nose Wheel	172D s/n all (When equipped with 40-55);
C D		Aux Wheel	172G* s/n 17253393 thru 17254572 (When equipped with 40-55);
		Nose Wheel	F172D s/n all (When equipped with 40-55);
		Aux Wheel	FP172 s/n all (When equipped with 40-55);
		Nose Wheel	P172D s/n all (When equipped with 40-55);
		Aux Wheel	182E s/n all (When equipped with 40-55);
		Aux Wheel	182F* s/n 18254700 thru 18255058 (When equipped with 40-55);
		Aux Wheel	210-5 (205) s/n all (When equipped with 40-55);
		Main Wheel	210-5 (205) s/n all (When equipped with 40-67);
		Main Wheel	210C s/n all (When equipped with 40-21);
		Aux Wheel	336* s/n 336-0001 thru 336-0098 (When equipped with 40-55);
D		Main Wheel	336* s/n 336-0001 thru 336-0098 (When equipped with 40-67);



Day Dart Number	Donlagos	Location	Model and Cariel Number Dange
Rev Part Number MC153-01500	<u>Replaces</u> 153-01500, 153-15	<u>Location</u> Main Gear	Model and Serial Number Range 120 s/n all (When Equipped With 40-97A / STC
100 0 0 1000	100 01000, 100 10	Main Ocai	SA13GL);
E		Main Gear	140 s/n all (When Equipped With 40-97A / STC
		Main Ocai	SA13GL);
E		Main Gear	140A s/n all (When Equipped With 40-97A / STC
		Iviaiii Geai	
С		Main Wheel	SA13GL); 150D s/n all (When equipped with 40-79);
С		Main Wheel	150D s/n all (When equipped with 40-79);
c		Aux Wheel	
		Aux Wileel	150D* s/n 15060477 thru 15060772 (When equipped with
С		Aux Wheel	40-76A); 150E s/n all (When equipped with 40-76A);
c			
c		Main Wheel	150E s/n all (When equipped with 40-79);
c		Main Wheel	150E s/n all (When equipped with 40-79A);
		Aux Wheel	150F* s/n 15061533 thru 15063457 (When equipped with
С		Main M/haal	40-76A);
c		Main Wheel	150F s/n all (When equipped with 40-97);
c		Main Wheel	150F s/n all (When equipped with 40-97A);
		Main Wheel	150G* s/n 15064533 thru 15065809 (When equipped
С		Main M/haal	with 40-97);
c		Main Wheel	150G s/n all (When equipped with 40-97A);
c		Main Wheel	150H s/n all (When equipped with 40-97A);
c		Main Wheel	150J s/n all (When equipped with 40-97A);
c		Main Wheel	150K s/n all (When equipped with 40-97A);
c		Main Wheel	150L s/n all (When equipped with 40-113);
c		Main Wheel	150M s/n all (When equipped with 40-113);
c		Main Wheel	A150K s/n all (When equipped with 40-97A);
c		Main Wheel	A150L s/n all (When equipped with 40-113);
c		Main Wheel	A150M s/n all (When equipped with 40-113);
		Aux Wheel	F150F* s/n F150-0001 thru F150-0055 (When equipped
С		NA - 1 - NA/I I	with 40-76A);
C		Main Wheel	F150F s/n all (When equipped with 40-97);
C		Main Wheel	F150F s/n all (When equipped with 40-97A);
		Main Wheel	F150G* s/n F150-0068 thru F150-0167 (When equipped with 40-97);
С		Main Wheel	F150G s/n all (When equipped with 40-97A);
С		Main Wheel	F150H s/n all (When equipped with 40-97A);
С		Main Wheel	F150J s/n all (When equipped with 40-97A);
С		Main Wheel	F150K s/n all (When equipped with 40-97A);
С		Main Wheel	F150L s/n all (When equipped with 40-113);
С		Main Wheel	F150M s/n all (When equipped with 40-113);
С		Main Wheel	FA150K s/n all (When equipped with 40-97A);
С		Main Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with 40-113);
С		Main Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
			40-113);
			· · · · · · p
1			



Rev Part Number MC153-01500	Replaces 153-01500, 153-15	<u>Location</u> Main Wheel	Model and Serial Number Range FA150M (with FKA150-2311 and FKA150-2316) s/n all
	,,		(When equipped with 40-113);
С		Main Wheel	152 s/n all (When equipped with 40-113);
С		Main Wheel	152 s/n all (When equipped with D30660-1);
С		Main Wheel	A152 s/n all (When equipped with 40-113);
С		Main Wheel	A152 s/n all (When equipped with D30660-1);
С		Main Wheel	F152 s/n all (When equipped with 40-113);
С		Main Wheel	FA152 s/n all (When equipped with 40-113);
E		Main Gear	170 s/n all (When Equipped With 40-97A / STC
		Wall Coal	SA13GL);
E		Main Gear	170A s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Gear	170B s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Gear	172 s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Gear	172A s/n all (When Equipped With 40-97A / STC
		Wall Ocal	SA13GL);
E		Main Gear	172B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	172C s/n all (When Equipped With 40-97A / STC SA13GL);
		Main Wheel	172D s/n all (When equipped with 40-113);
		Main Wheel	172D s/n all (When equipped with 40-97A);
E		Main Gear	172D s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	172E s/n all (When equipped with 40-113);
		Nose Wheel	172E s/n all (When equipped with 40-76A);
		Main Wheel	172E s/n all (When equipped with 40-97A);
E		Main Gear	172E s/n all (When Equipped With 40-97A / STC SA13GL);
		Main Wheel	172F (T-41A) s/n all (When equipped with 40-113);
		Nose Wheel	172F (T-41A) s/n all (When equipped with 40-76A);
		Main Wheel	172F (T-41A) s/n all (When equipped with 40-97A);
		Main Wheel	172G s/n all (When equipped with 40-113);
		Aux Wheel	172G s/n all (When equipped with 40-76A);
		Main Wheel	172G s/n all (When equipped with 40-97A);
		Main Wheel	172H (T-41A) s/n all (When equipped with 40-113);
		Nose Wheel	172H (T-41A) s/n all (When equipped with 40-76A);
		Main Wheel	172H (T-41A) s/n all (When equipped with 40-97A);
		Main Wheel	172I s/n all (When equipped with 40-113);
		Nose Wheel	172I s/n all (When equipped with 40-76A);
		Main Wheel	172I s/n all (When equipped with 40-97A);
		Main Wheel	172K s/n all (When equipped with 40-113);
		Nose Wheel	172K s/n all (When equipped with 40-76A);
		Main Wheel	172K s/n all (When equipped with 40-97A);
			, , , , , , , , , , , , , , , , , , , ,



Rev Part Number	Replaces	Location	Model and Serial Number Range
MC153-01500	153-01500, 153-15	Main Wheel	172L s/n all (When equipped with 40-113);
		Nose Wheel	172L s/n all (When equipped with 40-76A);
		Main Wheel	172L s/n all (When equipped with 40-97A);
		Main Wheel	172M* s/n 17260759 thru 17263458 (When equipped with 40-113);
		Nose Wheel	172M* s/n 17260759 thru 17263458 (When equipped
			with 40-76A);
		Main Wheel	172M* s/n 17260759 thru 17263458 (When equipped with 40-97A);
		Main Wheel	172M* s/n 17263459 thru 17267584 (When equipped with 40-113);
		Main Wheel	172N s/n all (When equipped with 40-113);
		Main Wheel	172P s/n all (When equipped with 40-113);
		Main Wheel	172Q s/n all (When equipped with 40-113);
		Main Wheel	172R s/n all (When equipped with 40-113);
		Main Wheel	172RG s/n all (When equipped with 40-113);
		Main Wheel	172S s/n all (When equipped with 40-113);
		Main Wheel	F172D s/n all (When equipped with 40-113);
		Main Wheel	F172D s/n all (When equipped with 40-97A);
		Main Wheel	F172E s/n all (When equipped with 40-113);
		Nose Wheel	F172E s/n all (When equipped with 40-76A);
		Main Wheel	F172E s/n all (When equipped with 40-97A);
		Main Wheel	F172F s/n all (When equipped with 40-113);
		Nose Wheel	F172F s/n all (When equipped with 40-76A);
		Main Wheel	F172F s/n all (When equipped with 40-97A);
		Main Wheel	F172G s/n all (When equipped with 40-113);
		Nose Wheel	F172G s/n all (When equipped with 40-76A);
		Main Wheel	F172G s/n all (When equipped with 40-97A);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped with 40-113);
		Nose Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped
			with 40-76A);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped with 40-97A);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
			with 40-113);
		Nose Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
			with 40-76A);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
			with 40-97A);
		Main Wheel	F172K s/n all (When equipped with 40-113);
		Nose Wheel	F172K s/n all (When equipped with 40-76A);
		Main Wheel	F172K s/n all (When equipped with 40-97A);
		Main Wheel	F172L s/n all (When equipped with 40-113);
		Nose Wheel	F172L s/n all (When equipped with 40-76A);
		Main Wheel	F172L s/n all (When equipped with 40-97A);
			1 11 11 11 11 11 11



Rev Part Number Replaces 4 1 Location Model and Serial Number Range 153-01500, 153-15 MC153-01500 Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with 40-113); Aux Wheel F172M* s/n F17200905 thru F17201234 (When equipped with 40-76A); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with 40-97A): Main Wheel F172M* s/n F17201235 thru F17201514 (When equipped with 40-113): Main Wheel F172N s/n all (When equipped with 40-113); Main Wheel F172P s/n all (When equipped with 40-113); Main Wheel FP172 s/n all (When equipped with 40-113); Main Wheel FP172 s/n all (When equipped with 40-97A); Main Wheel FR172E s/n all (When equipped with 40-113); Aux Wheel FR172E s/n all (When equipped with 40-76A); Main Wheel FR172E s/n all (When equipped with 40-97A); Main Wheel FR172F s/n all (When equipped with 40-113); Aux Wheel FR172F s/n all (When equipped with 40-76A); Main Wheel FR172F s/n all (When equipped with 40-97A); Main Wheel FR172G s/n all (When equipped with 40-113); Aux Wheel FR172G s/n all (When equipped with 40-76A); Main Wheel FR172G s/n all (When equipped with 40-97A); Main Wheel FR172H s/n all (When equipped with 40-113); Aux Wheel FR172H s/n all (When equipped with 40-76A); Main Wheel FR172H s/n all (When equipped with 40-97A); Main Wheel FR172J s/n all (When equipped with 40-113); Aux Wheel FR172J s/n all (When equipped with 40-76A); Main Wheel FR172J s/n all (When equipped with 40-97A); Main Wheel FR172K s/n all (When equipped with 40-113); Main Wheel P172D s/n all (When equipped with 40-113); Main Wheel P172D s/n all (When equipped with 40-97A); Main Gear P172D s/n all (When Equipped With 40-97A / STC SA13GL); Main Wheel R172E (T-41B,C,D) s/n all (When equipped with 40-113); Aux Wheel R172E (T-41B,C,D) s/n all (When equipped with 40-76A); Main Wheel R172E (T-41B,C,D) s/n all (When equipped with 40-97A); Main Wheel R172F (T-41D) s/n all (When equipped with 40-113); Aux Wheel R172F (T-41D) s/n all (When equipped with 40-76A); Main Wheel R172F (T-41D) s/n all (When equipped with 40-97A); Main Wheel R172G (T-41C,D) s/n all (When equipped with 40-113); Aux Wheel R172G (T-41C,D) s/n all (When equipped with 40-76A); Main Wheel R172G (T-41C,D) s/n all (When equipped with 40-97A); Main Wheel R172H (T-41D) s/n all (When equipped with 40-113); R172H (T-41D) s/n all (When equipped with 40-76A); Aux Wheel Main Wheel R172H (T-41D) s/n all (When equipped with 40-97A); Main Wheel R172K s/n all (When equipped with 40-113);



Rev Part Number MC153-01500	Replaces 153-01500, 153-15	<u>Location</u> Main Gear	Model and Serial Number Range 175 s/n all (When Equipped With 40-97A / STC
111010001000	100 01000, 100 10	Main Coal	SA13GL);
E		Main Gear	175A s/n all (When Equipped With 40-97A / STC
		Main Geal	
E		Main Coor	SA13GL);
		Main Gear	175B s/n all (When Equipped With 40-97A / STC
_			SA13GL);
E		Main Gear	175C s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Aux Wheel	177 s/n all (When equipped with 40-76A);
		Main Wheel	177 s/n all (When equipped with 40-97A);
		Main Wheel	177A s/n all (When equipped with 40-97A);
		Main Wheel	177B* s/n 17701371 thru 17701530 (When equipped with
			40-97A);
		Main Wheel	177B* s/n 17701531 thru 17702752 (When equipped with
			40-113);
		Main Wheel	177RG s/n all (When equipped with 40-113);
		Main Wheel	F177RG s/n all (When equipped with 40-113);
E		Main Gear	
_		Main Geal	180 s/n all (When Equipped With 40-75B / STC
E		Main Oann	SA62GL);
_		Main Gear	180 s/n all (When Equipped With 40-75D or 40-75T /
_			STC SA63GL);
E		Main Gear	180 s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180A s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180A s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180A s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180B s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180B s/n all (When Equipped With 40-75D or 40-75T /
		Main Ocai	STC SA63GL);
E		Main Gear	•
_		Main Geal	180B s/n all (When Equipped With 40-97A / STC
E			SA13GL);
_		Main Gear	180C s/n all (When Equipped With 40-75B / STC
_			SA62GL);
E		Main Gear	180C s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180C s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180D s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180D s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
			5.5 0, 100 0 L _j ,
Ì			



Rev Part Number MC153-01500	Replaces 153-01500, 153-15	<u>Location</u> Main Gear	Model and Serial Number Range 180D s/n all (When Equipped With 40-97A / STC
100000000000000000000000000000000000000	100 0 1000, 100 10	Walli Ocal	SA13GL);
E		Main Gear	180E s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180E s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180E s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180F s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180F s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180F s/n all (When Equipped With 40-97A / STC
			SA13GL);
D		Main Wheel	180G s/n all (When equipped with 40-75 or 40-75B);
E		Main Gear	180G s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D E		Main Wheel	180H s/n all (When equipped with 40-75 or 40-75B);
_		Main Gear	180H s/n all (When Equipped With 40-75B / STC
E		Main Coor	SA62GL);
		Main Gear	180H s/n all (When Equipped With 40-75D or 40-75T /
D		Main Wheel	STC SA63GL);
		Maill Wileel	180H* s/n 18052011 thru 18052284 (When equipped with 40-75D);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When Equipped
		Wall Wilco	With 40-75B / STC SA62GL);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
			40-75D);
E		Main Gear	180J* s/n 18052285 thru 18052384 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			40-75B);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			40-75D);
E		Main Gear	180J* s/n 18052385 thru 18052770 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	180K s/n all (When equipped with 40-75B);
D E		Main Wheel	180K s/n all (When equipped with 40-75D);
		Main Gear	180K s/n all (When Equipped With 40-75D or 40-75T /
E		Main Coon	STC SA63GL);
		Main Gear	182 s/n all (When Equipped With 40-97A / STC
E		Main Goar	SA13GL);
		Main Gear	182A s/n all (When Equipped With 40-97A / STC
E		Main Gear	SA13GL); 182B s/n all (When Equipped With 40-97A / STC
		Main Ocai	SA13GL);
			5, 110 GEJ,



Rev E	Part Number MC153-01500	Replaces 153-01500, 153-15	<u>Location</u> Main Gear	Model and Serial Number Range
_	WC 155-0 1500	155-01500, 155-15	Main Geal	182C s/n all (When Equipped With 40-97A / STC SA13GL);
E			Main Gear	182D s/n all (When Equipped With 40-97A / STC
			Wall Scal	SA13GL);
D			Aux Wheel	182E s/n all (When equipped with 40-76A);
E			Main Gear	182E s/n all (When Equipped With 40-97A / STC
			Walli Scal	SA13GL);
D			Aux Wheel	182F* s/n 18254424 thru 18254699 (When equipped with 40-76A);
E			Main Gear	182F s/n all (When Equipped With 40-97A / STC
				SA13GL);
D			Aux Wheel	182G s/n all (When equipped with 40-76A);
E			Main Gear	182G s/n all (When Equipped With 40-97A / STC SA13GL);
D			Aux Wheel	182H s/n all (When equipped with 40-76A);
D			Main Wheel	182H s/n all (When equipped with 40-97A);
D			Aux Wheel	182J s/n all (When equipped with 40-76A);
D			Main Wheel	182J s/n all (When equipped with 40-97A);
D			Aux Wheel	182K s/n all (When equipped with 40-76A);
D			Main Wheel	182K s/n all (When equipped with 40-97A);
D			Aux Wheel	182L s/n all (When equipped with 40-76A);
D			Main Wheel	182L s/n all (When equipped with 40-97A);
D			Aux Wheel	182M s/n all (When equipped with 40-76A);
D			Main Wheel	182M s/n all (When equipped with 40-97A);
D			Main Wheel	182N* s/n 18260056 thru 18260445 (When equipped with 40-97A);
D			Aux Wheel	182N s/n all (When equipped with 40-76A);
D			Main Wheel	182N* s/n 18260446 thru 18260825 (When equipped with
D			Main Wheel	40-113); 182P* s/n 18260826 thru 18262465 (When equipped with
			Wall Wilce	40-113);
D			Main Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
				40-113);
D			Main Wheel	182Q s/n all (When equipped with 40-113);
D			Main Wheel	182S s/n all (When equipped with 40-75B);
D			Main Wheel	182T s/n all (When equipped with 40-75B);
D			Main Wheel	A182J s/n all (When equipped with 40-97A);
D			Aux Wheel	A182K s/n all (When equipped with 40-76A);
D			Main Wheel	A182K s/n all (When equipped with 40-97A);
D			Aux Wheel	A182L s/n all (When equipped with 40-76A);
D			Main Wheel	A182L s/n all (When equipped with 40-97A);
D			Main Wheel	A182N* s/n A182-0117 thru A182-0136 (When equipped with 40-97A);
D			Aux Wheel	A182N s/n all (When equipped with 40-76A);
D			Main Wheel	A182N* s/n A182-0137 thru A182-0148 (When equipped
				with 40-113);



Part Number MC153-01500	Replaces 153-01500, 153-15	<u>Location</u> Main Wheel	Model and Serial Number Range F182P s/n all (When equipped with 40-113);
D	,,	Main Wheel	F182Q s/n all (When equipped with 40-113);
D		Main Wheel	T182T s/n all (When equipped with 40-75B);
Ē		Main Gear	185 s/n all (When Equipped With 40-75B / STC
			SA62GL);
		Main Gear	185 s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
		Main Gear	185A s/n all (When Equipped With 40-75B / STC
			SA62GL);
		Main Gear	185A s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
		Main Gear	185B s/n all (When Equipped With 40-75B / STC SA62GL);
		Main Gear	185B s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
		Main Wheel	185C s/n all (When equipped with 40-75 or 40-75B);
		Main Gear	185C s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
		Main Wheel	185D s/n all (When equipped with 40-75 or 40-75B);
		Main Gear	185D s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
		Main Wheel	185E s/n all (When equipped with 40-75 or 40-75B);
		Main Gear	185E s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
		Main Wheel	A185E* s/n 185-0968 thru 185-1599 (When Equipped
		Maii Wiloo	With 40-75B / STC SA62GL);
		Main Gear	A185E* s/n 185-0968 thru 185-1599 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
		Main Wheel	A185E* s/n 185-1471 thru 185-1599 (When equipped
			with 40-75D);
		Main Wheel	A185E* s/n 18501600 thru 18502090 (When Equipped
			With 40-75B / STC SA62GL);
		Main Wheel	A185E* s/n 18501600 thru 18502090 (When equipped
			with 40-75D);
		Main Gear	A185E* s/n 18501600 thru 18502090 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
		Main Wheel	A185F* s/n 18502091 thru 18502310 (When Equipped
			With 40-75B / STC SA62GL);
		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
			with 40-75D);
		Main Gear	A185F* s/n 18502091 thru 18502310 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
		Main Wheel	A185F* s/n 18502311 thru 18504448 (When equipped
		Main Whal	with 40-75B);
		Main Wheel	A185F* s/n 18502311 thru 18504448 (When equipped with 40-75D);



Rev Part Number	Replaces	Location	Model and Serial Number Range
D MC153-01500	153-01500, 153-15	Main Wheel Main Wheel	188 s/n all (When equipped with 40-75 or 40-75B); 188A s/n all (When equipped with 40-75B);
D		Main Wheel	188B s/n all (When equipped with 40-75B);
D		Main Wheel	188B s/n all (When equipped with 40-98A);
D		Main Wheel	A188 s/n all (When equipped with 40-75B);
D		Main Wheel	A188A s/n all (When equipped with 40-75B);
D		Main Wheel	A188B* s/n 18800833 thru 18802348 (When equipped
		Wall Wilce	with 40-75B);
D		Main Wheel	A188B* s/n 18800833 thru 18802348 (When equipped
		Wall Wilce	with 40-98A);
D		Main Wheel	A188B* s/n 18802349 thru 18803973 (When equipped
		Maii Wiloo	with 40-98A);
D		Main Wheel	A-188B s/n all (When equipped with 40-75B);
D		Main Wheel	A-188B s/n all (When equipped with 40-98A);
D		Main Wheel	A188B (w/ large hopper)* s/n 18800833T thru 18802348T
			(When equipped with 40-75B);
D		Main Wheel	A188B (w/ large hopper)* s/n 18800833T thru 18802348T
			(When equipped with 40-98A);
D		Main Wheel	A188B (w/ large hopper)* s/n 18802349T thru 18803973T
			(When equipped with 40-98A);
D		Main Wheel	A-A188B s/n all (When equipped with 40-75B);
D		Main Wheel	A-A188B s/n all (When equipped with 40-98A);
D		Main Wheel	T188C s/n all (When equipped with 40-98A);
D		Main Wheel	210-5A (205A) s/n all (When equipped with 40-75);
D		Main Wheel	210-5A (205A) s/n all (When equipped with 40-75B);
D		Aux Wheel	210-5A (205A) s/n all (When equipped with 40-76);
D		Aux Wheel	210-5A (205A) s/n all (When equipped with 40-76A);
D		Main Wheel	206 s/n all (When equipped with 40-75B);
D		Main Wheel	206 s/n all (When equipped with 40-75D);
E		Main Gear	206 s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	206 s/n all (When equipped with 40-76A);
D		Main Wheel	206H s/n all (When equipped with 40-75B);
D		Main Wheel	206H s/n all (When equipped with 40-75D);
D D		Main Wheel	206H s/n all (When equipped with 40-76A);
D D		Main Wheel	P206 s/n all (When equipped with 40-75B);
E		Main Wheel	P206 s/n all (When equipped with 40-75D);
_		Main Gear	P206 s/n all (When Equipped With 40-75D or 40-75T /
D		Aux Mhaal	STC SA63GL);
D		Aux Wheel Main Wheel	P206 s/n all (When equipped with 40-76A);
D		Main Wheel	P206A s/n all (When equipped with 40-75B);
D		Aux Wheel	P206A s/n all (When equipped with 40-75D); P206A s/n all (When equipped with 40-76A);
D		Main Wheel	P206B s/n all (When equipped with 40-75B);
D		Main Wheel	P200B s/n all (When equipped with 40-75b);
D		Aux Wheel	P206B s/n all (When equipped with 40-76A);
		AUX TITOOT	. 2005 Sitt dir (Willott Oquippod Willi 40 7071),



Rev Part Number	Replaces	Location	Model and Serial Number Range
^D MC153-01500	153-01500, 153-15	Main Wheel	P206C s/n all (When equipped with 40-75B);
D		Main Wheel	P206C s/n all (When equipped with 40-75D);
D		Aux Wheel	P206C s/n all (When equipped with 40-76A);
D		Main Wheel	P206D s/n all (When equipped with 40-75B);
D		Main Wheel	P206D s/n all (When equipped with 40-75D);
D		Aux Wheel	P206D s/n all (When equipped with 40-76A);
D		Main Wheel	P206E s/n all (When equipped with 40-75B);
D		Main Wheel	P206E s/n all (When equipped with 40-75D);
D		Aux Wheel	P206E s/n all (When equipped with 40-76A);
		Main Wheel	T206H s/n all (When equipped with 40-75B);
D		Main Wheel	T206H s/n all (When equipped with 40-75D);
D		Main Wheel	T206H s/n all (When equipped with 40-76A);
D		Main Wheel	TP206A s/n all (When equipped with 40-75B);
D		Main Wheel	TP206A s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206A s/n all (When equipped with 40-76A);
D		Main Wheel	TP206B s/n all (When equipped with 40-75B);
D		Main Wheel	TP206B s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206B s/n all (When equipped with 40-76A);
D		Main Wheel	TP206C s/n all (When equipped with 40-75B);
D		Main Wheel	TP206C s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206C s/n all (When equipped with 40-76A);
D		Main Wheel	TP206D s/n all (When equipped with 40-75B);
D		Main Wheel	TP206D s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206D s/n all (When equipped with 40-76A);
D		Main Wheel	TP206E s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206E s/n all (When equipped with 40-76A);
D		Main Wheel	TU206A s/n all (When equipped with 40-75B);
D		Main Wheel	TU206A s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206A s/n all (When equipped with 40-76A);
D		Main Wheel	TU206B s/n all (When equipped with 40-75B);
D		Main Wheel	TU206B s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206B s/n all (When equipped with 40-76A);
D		Main Wheel	TU206C s/n all (When equipped with 40-75B);
D		Main Wheel	TU206C s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206C s/n all (When equipped with 40-76A);
D		Main Wheel	TU206D s/n all (When equipped with 40-75B);
D		Main Wheel	TU206D s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206D s/n all (When equipped with 40-76A);
D		Main Wheel	TU206E s/n all (When equipped with 40-75B / STC
			SA62GL);
D		Main Wheel	TU206E s/n all (When equipped with 40-75D);
E		Main Gear	TU206E s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	TU206E s/n all (When equipped with 40-76A);
D		Main Wheel	TU206F* s/n U20601701 thru U20602199 (When
		-	Equipped With 40-75B / STC SA62GL);
			1 · · · · · · · · · · · · · · · · · · ·



Rev Part Number MC153-01500	Replaces 153-01500, 153-15	Location Main Wheel	Model and Serial Number Range TU206F* s/n U20601701 thru U20602199 (When
			equipped with 40-75D);
E		Main Gear	TU206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75D or 40-75T / STC SA63GL);
D		Aux Wheel	TU206F* s/n U20601701 thru U20602199 (When
			equipped with 40-76A);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-75B / STC SA62GL);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-75D);
D		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-76A);
D		Main Wheel	TU206G s/n all (When equipped with 40-75B);
D		Main Wheel	TU206G s/n all (When equipped with 40-75D);
E		Main Gear	TU206G s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	TU206G s/n all (When equipped with 40-76A);
D		Main Wheel	U206 s/n all (When equipped with 40-75B);
D		Main Wheel	U206 s/n all (When equipped with 40-75D);
E		Main Gear	U206 s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	U206 s/n all (When equipped with 40-76A);
D		Main Wheel	U206A s/n all (When equipped with 40-75B);
D		Main Wheel	U206A s/n all (When equipped with 40-75D);
D		Aux Wheel	U206A s/n all (When equipped with 40-76A);
D		Main Wheel	U206B s/n all (When equipped with 40-75B);
D		Main Wheel	U206B s/n all (When equipped with 40-75D);
D		Aux Wheel	U206B s/n all (When equipped with 40-76A);
D		Main Wheel	U206C s/n all (When equipped with 40-75B);
D		Main Wheel	U206C s/n all (When equipped with 40-75D);
D		Aux Wheel	U206C s/n all (When equipped with 40-76A);
D		Main Wheel	U206D s/n all (When equipped with 40-75B);
D		Main Wheel	U206D s/n all (When equipped with 40-75D);
D		Aux Wheel	U206D s/n all (When equipped with 40-76A);
D		Main Wheel	U206E s/n all (When equipped with 40-75B / STC
			SA62GL);
D		Main Wheel	U206E s/n all (When equipped with 40-75D);
D		Aux Wheel	U206E s/n all (When equipped with 40-76A);
D		Main Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
			with 40-75B / STC SA62GL);
D		Main Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
			with 40-75D);
E		Main Gear	U206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75D or 40-75T / STC SA63GL);
D		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
			with 40-76A);



Rev Part Number Replaces D MC153-01500 153-01500, 153-15	<u>Location</u> 5 Main Wheel	Model and Serial Number Range U206F* s/n U20602200 thru U20603521 (When equipped
,		with 40-75B / STC SA62GL);
D	Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
		with 40-75D);
D	Aux Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
		with 40-76A);
D	Main Wheel	U206G s/n all (When equipped with 40-75B);
D	Main Wheel	U206G s/n all (When equipped with 40-75D);
E	Main Gear	U206G s/n all (When Equipped With 40-75D or 40-75T /
		STC SA63GL);
D	Aux Wheel	U206G s/n all (When equipped with 40-76A);
D	Main Wheel	207 s/n all (When equipped with 40-75B);
D	Main Wheel	207 s/n all (When equipped with 40-75D);
D	Aux Wheel	207 s/n all (When equipped with 40-76A);
D	Main Wheel	207A s/n all (When equipped with 40-75B);
D	Main Wheel	207A s/n all (When equipped with 40-75D);
D	Aux Wheel	207A s/n all (When equipped with 40-76A);
D	Main Wheel	T207 s/n all (When equipped with 40-75B);
D	Main Wheel	T207 s/n all (When equipped with 40-75D);
D	Aux Wheel	T207 s/n all (When equipped with 40-76A);
D	Main Wheel	T207A s/n all (When equipped with 40-75B);
D	Main Wheel	T207A s/n all (When equipped with 40-75D);
D	Aux Wheel	T207A s/n all (When equipped with 40-76A);
E	Main Gear	210 s/n all (When Equipped With 40-75B / STC SA52GL);
Е	Main Gear	210A s/n all (When Equipped With 40-75B / STC SA52GL);
Е	Main Gear	210B s/n all (When Equipped With 40-75B / STC SA52GL);
Е	Main Gear	210C s/n all (When Equipped With 40-75B / STC SA52GL);
D	Main Wheel	210D s/n all (When equipped with 40-75 or 40-75B);
D	Main Wheel	210E s/n all (When equipped with 40-75 or 40-75B);
D	Main Wheel	210F s/n all (When equipped with 40-75 or 40-75B);
D	Main Wheel	210G s/n all (When equipped with 40-75B);
D	Main Wheel	210H s/n all (When equipped with 40-75B);
D	Main Wheel	210J s/n all (When equipped with 40-75B);
D	Main Wheel	210K s/n all (When equipped with 40-75B);
E	Main Gear	210K s/n all (When Equipped With 40-75B / STC
E		SA52GL);
-	Main Wheel	210L s/n all (When Equipped With 40-75B / STC SA52GL);
E	Main Wheel	210M s/n all (When Equipped With 40-75B / STC SA52GL);
D	Main Wheel	210N* s/n 21062955 thru 21064135 (When equipped with 40-75B);



Rev Part Number	Replaces	Location	Model and Serial Number Range
[□] MC153-01500	153-01500, 153-15	Main Wheel	210N* s/n 21064136 thru 21064822 (When equipped with
D		Main Wheel	40-75B);
		Maill Wileel	210N* s/n 21064823 thru 21064897 (When equipped with 40-142);
D		Main Wheel	210R s/n all (When equipped with 40-142);
D		Main Wheel	P210N s/n all (When equipped with 40-142);
E		Main Wheel	P210N s/n all (When Equipped With 40-75B / STC
		Wall Wilco	SA52GL);
D		Main Wheel	P210R s/n all (When equipped with 40-142);
D		Main Wheel	P210R s/n all (When equipped with 40-75B);
D		Main Wheel	T210F s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	T210G s/n all (When equipped with 40-75B);
D		Main Wheel	T210H s/n all (When equipped with 40-75B);
D		Main Wheel	T210J s/n all (When equipped with 40-75B);
E		Main Wheel	T210K s/n all (When Equipped With 40-75B / STC
			SA52GL);
E		Main Wheel	T210L s/n all (When Equipped With 40-75B / STC
			SA52GL);
E		Main Wheel	T210M s/n all (When Equipped With 40-75B / STC
			SA52GL);
D		Main Wheel	T210N* s/n 21062955 thru 21064135 (When equipped
			with 40-75B);
D		Main Wheel	T210N* s/n 21064136 thru 21064822 (When equipped
			with 40-75B);
D		Main Wheel	T210N* s/n 21064823 thru 21064897 (When equipped
			with 40-142);
D		Main Wheel	T210R s/n all (When equipped with 40-142);
D		Main Wheel	T303 s/n all (When equipped with 40-142);
D		Main Wheel	T303 s/n all (When equipped with 40-98H);
D		Main Wheel	336* s/n 336-0075 thru 336-0195 (When equipped with 40-75B);
D		Aux Wheel	336* s/n 336-0099 thru 336-0195 (When equipped with
			40-73 or 40-76A);
D		Aux Wheel	337 s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	337 s/n all (When equipped with 40-96E);
D		Aux Wheel	337A (USAF O2B) s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	337A (USAF O2B) s/n all (When equipped with 40-96E);
D		Aux Wheel	337B s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	337B s/n all (When equipped with 40-96E);
D		Aux Wheel	337C s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	337C s/n all (When equipped with 40-96E);
D		Aux Wheel	337D s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	337D s/n all (When equipped with 40-96E);
D		Aux Wheel	337E s/n all (When equipped with 40-76A);
D		Main Wheel	337E s/n all (When equipped with 40-96E);
			Y 1 11 22 2 2 2 2 P



ev Part Number MC153-01500	Replaces 153-01500, 153-15	<u>Location</u> Main Wheel	Model and Serial Number Range 337E s/n all (When equipped with 40-98A);
1010 155-0 1500	133-01300, 133-13	Aux Wheel	
1		Main Wheel	337F s/n all (When equipped with 40-76A);
· 			337F s/n all (When equipped with 40-96E);
· 		Main Wheel	337F s/n all (When equipped with 40-98A);
· •		Aux Wheel	337G s/n all (When equipped with 40-76A);
		Main Wheel	337G s/n all (When equipped with 40-96E);
		Main Wheel	337G s/n all (When equipped with 40-98A);
		Aux Wheel	337H s/n all (When equipped with 40-76A);
		Main Wheel	337H s/n all (When equipped with 40-96E);
		Main Wheel	337H s/n all (When equipped with 40-98A);
		Aux Wheel	F337G s/n all (When equipped with 40-76A);
		Main Wheel	F337G s/n all (When equipped with 40-96E);
		Main Wheel	F337G s/n all (When equipped with 40-98A);
		Aux Wheel	F337H s/n all (When equipped with 40-76A);
		Main Wheel	F337H s/n all (When equipped with 40-96E);
		Main Wheel	F337H s/n all (When equipped with 40-98A);
		Aux Wheel	FT337GP (FP337)* s/n FP3370001 thru FP3370007
			(When equipped with 40-73 or 40-76A);
		Main Wheel	FT337GP (FP337) s/n all (When equipped with 40-96E
			or 40-98A);
		Main Wheel	FT337HP (FP337H) s/n all (When equipped with 40-96E
			or 40-98A);
		Aux Wheel	M337B (USAF O2A) s/n all (When equipped with 40-73 or 40-76A):
		Main Wheel	M337B (USAF O2A) s/n all (When equipped with 40-96E);
		Main Wheel	P337H s/n all (When equipped with 40-96E or 40-98A);
		Aux Wheel	T337B s/n all (When equipped with 40-73 or 40-76A);
		Main Wheel	T337B s/n all (When equipped with 40-96E);
		Aux Wheel	T337C s/n all (When equipped with 40-73 or 40-76A);
		Main Wheel	T337C s/n all (When equipped with 40-96E);
		Aux Wheel	T337D s/n all (When equipped with 40-73 or 40-76A);
		Main Wheel	
			T337D s/n all (When equipped with 40-96E);
		Aux Wheel Main Wheel	T337E s/n all (When equipped with 40-76A);
			T337E s/n all (When equipped with 40-96E);
		Main Wheel	T337E s/n all (When equipped with 40-98A);
		Aux Wheel	T337F s/n all (When equipped with 40-76A);
		Main Wheel	T337F s/n all (When equipped with 40-96E);
		Main Wheel	T337F s/n all (When equipped with 40-98A);
		Main Wheel	T337G s/n all (When equipped with 40-96E or 40-98A);
		Aux Wheel	T337H s/n all (When equipped with 40-76A);
		Main Wheel	T337H s/n all (When equipped with 40-96E);
		Main Wheel	T337H s/n all (When equipped with 40-98A);
		Main Wheel	T337H-SP s/n all (When equipped with 40-96E or 40-98A);



Rev	Part Number MC153-01500	Replaces 153-01500, 153-15	<u>Location</u> Aux Wheel	Model and Serial Number Range 340A* s/n 340A1001 thru 340A1817 (When equipped
		,		with 40-140A);
D			Aux Wheel	401 s/n all (When equipped with D-76A);
D			Aux Wheel	401A s/n all (When equipped with D-76A);
D			Aux Wheel	401B s/n all (When equipped with D-76A);
D			Aux Wheel	402 s/n all (When equipped with D-76A);
D			Aux Wheel	402A s/n all (When equipped with D-76A);
D			Aux Wheel	
			Aux Wileel	402B* s/n 402B0001 thru 402B1323 (When equipped with D-76A);
D			Aux Wheel	402C s/n all (When equipped with 40-140A);
D			Aux Wheel	404 s/n all (When equipped with 40-140A);
D			Aux Wheel	406 s/n all (When equipped with 40-140A);
D			Aux Wheel	F406* s/n F406-0001 thru F406-9999 (When equipped with 40-140A);
D			Aux Wheel	411 s/n all (When equipped with 40-76A);
D			Aux Wheel	411A s/n all (When equipped with 40-76A);
D			Aux Wheel	414 s/n all (When equipped with 40-140A);
D				· · · · · · · · · · · · · · · · · · ·
D			Aux Wheel	414A s/n all (When equipped with 40-140A);
			Aux Wheel	421C s/n all (When equipped with 40-140A);
D			Aux Wheel	425 s/n all (When equipped with 40-140A);
D			Aux Wheel	441 s/n all (When equipped with 40-140A);
С	MC153-30013	153-30013, A30013	Main Wheel	150L* s/n 15072004 thru 15074891 (When equipped with D30660-1);
С			Main Wheel	150M* s/n 15075782 thru 15077085 (When equipped
				with D30660-1);
С			Main Wheel	150M* s/n 15077086 thru 15077379 (When equipped with D30580);
С			Main Wheel	150M* s/n 15077381 thru 15077401 (When equipped with D30580);
С			Main Wheel	150M* s/n 15077404 thru 15079113 (When equipped
С			NA = : NA/I= = = I	with D30291-6);
Ū			Main Wheel	150M* s/n 15079114 thru 15079405 (When equipped with D30660-1);
С			Main Wheel	A150L* s/n A1500227 thru A1500430 (When equipped with D30660-1);
С			Main Wheel	A150L* s/n A1500431 thru A1500523 (When equipped
С			Main Wheel	with D30660-1); A150M* s/n A1500524 thru A1500620 (When equipped
				with D30660-1);
			Main Wheel	A150M* s/n A1500621 thru A1500641 (When equipped
С				with D30580):
С			Main Wheel	with D30580); A150M* s/n A1500642 thru A1500734 (When equipped with D30291-6);



Rev Part Number MC153-30013	Replaces 153-30013, A30013	<u>Location</u> Main Wheel	Model and Serial Number Range F150M* s/n F15001144 thru F15001418 (When equipped
WIG 100 000 10	100 000 10, 7,000 10	Wall Wilco	, , , , , ,
С		Main Mile and	with D30660-1);
		Main Wheel	F150M* s/n F15001312 thru F15001332 (When equipped with D30580);
С		Main Wheel	F150M* s/n F15001333 thru F15001418 (When equipped
		Main Wilou	with D30291-6);
С		Main Whool	· ·
-		Main Wheel	F150M* s/n F15001419 thru F15001428 (When equipped with D30660-1);
С		Main Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with D30660-1);
С		Main Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
			· · · · · ·
С		Main Wheel	D30660-1);
_		IVIAIII VVIIEEI	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500262 thru FA1500299 (When equipped with D30660-1);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500312 thru FA1500336 (When equipped with
			D30291-6);
С		Main Wheel	152 s/n all (When equipped with D30660-1);
c		Main Wheel	F152 s/n all (When equipped with D30660-1);
С		Main Wheel	
_			FA152 s/n all (When equipped with D30660-1);
		Main Wheel	172D s/n all (When equipped with D-30660-1);
		Main Wheel	172E s/n all (When equipped with D-30660-1);
		Main Wheel	172F (T-41A) s/n all (When equipped with D-30660-1);
		Main Wheel	172G s/n all (When equipped with D-30660-1);
		Main Wheel	172H (T-41A) s/n all (When equipped with D-30660-1);
		Main Wheel	172I s/n all (When equipped with D-30660-1);
		Main Wheel	172K s/n all (When equipped with D-30660-1);
		Main Wheel	172L s/n all (When equipped with D-30660-1);
		Main Wheel	172M* s/n 17260835 thru 17263458 (When equipped
			with D-30660-1);
		Main Wheel	172M* s/n 17263459 thru 17265648 (When equipped
			with D-30660-1);
		Main Wheel	172M* s/n 17265649 thru 17266053 (When equipped
			with D-30580);
		Main Wheel	172M* s/n 17266054 thru 17267584 (When equipped
		Walli Willoci	with D-30291-6);
		Main Wheel	··
		IVIAIII VVIICEI	172N* s/n 17267585 thru 17268399 (When equipped with
		Main Mile and	D-30291-6);
		Main Wheel	172N s/n all (When equipped with D-30580);
		Main Wheel	172N* s/n 17268400 thru 17274009 (When equipped with D-30660-1);
		Main Wheel	172P s/n all (When equipped with D-30291-6);
		Main Wheel	172P s/n all (When equipped with D-30580);
		Main Wheel	172P s/n all (When equipped with D-30660-1);
		Mail Mileei	1721 3/11 all (Wilcin equipped Willi D-30000-1),
İ			



Rev Part Number	Replaces	Location	Model and Serial Number Range
MC153-30013	153-30013, A30013	Main Wheel	172Q s/n all (When equipped with D-30291-6); 172Q s/n all (When equipped with D-30580);
		Main Wheel	
		Main Wheel	172Q s/n all (When equipped with D-30660-1);
		Main Wheel	172RG s/n all (When equipped with D-30660-1);
		Main Wheel	F172D s/n all (When equipped with D-30660-1);
		Main Wheel	F172E s/n all (When equipped with D-30660-1);
		Main Wheel	F172F s/n all (When equipped with D-30660-1);
		Main Wheel	F172G s/n all (When equipped with D-30660-1);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1);
		Main Wheel	F172K s/n all (When equipped with D-30660-1);
		Main Wheel	F172L* s/n F17200901 thru F17200904 (When equipped
		Wall Wilco	with D-30660-1);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
		Wall Wilco	with D-30660-1);
		Main Wheel	F172M* s/n F17201235 thru F17201465 (When equipped
		Wall Wilco	with D-30660-1);
		Main Wheel	F172M* s/n F17201466 thru F17201485 (When equipped
		Wall Wilco	with D-30580);
		Main Wheel	F172M* s/n F17201486 thru F17201514 (When equipped
		Wall Wilco	with D-30291-6);
		Main Wheel	F172N* s/n F17201515 thru F17201633 (When equipped
		Main Wilco	with D-30291-6);
		Main Wheel	F172N s/n all (When equipped with D-30580);
		Main Wheel	F172N* s/n F17201634 thru F17202039 (When equipped
		Walli Wilcei	with D-30660-1);
		Main Wheel	F172P s/n all (When equipped with D-30291-6);
		Main Wheel	F172P s/n all (When equipped with D-30580);
		Main Wheel	F172P s/n all (When equipped with D-30660-1);
		Main Wheel	FP172 s/n all (When equipped with D-30660-1);
		Main Wheel	FR172J* s/n FR1720420 thru FR17200590 (When
			equipped with D-30660-1);
		Main Wheel	FR172K s/n all (When equipped with D-30291-6);
		Main Wheel	FR172K s/n all (When equipped with D-30660-1);
		Main Wheel	P172D s/n all (When equipped with D-30660-1);
		Main Wheel	R172K s/n all (When equipped with D-30291-6);
		Main Wheel	R172K s/n all (When equipped with D-30660-1);
		Main Wheel	177 s/n all (When equipped with D-30291-6);
		Main Wheel	177 s/n all (When equipped with D-30580);
		Main Wheel	177 s/n all (When equipped with D-30660-1);
		Main Wheel	177B* s/n 17702314 thru 17702347 (When equipped with
			D-30580);
		Main Wheel	177B* s/n 17702348 thru 17702614 (When equipped with
			D-30291-6);
			· · -p

	McFarlane McFarlane Aviation, Inc. 696 East 1700 Road Baldwin City, Kansas									
Title:		El	LIGIBI	LITY: V	VHEEL SEA	L CC	MPON	IENT	S	
Size:	A	Scale:	NA	Drawn:	DPH		Sheet:	52	of	140
Drawin	Drawing Number: 6551						F	REVISION		
										F

Rev Part Number MC153-30013	Replaces 153-30013, A30013	<u>Location</u> Main Wheel	Model and Serial Number Range 177B* s/n 17702615 thru 17702752 (When equipped with
			D-30660-1);
		Main Wheel	177RG* s/n 177RG0788 thru 177RG0805 (When
			equipped with D-30580);
		Main Wheel	177RG* s/n 177RG0805 thru 177RG1108 (When
			equipped with D-30291-6);
		Main Wheel	177RG* s/n 177RG1109 thru 177RG1366 (When
			equipped with D-30660-1);
		Main Wheel	F177RG* s/n F177RG0139 thru F177RG0144 (When
			equipped with D-30580);
		Main Wheel	F177RG* s/n F177RG0145 thru F177RG0172 (When
			equipped with D-30291-6);
		Main Wheel	F177RG* s/n F177RG0173 thru F177RG0177 (When
D		NA - 1 - NA/II I	equipped with D-30660-1);
		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
D		Main Mhaal	D-30291-1);
		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
D		Main Wheel	D-30291-3);
		Maill Wileel	180J* s/n 18052385 thru 18052770 (When equipped with D-30291-1);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
		Wall Wilco	D-30291-3);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
		Wall Wilco	D-30660-3);
D		Main Wheel	180K* s/n 18052771 thru 18052924 (When equipped with
			D-30291-1);
D		Main Wheel	180K* s/n 18052771 thru 18052924 (When equipped with
			D-30291-3);
D		Main Wheel	180K* s/n 18052925 thru 18053203 (When equipped with
			D-30660-2);
D		Main Wheel	182P* s/n 18262466 thru 18264307 (When equipped with
			D-30580);
D		Main Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
			D-30660-1);
D		Main Wheel	182P* s/n 18264308 thru 18265175 (When equipped with
			D-30291-6);
D		Main Wheel	182Q* s/n 18265176 thru 18265328 (When equipped
			with D-30291-6);
D		Main Wheel	182Q* s/n 18265329 thru 18267715 (When equipped
D		Main Wheel	with D-30660-1);
D		Main Wheel	182R s/n all (When equipped with D-30291-6);
D		Main Wheel	182R s/n all (When equipped with D-30660-1);
D		Main Wheel	182R s/n all (When equipped with D-30660-3);
D		Main Wheel	F182P s/n all (When equipped with D-30291-6);
_		Main Wheel	F182Q s/n all (When equipped with D-30291-6);
T. Control of the con			



Rev Part Number	<u>Replaces</u>	<u>Location</u>	Model and Serial Number Range
■ MC153-30013	153-30013, A30013	Main Wheel	F182Q* s/n F18200074 thru F18200169 (When equipped
			with D-30660-1);
D		Main Wheel	FR182 s/n all (When equipped with D-30660-3);
D		Main Wheel	R182 s/n all (When equipped with D-30660-3);
D		Main Wheel	T182 s/n all (When equipped with D-30291-6);
D		Main Wheel	T182 s/n all (When equipped with D-30660-3);
D		Main Wheel	TR182 s/n all (When equipped with D-30660-3);
D		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
			with D-30291-1);
D		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
			with D-30291-3);
D		Main Wheel	A185F* s/n 18502311 thru 18503504 (When equipped
			with D-30291-1);
D		Main Wheel	A185F* s/n 18502311 thru 18503504 (When equipped
			with D-30291-3);
D		Main Wheel	A185F* s/n 18503505 thru 18504448 (When equipped
			with D-30660-2);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with D-30660-2);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with D-30660-3);
D		Main Wheel	TU206G s/n all (When equipped with D-30660-2);
D		Main Wheel	TU206G s/n all (When equipped with D-30660-3);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with D-30660-2);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped with D-30660-3);
D		Main Wheel	U206G s/n all (When equipped with D-30660-2);
D		Main Wheel	U206G s/n all (When equipped with D-30660-3);
D		Main Wheel	210L* s/n 21060090 thru 21061573 (When equipped with
			D-30660-3);
D		Main Wheel	210M s/n all (When equipped with D-30660-3);
D		Main Wheel	210N* s/n 21062955 thru 21064135 (When equipped with
			D-30660-3);
D		Main Wheel	P210N s/n all (When equipped with D-30660-3);
D		Main Wheel	P210R s/n all (When equipped with D-30660-3);
D		Main Wheel	T210L* s/n 21060090 thru 21061573 (When equipped
			with D-30660-3);
D		Main Wheel	T210M s/n all (When equipped with D-30660-3);
D		Main Wheel	T210N* s/n 21062955 thru 21064135 (When equipped
			with D-30660-3);
0 1015			<u> </u>
^c MC153-30014	153-30014, A30014	Main Wheel	150L* s/n 15072004 thru 15074891 (When equipped with
•			D30660-1);
С		Main Wheel	150M* s/n 15075782 thru 15077085 (When equipped with D30660-1);
		ſ	McFarlane Aviation, Inc.



Rev Part Number	Replaces	Location	Model and Serial Number Range
c MC153-30014	153-30014, A30014	Main Wheel	150M* s/n 15077086 thru 15077379 (When equipped
			with D30580);
С		Main Wheel	150M* s/n 15077381 thru 15077401 (When equipped
			with D30580);
С		Main Wheel	150M* s/n 15077404 thru 15079113 (When equipped
			with D30291-6);
С		Main Wheel	150M* s/n 15079114 thru 15079405 (When equipped
			with D30660-1);
С		Main Wheel	A150L* s/n A1500227 thru A1500430 (When equipped
			with D30660-1);
С		Main Wheel	A150L* s/n A1500431 thru A1500523 (When equipped
			with D30660-1);
С		Main Wheel	A150M* s/n A1500524 thru A1500620 (When equipped
			with D30660-1);
С		Main Wheel	A150M* s/n A1500621 thru A1500641 (When equipped
			with D30580);
С		Main Wheel	A150M* s/n A1500642 thru A1500734 (When equipped
			with D30291-6);
С		Main Wheel	F150L s/n all (When equipped with D30660-1);
С		Main Wheel	F150M* s/n F15001144 thru F15001418 (When equipped
			with D30660-1);
С		Main Wheel	F150M* s/n F15001312 thru F15001332 (When equipped
			with D30580);
С		Main Wheel	F150M* s/n F15001333 thru F15001418 (When equipped
			with D30291-6);
С		Main Wheel	F150M* s/n F15001419 thru F15001428 (When equipped
			with D30660-1);
С		Main Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with D30660-1);
С		Main Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
			D30660-1);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500262 thru FA1500299 (When equipped with
			D30660-1);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500312 thru FA1500336 (When equipped with
			D30291-6);
С		Main Wheel	152 s/n all (When equipped with D30660-1);
С		Main Wheel	F152 s/n all (When equipped with D30660-1);
С		Main Wheel	FA152 s/n all (When equipped with D30660-1);
		Main Wheel	172D s/n all (When equipped with D-30660-1);
		Main Wheel	172E s/n all (When equipped with D-30660-1);
		Main Wheel	172F (T-41A) s/n all (When equipped with D-30660-1);
		Main Wheel	172G s/n all (When equipped with D-30660-1);
		Main Wheel	172H (T-41A) s/n all (When equipped with D-30660-1);



Rev Rev Replaces Location Model and Serial Number Range 153-30014 Main Wheel 1721 sin all (When equipped with D-30660-1); Main Wheel 1728 sin all (When equipped with D-30660-1); Main Wheel 1728 sin all (When equipped with D-30660-1); Main Wheel 1728 sin all (When equipped with D-30660-1); Main Wheel 1728 sin all (When equipped with D-30660-1); Main Wheel 1728 sin all (When equipped with D-30660-1); Main Wheel 1728 sin all (When equipped with D-30660-1); Main Wheel 1728 sin all (When equipped with D-30580); Main Wheel 1728 sin all (When equipped with D-30580); Main Wheel 1728 sin all (When equipped with D-30580); Main Wheel 1729 sin all (When equipped with D-30580); Main Wheel 1729 sin all (When equipped with D-30580); Main Wheel 1729 sin all (When equipped with D-30580); Main Wheel 1729 sin all (When equipped with D-30580); Main Wheel 1729 sin all (When equipped with D-30580); Main Wheel 1729 sin all (When equipped with D-30580); Main Wheel 1729 sin all (When equipped with D-30580); Main Wheel 1729 sin all (When equipped with D-30580); Main Wheel 1729 sin all (When equipped with D-30580); Main Wheel 1720 sin all (When equipped with D-30580); Main Wheel 1720 sin all (When equipped with D-30580); Main Wheel 1720 sin all (When equipped with D-30660-1); Main Wheel 1722 sin all (When equipped with D-30660-1); Main Wheel 1722 sin all (When equipped with D-30660-1); Main Wheel 1722 sin all (When equipped with D-30660-1); Main Wheel 1722 sin all (When equipped with D-30660-1); Main Wheel 1722 sin all (When equipped with D-30660-1); Main Wheel 1722 sin all (When equipped with D-30660-1); Main Wheel 1722 sin all (When equipped with D-30660-1); Main Wheel 1722 sin all (When equipped with D-30660-1); Main Wheel 1722 sin all (When equipped with D-30660-1); Main Wheel 1722 sin all (When equipped with D-30660-1); Main Wheel 1722 sin all (When equipped with D-30660-1); Main Wheel 1				
Main Wheel Main Wheel				
Main Wheel Main Wheel	WC 133-30014	155-500 14, 7500 14		
Main Wheel 172M* sin 172603458 (When equipped with D-30660-1); Main Wheel 172M* sin 17263459 thru 17265648 (When equipped with D-30660-1); Main Wheel 172M* sin 17266053 (When equipped with D-30580); Main Wheel 172M* sin 17266054 thru 17267584 (When equipped with D-30580); Main Wheel 172M* sin 17267585 thru 1726768399 (When equipped with D-30291-6); Main Wheel 172N* sin 17267585 thru 17268399 (When equipped with D-30291-6); Main Wheel 172N* sin 17268400 thru 17274009 (When equipped with D-30560-1); Main Wheel 172P* sin all (When equipped with D-30580); Main Wheel 172P* sin all (When equipped with D-30580); Main Wheel 172P* sin all (When equipped with D-30660-1); Main Wheel 172Q* sin all (When equipped with D-30660-1); Main Wheel 172Q* sin all (When equipped with D-30660-1); Main Wheel 172Q* sin all (When equipped with D-30660-1); Main Wheel 172C* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin all (When equipped with D-30660-1); Main Wheel F172E* sin F17200905 thru F17200904 (When equipped with D-30660-1); Main Wheel F172E* sin F17201515 thru F17201514 (When equipped with D-30660-1); F172M* sin F17201515 thru F17201633 (When equipped with D-30690-1); Main Wheel F172E* sin F17201515 thru F17201633 (When equipped with D-30600-1);				
with D-30660-1); Main Wheel 172M* s/n 17263459 thru 17265648 (When equipped with D-30660-1); Main Wheel 172M* s/n 17265648 thru 17266053 (When equipped with D-30580); Main Wheel 172M* s/n 17266054 thru 17267584 (When equipped with D-30291-6); Main Wheel 172M* s/n 17266054 thru 17267584 (When equipped with D-30291-6); Main Wheel 172M* s/n 17268400 thru 17274009 (When equipped with D-30580); Main Wheel 172N* s/n 17268400 thru 17274009 (When equipped with D-30660-1); Main Wheel 172P s/n all (When equipped with D-30291-6); Main Wheel 172P s/n all (When equipped with D-30660-1); Main Wheel 172P s/n all (When equipped with D-30660-1); Main Wheel 172O s/n all (When equipped with D-30660-1); Main Wheel 172D s/n all (When equipped with D-30660-1); Main Wheel 172R s/n all (When equipped with D-30660-1); Main Wheel 172R s/n all (When equipped with D-30660-1); Main Wheel 172E s/n all (When equipped with D-30660-1); Main Wheel 172E s/n all (When equipped with D-30660-1); Main Wheel 172E s/n all (When equipped with D-30660-1); Main Wheel 172E s/n all (When equipped with D-30660-1); M				
with D-30660-1); 172M* s/n 17265649 thru 17266053 (When equipped with D-30580); Main Wheel 172M* s/n 172656054 thru 17267584 (When equipped with D-30580); Main Wheel 172M* s/n 1726585 thru 17268399 (When equipped with D-30291-6); Main Wheel 172N* s/n 17268400 thru 17274009 (When equipped with D-30560); Main Wheel 172P* s/n all (When equipped with D-30580); Main Wheel 172P* s/n all (When equipped with D-30580); Main Wheel 172P* s/n all (When equipped with D-30580-1); Main Wheel 172P* s/n all (When equipped with D-30580-1); Main Wheel 172D* s/n all (When equipped with D-30560-1); Main Wheel 172O* s/n all (When equipped with D-30660-1); Main Wheel 172D* s/n all (When equipped with D-30660-1); Main Wheel 172D* s/n all (When equipped with D-30660-1); Main Wheel 172D* s/n all (When equipped with D-30660-1); Main Wheel 172E* s/n all (When equipped with D-30660-1); Main Wheel 172E* s/n all (When equipped with D-30660-1); Main Wheel 172E* s/n all (When equipped with D-30660-1); Main Wheel 172E* s/n all (When equipped with D-30660-1); Main Wheel 172E* s/n 17200320 thru F1720094 (Maiii Wileei	, , , , , , , , , , , , , , , , , , , ,
Main Wheel 172M* s/n 17266054 thru 17267584 (When equipped with D-30580); Main Wheel 172M* s/n 17266054 thru 17267584 (When equipped with D-30291-6); Main Wheel 172M* s/n 17267585 thru 17268399 (When equipped with D-30291-6); Main Wheel 172M* s/n 17267585 thru 17268399 (When equipped with D-30291-6); Main Wheel 172M* s/n 1726400 thru 17274099 (When equipped with D-30580); Main Wheel 172P s/n all (When equipped with D-30291-6); Main Wheel 172P s/n all (When equipped with D-30580), Main Wheel 172P s/n all (When equipped with D-30580-1); Main Wheel 172D s/n all (When equipped with D-30580); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172RG s/n all (When equipped with D-30660-1); Main Wheel 172RG s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172F s/n F17200905 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172F s/n F17200905 thru F17200754 (When equipped with D-30660-1); Main Wheel F172F s/n F17200905 thru F17200904 (When equipped with D-30660-1); Main Wheel F172F s/n F17201235 thru F17201485 (When equipped with D-30660-1); Main Wheel F172F s/n F17201466 thru F17201485 (When equipped with D-30660-1); Main Wheel F172F s/n F17201466 thru F17201514 (When equipped with D-30690); Main Wheel F172F s/n F17201466 thru F17201514 (When equipped with D-30291-6); Main Wheel F172F s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	
With D-30580); Main Wheel 172M* s/n 17260584 (When equipped with D-30291-6); Main Wheel 172M* s/n 17267585 thru 17268399 (When equipped with D-30291-6); Main Wheel 172N s/n all (When equipped with D-30580); Main Wheel 172N* s/n 17268400 thru 17274009 (When equipped with D-30660-1); Main Wheel 172P s/n all (When equipped with D-30291-6); Main Wheel 172P s/n all (When equipped with D-30660-1); Main Wheel 172P s/n all (When equipped with D-30660-1); Main Wheel 172D s/n all (When equipped with D-30680); Main Wheel 172Q s/n all (When equipped with D-30680-1); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172RG s/n all (When equipped with D-30660-1); Main Wheel F172B s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172B s/n all (When equipped with D-30660-1); Main Wheel F172B s/n all (When equipped with D-30660-1); Main Wheel F172B s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F17200656 thru F17200754 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200995			Main Mhaal	•
Main Wheel with D-30291-6); 172N* s'n 17267585 thru 17268399 (When equipped with D-30580); Main Wheel 172N s'n all (When equipped with D-30580); Main Wheel 172N s'n 17268400 thru 17274009 (When equipped with D-30680-1); Main Wheel 172P s'n all (When equipped with D-30580); Main Wheel 172P s'n all (When equipped with D-30580); Main Wheel 172D s'n all (When equipped with D-30680-1); Main Wheel 172Q s'n all (When equipped with D-30680-1); Main Wheel 172Q s'n all (When equipped with D-30660-1); Main Wheel 172RG s'n all (When equipped with D-30660-1); Main Wheel 172RG s'n all (When equipped with D-30660-1); Main Wheel 172ZE s'n all (When equipped with D-30660-1); Main Wheel F17ZE s'n all (When equipped with D-30660-1); Main Wheel F17ZE s'n all (When equipped with D-30660-1); Main Wheel F17ZE s'n all (When equipped with D-30660-1); Main Wheel F17ZE's s'n F17Z-0320 thru F17Z-0654 (When equipped with D-30660-1); Main Wheel F17ZE's s'n F17Z200905 thru F17Z00754 (When equipped with D-30660-1); Main Wheel F17ZE's s'n F17Z00905 thru F17Z01234 (When equipped with D-30660-1); Main Wh			Main Wheel	, , , , , , , , , , , , , , , , , , , ,
Main Wheel 172N* s/n 17267585 thru 17268399 (When equipped with D-30291-6); Main Wheel 172N* s/n all (When equipped with D-30580); Main Wheel 172N* s/n all (When equipped with D-30580); Main Wheel 172P s/n all (When equipped with D-30291-6); Main Wheel 172P s/n all (When equipped with D-30680); Main Wheel 172P s/n all (When equipped with D-30680-1); Main Wheel 172Q s/n all (When equipped with D-30680); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172RG s/n all (When equipped with D-30660-1); Main Wheel F172D s/n all (When equipped with D-30660-1); Main Wheel F172B s/n all (When equipped with D-30660-1); Main Wheel F172B s/n all (When equipped with D-30660-1); Main Wheel F172B s/n all (When equipped with D-30660-1); Main Wheel F172B s/n all (When equipped with D-30660-1); Main Wheel F172B s/n all (When equipped with D-30660-1); Main Wheel F172B s/n F17200905 thru F17200754 (When equipped with D-30660-1); Main Wheel F172B s/n F17200905 thru F17201234 (When equipped with D-30660-1);			Main Wheel	172M* s/n 17266054 thru 17267584 (When equipped
D-30291-6); Main Wheel Main				with D-30291-6);
Main Wheel 172N s'n all (When equipped with D-30580); Main Wheel 172N* s'n 17268400 thru 17274009 (When equipped with D-30660-1); Main Wheel 172P s/n all (When equipped with D-30291-6); Main Wheel 172P s/n all (When equipped with D-30680); Main Wheel 172P s/n all (When equipped with D-30660-1); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172E s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172E s'n all (When equipped with D-30660-1); Main Wheel F172H* s'n F172-0320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s'n F1720055 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s'n F17200901 thru F17200754 (When equipped with D-30660-1); Main Wheel F172M* s'n F17200901 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s'n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s'n F17201466 thru F17201485 (When equipped with D-30580-1); Main Wheel F172M* s'n F17201466 thru F17201514 (When equipp			Main Wheel	172N* s/n 17267585 thru 17268399 (When equipped with
Main Wheel 172N* s/n 17268400 thru 17274009 (When equipped with D-30660-1); Main Wheel 172P s/n all (When equipped with D-30291-6); Main Wheel 172P s/n all (When equipped with D-30680-1); Main Wheel 172P s/n all (When equipped with D-30680-1); Main Wheel 172Q s/n all (When equipped with D-30580); Main Wheel 172Q s/n all (When equipped with D-30580); Main Wheel 172Q s/n all (When equipped with D-30680-1); Main Wheel 172R s/n all (When equipped with D-30660-1); Main Wheel F172D s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0320 thru F172-0554 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K s/n all (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201244 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201456 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201446 (When equipped with D-30680)-1); <td></td> <td></td> <td></td> <td>D-30291-6);</td>				D-30291-6);
D-30660-1); Main Wheel 172P s/n all (When equipped with D-30291-6); Main Wheel 172P s/n all (When equipped with D-30580); Main Wheel 172P s/n all (When equipped with D-30660-1); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172RG s/n all (When equipped with D-30660-1); Main Wheel F172D s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172F s/n F172-0320 thru F172-0854 (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0320 thru F172-0854 (When equipped with D-30660-1); Main Wheel F172H* s/n F172-00955 thru F17200904 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30860)-1); F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172M* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	172N s/n all (When equipped with D-30580);
Main Wheel 172P s/n all (When equipped with D-30580); Main Wheel 172P s/n all (When equipped with D-30580); Main Wheel 172P s/n all (When equipped with D-3069-1); Main Wheel 172Q s/n all (When equipped with D-30580); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172R s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0030 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K* s/n F172009055 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201246 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201486 thru F17201485 (When equipped with D-30680-1); Main Wheel F172M* s/n F17201515 thru F17201633 (When equi			Main Wheel	172N* s/n 17268400 thru 17274009 (When equipped with
Main Wheel 172P s/n all (When equipped with D-30580); Main Wheel 172P s/n all (When equipped with D-30660-1); Main Wheel 172Q s/n all (When equipped with D-30580); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172R s/n all (When equipped with D-30660-1); Main Wheel 172R s/n all (When equipped with D-30660-1); Main Wheel F172D s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F1720320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F1720030 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200905 thru F17200754 (When equipped with D-30660-1); Main Wheel F172L* s/n F17200905 thru F17201904 (When equipped with D-30660-1); Main Wheel F172M* s/n F172019095 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30680-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580);				D-30660-1);
Main Wheel 172P s/n all (When equipped with D-30660-1); Main Wheel 172Q s/n all (When equipped with D-30291-6); Main Wheel 172Q s/n all (When equipped with D-30680); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172RG s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172G s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K s/n all (When equipped with D-30660-1); Main Wheel F172M* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30680-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201633 (When equipped with D-30291-6);			Main Wheel	172P s/n all (When equipped with D-30291-6);
Main Wheel 172Q s/n all (When equipped with D-30291-6); Main Wheel 172Q s/n all (When equipped with D-30580); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172RG s/n all (When equipped with D-30660-1); Main Wheel F172D s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172G s/n all (When equipped with D-30660-1); Main Wheel F172G s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200955 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K s/n all (When equipped with D-30660-1); Main Wheel F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30560-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201466 thru F17201514 (When equipped with D-30291-6);			Main Wheel	172P s/n all (When equipped with D-30580);
Main Wheel 172Q s/n all (When equipped with D-30580); Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172R s/n all (When equipped with D-30660-1); Main Wheel F172D s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K* s/n all (When equipped with D-30660-1); Main Wheel F172X* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); F172M* s/n F17201486 thru F17201514 (When equipped with D-30580); Main Wheel F172M* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	172P s/n all (When equipped with D-30660-1);
Main Wheel 172Q s/n all (When equipped with D-30660-1); Main Wheel 172RG s/n all (When equipped with D-30660-1); Main Wheel F172D s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K* s/n F172009055 thru F17200754 (When equipped with D-30660-1); Main Wheel F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201466 thru F17201514 (When equipped with D-30291-6); Main Wheel F172M* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	172Q s/n all (When equipped with D-30291-6);
Main Wheel 172RG s/n all (When equipped with D-30660-1); Main Wheel F172D s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172G s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K s/n all (When equipped with D-30660-1); Main Wheel F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172M* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	172Q s/n all (When equipped with D-30580);
Main Wheel F172D s/n all (When equipped with D-30660-1); Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172G s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K s/n all (When equipped with D-30660-1); Main Wheel F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	172Q s/n all (When equipped with D-30660-1);
Main Wheel F172E s/n all (When equipped with D-30660-1); Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172G s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172M* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	172RG s/n all (When equipped with D-30660-1);
Main Wheel F172F s/n all (When equipped with D-30660-1); Main Wheel F172G s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K s/n all (When equipped with D-30660-1); Main Wheel F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	F172D s/n all (When equipped with D-30660-1);
Main Wheel F172G s/n all (When equipped with D-30660-1); Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K s/n all (When equipped with D-30660-1); Main Wheel F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	F172E s/n all (When equipped with D-30660-1);
Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K s/n all (When equipped with D-30660-1); Main Wheel F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	F172F s/n all (When equipped with D-30660-1);
with D-30660-1); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K s/n all (When equipped with D-30660-1); Main Wheel F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	F172G s/n all (When equipped with D-30660-1);
Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1); Main Wheel F172K s/n all (When equipped with D-30660-1); Main Wheel F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	· · · · ·
with D-30660-1); Main Wheel F172K s/n all (When equipped with D-30660-1); Main Wheel F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);				
Main Wheel F172K s/n all (When equipped with D-30660-1); Main Wheel F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	
Main Wheel F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Whool	
with D-30660-1); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);				
with D-30660-1); Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wileei	· · · · · ·
Main Wheel F172M* s/n F17201235 thru F17201465 (When equipped with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
with D-30660-1); Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);				with D-30660-1);
Main Wheel F172M* s/n F17201466 thru F17201485 (When equipped with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wheel	· · · · · · · · · · · · · · · · · · ·
with D-30580); Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main Wha = !	
Main Wheel F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			Main wheel	· · · · · ·
with D-30291-6); Main Wheel F172N* s/n F17201515 thru F17201633 (When equipped with D-30291-6);			N 4 = : NA // I	,,
with D-30291-6);			Main vyneei	· · · · · · · · · · · · · · · · · · ·
<i>,</i> ·			Main Wheel	F172N* s/n F17201515 thru F17201633 (When equipped
			Main Wheel	, .



Rev Part Number MC153-30014	Replaces 153-30014, A30014	<u>Location</u> Main Wheel	Model and Serial Number Range F172N* s/n F17201634 thru F17202039 (When equipped
	•		with D-30660-1);
		Main Wheel	F172P s/n all (When equipped with D-30291-6);
		Main Wheel	F172P s/n all (When equipped with D-30580);
		Main Wheel	F172P s/n all (When equipped with D-30660-1);
		Main Wheel	FP172 s/n all (When equipped with D-30660-1);
		Main Wheel	FR172J* s/n FR1720420 thru FR17200590 (When
			equipped with D-30660-1);
		Main Wheel	FR172K s/n all (When equipped with D-30291-6);
		Main Wheel	FR172K s/n all (When equipped with D-30660-1);
		Main Wheel	P172D s/n all (When equipped with D-30660-1);
		Main Wheel	R172K s/n all (When equipped with D-30291-6);
		Main Wheel	R172K s/n all (When equipped with D-30660-1);
		Main Wheel	177 s/n all (When equipped with D-30291-6);
		Main Wheel	177 s/n all (When equipped with D-30580);
		Main Wheel	177 s/n all (When equipped with D-30660-1);
		Main Wheel	177B* s/n 17702314 thru 17702347 (When equipped with
			D-30580);
		Main Wheel	177B* s/n 17702348 thru 17702614 (When equipped with
			D-30291-6);
		Main Wheel	177B* s/n 17702615 thru 17702752 (When equipped with
			D-30660-1);
		Main Wheel	177RG* s/n 177RG0788 thru 177RG0805 (When
			equipped with D-30580);
		Main Wheel	177RG* s/n 177RG0805 thru 177RG1108 (When
			equipped with D-30291-6);
		Main Wheel	177RG* s/n 177RG1109 thru 177RG1366 (When
			equipped with D-30660-1);
		Main Wheel	F177RG* s/n F177RG0139 thru F177RG0144 (When
			equipped with D-30580);
		Main Wheel	F177RG* s/n F177RG0145 thru F177RG0172 (When
			equipped with D-30291-6);
		Main Wheel	F177RG* s/n F177RG0173 thru F177RG0177 (When
			equipped with D-30660-1);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
			D-30291-1);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
			D-30291-3);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			D-30291-1);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			D-30291-3);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			D-30660-3);
D		Main Wheel	180K* s/n 18052771 thru 18052924 (When equipped with
			D-30291-1);



Rev Part Number MC153-30014	Replaces 153-30014, A30014	<u>Location</u> Main Wheel	Model and Serial Number Range 180K* s/n 18052771 thru 18052924 (When equipped with
			D-30291-3);
D		Main Wheel	180K* s/n 18052925 thru 18053203 (When equipped with
			D-30660-2);
D		Main Wheel	182P* s/n 18262466 thru 18264307 (When equipped with
			D-30580);
D		Main Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
			D-30660-1);
D		Main Wheel	182P* s/n 18264308 thru 18265175 (When equipped with
			D-30291-6);
D		Main Wheel	182Q* s/n 18265176 thru 18265328 (When equipped
			with D-30291-6);
D		Main Wheel	182Q* s/n 18265329 thru 18267715 (When equipped
			with D-30660-1);
D		Main Wheel	182R s/n all (When equipped with D-30291-6);
D		Main Wheel	182R s/n all (When equipped with D-30660-1);
D		Main Wheel	182R s/n all (When equipped with D-30660-3);
D		Main Wheel	F182P s/n all (When equipped with D-30291-6);
D		Main Wheel	F182Q s/n all (When equipped with D-30291-6);
D		Main Wheel	F182Q* s/n F18200074 thru F18200169 (When equipped
			with D-30660-1);
D		Main Wheel	FR182 s/n all (When equipped with D-30660-3);
D		Main Wheel	R182 s/n all (When equipped with D-30660-3);
D		Main Wheel	T182 s/n all (When equipped with D-30291-6);
D		Main Wheel	T182 s/n all (When equipped with D-30660-3);
D		Main Wheel	TR182 s/n all (When equipped with D-30660-3);
D		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped with D-30291-1);
D		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
			with D-30291-3);
D		Main Wheel	A185F* s/n 18502311 thru 18503504 (When equipped
			with D-30291-1);
D		Main Wheel	A185F* s/n 18502311 thru 18503504 (When equipped
			with D-30291-3);
D		Main Wheel	A185F* s/n 18503505 thru 18504448 (When equipped
			with D-30660-2);
D		Aux Wheel	206 s/n all (When equipped with D-30665);
D		Aux Wheel	P206 s/n all (When equipped with D-30665);
D		Aux Wheel	P206A s/n all (When equipped with D-30665);
D		Aux Wheel	P206B s/n all (When equipped with D-30665);
D		Aux Wheel	P206C s/n all (When equipped with D-30665);
D		Aux Wheel	P206D s/n all (When equipped with D-30665);
D		Aux Wheel	P206E s/n all (When equipped with D-30665);
D		Aux Wheel	TP206A s/n all (When equipped with D-30665);
D		Aux Wheel	TP206B s/n all (When equipped with D-30665);
D		Aux Wheel	TP206C s/n all (When equipped with D-30665);
1			



Rev Part Number MC153-30014	Replaces 153-30014, A30014	<u>Location</u> Aux Wheel	Model and Serial Number Range TP206D s/n all (When equipped with D-30665);
D		Aux Wheel	TP206E s/n all (When equipped with D-30665);
D		Aux Wheel	TU206A s/n all (When equipped with D-30665);
D		Aux Wheel	TU206B s/n all (When equipped with D-30665);
D		Aux Wheel	TU206C s/n all (When equipped with D-30665);
D		Aux Wheel	TU206D s/n all (When equipped with D-30665);
D		Aux Wheel	TU206E s/n all (When equipped with D-30665);
D		Aux Wheel	TU206F* s/n U20601701 thru U20602199 (When
			equipped with D-30665);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with D-30660-2);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with D-30660-3);
D		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with D-30665);
D		Main Wheel	TU206G s/n all (When equipped with D-30660-2);
D		Main Wheel	TU206G s/n all (When equipped with D-30660-3);
D		Aux Wheel	TU206G s/n all (When equipped with D-30665);
D		Aux Wheel	U206 s/n all (When equipped with D-30665);
D		Aux Wheel	U206A s/n all (When equipped with D-30665);
D		Aux Wheel	U206B s/n all (When equipped with D-30665);
D		Aux Wheel	U206C s/n all (When equipped with D-30665);
D		Aux Wheel	U206D s/n all (When equipped with D-30665);
D		Aux Wheel	U206E s/n all (When equipped with D-30665);
D		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
			with D-30665);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with D-30660-2);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with D-30660-3);
D		Aux Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with D-30665);
D		Main Wheel	U206G s/n all (When equipped with D-30660-2);
D		Main Wheel	U206G s/n all (When equipped with D-30660-3);
D		Aux Wheel	U206G s/n all (When equipped with D-30665);
D		Aux Wheel	207* s/n 20700212 thru 20700362 (When equipped with
			D-30665);
D		Aux Wheel	207A s/n all (When equipped with D-30665);
D		Aux Wheel	T207* s/n 20700212 thru 20700362 (When equipped with
			D-30665);
D D		Aux Wheel	T207A s/n all (When equipped with D-30665);
		Main Wheel	210L* s/n 21060090 thru 21061573 (When equipped with
D		NA - : \	D-30660-3);
D		Main Wheel	210M s/n all (When equipped with D-30660-3);
		Main Wheel	210N* s/n 21062955 thru 21064135 (When equipped with D-30660-3);



Rev Part Number MC153-30014	Replaces 153-30014, A30014	<u>Location</u> Main Wheel	Model and Serial Number Range P210N s/n all (When equipped with D-30660-3);
D 1010 100-300 14	155-50014, A50014	Main Wheel	P210N s/n all (When equipped with D-30660-3);
D		Main Wheel	T210L* s/n 21060090 thru 21061573 (When equipped
		IVIAIII VVIICEI	, , , , , ,
D		Main Wheel	with D-30660-3); T210M s/n all (When equipped with D-30660-3);
D		Main Wheel	T210N* s/n 21062955 thru 21064135 (When equipped
		Maill Wileel	with D-30660-3);
D		Aux Wheel	310R s/n all (When equipped with D-30665);
D		Aux Wheel	T310R s/n all (When equipped with D-30665);
D		Aux Wheel	337G s/n all (When equipped with D-30665);
D		Aux Wheel	337H s/n all (When equipped with D-30665);
D		Aux Wheel	F337G s/n all (When equipped with D-30665);
D		Aux Wheel	F337H s/n all (When equipped with D-30665);
D		Aux Wheel	T337G* s/n P3370028 thru P3370282 (When equipped
			with D-30665);
D		Aux Wheel	T337H s/n all (When equipped with D-30665);
D		Aux Wheel	340 s/n all (When equipped with D-30665);
D		Aux Wheel	340A* s/n 340A0001 thru 340A1000 (When equipped
			with D-30665);
D		Aux Wheel	402 s/n all (When equipped with D-30665);
D		Aux Wheel	402A s/n all (When equipped with D-30665);
D		Aux Wheel	402B s/n all (When equipped with D-30665);
D		Aux Wheel	404 s/n all (When equipped with D-30665);
D		Aux Wheel	414 s/n all (When equipped with D-30665);
D		Aux Wheel	414A s/n all (When equipped with D-30665);
D		Aux Wheel	421 s/n all (When equipped with D-30665);
D		Aux Wheel	421A s/n all (When equipped with D-30665);
D		Aux Wheel	421B s/n all (When equipped with D-30665);
D		Aux Wheel	421C s/n all (When equipped with D-30665);
c MC153-30015	153-30015, A30015	Main Wheel	150L* s/n 15072004 thru 15074891 (When equipped with D30660-1);
С		Main Wheel	150M* s/n 15075782 thru 15077085 (When equipped
			with D30660-1);
С		Main Wheel	150M* s/n 15077086 thru 15077379 (When equipped
			with D30580);
С		Main Wheel	150M* s/n 15077381 thru 15077401 (When equipped with D30580);
С		Main Wheel	150M* s/n 15077404 thru 15079113 (When equipped
			with D30291-6);
С		Main Wheel	150M* s/n 15079114 thru 15079405 (When equipped with D30660-1);
С		Main Wheel	A150L* s/n A1500227 thru A1500430 (When equipped with D30660-1);
С		Main Wheel	A150L* s/n A1500431 thru A1500523 (When equipped with D30660-1);



Rev Part Number MC153-30015	Replaces 153-30015, A30015	<u>Location</u> Main Wheel	Model and Serial Number Range A150M* s/n A1500524 thru A1500620 (When equipped
			with D30660-1);
С		Main Wheel	A150M* s/n A1500621 thru A1500641 (When equipped
			with D30580);
С		Main Wheel	A150M* s/n A1500642 thru A1500734 (When equipped
			with D30291-6);
С		Main Wheel	F150L s/n all (When equipped with D30660-1);
С		Main Wheel	F150M* s/n F15001144 thru F15001418 (When equipped with D30660-1);
С		Main Wheel	F150M* s/n F15001312 thru F15001332 (When equipped
c			with D30580);
		Main Wheel	F150M* s/n F15001333 thru F15001418 (When equipped with D30291-6);
С		Main Wheel	F150M* s/n F15001419 thru F15001428 (When equipped
			with D30660-1);
С		Main Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with D30660-1);
С		Main Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
			D30660-1);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500262 thru FA1500299 (When equipped with
			D30660-1);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500312 thru FA1500336 (When equipped with
			D30291-6);
С		Main Wheel	F152 s/n all (When equipped with D30660-1);
С		Main Wheel	FA152 s/n all (When equipped with D30660-1);
		Main Wheel	172D s/n all (When equipped with D-30660-1);
		Main Wheel	172E s/n all (When equipped with D-30660-1);
		Main Wheel	172F (T-41A) s/n all (When equipped with D-30660-1);
		Main Wheel	172G s/n all (When equipped with D-30660-1);
		Main Wheel	172H (T-41A) s/n all (When equipped with D-30660-1);
		Main Wheel	172I s/n all (When equipped with D-30660-1);
		Main Wheel	172K s/n all (When equipped with D-30660-1);
		Main Wheel	172L s/n all (When equipped with D-30660-1);
		Main Wheel	172M* s/n 17260835 thru 17263458 (When equipped with D-30660-1);
		Main Wheel	172M* s/n 17263459 thru 17265648 (When equipped
			with D-30660-1);
		Main Wheel	172M* s/n 17265649 thru 17266053 (When equipped
			with D-30580);
		Main Wheel	172M* s/n 17266054 thru 17267584 (When equipped
			with D-30291-6);
		Main Wheel	172N* s/n 17267585 thru 17268399 (When equipped with
			D-30291-6);
			2 3320 ; 3/,



Rev Part Number	Replaces	<u>Location</u>	Model and Serial Number Range
MC153-30015	153-30015, A30015	Main Wheel	172N s/n all (When equipped with D-30580);
		Main Wheel	172N* s/n 17268400 thru 17274009 (When equipped with
			D-30660-1);
		Main Wheel	172P s/n all (When equipped with D-30291-6);
		Main Wheel	172P s/n all (When equipped with D-30580);
		Main Wheel	172P s/n all (When equipped with D-30660-1);
		Main Wheel	172Q s/n all (When equipped with D-30291-6);
		Main Wheel	172Q s/n all (When equipped with D-30580);
		Main Wheel	172Q s/n all (When equipped with D-30660-1);
		Main Wheel	172RG s/n all (When equipped with D-30660-1);
		Main Wheel	F172D s/n all (When equipped with D-30660-1);
		Main Wheel	F172E s/n all (When equipped with D-30660-1);
		Main Wheel	F172F s/n all (When equipped with D-30660-1);
		Main Wheel	F172G s/n all (When equipped with D-30660-1);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped with D-30660-1);
		Main Wheel	F172K s/n all (When equipped with D-30660-1);
		Main Wheel	F172L* s/n F17200901 thru F17200904 (When equipped
		Wall Willow	with D-30660-1);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
			with D-30660-1);
		Main Wheel	F172M* s/n F17201235 thru F17201465 (When equipped
			with D-30660-1);
		Main Wheel	F172M* s/n F17201466 thru F17201485 (When equipped
			with D-30580);
		Main Wheel	F172M* s/n F17201486 thru F17201514 (When equipped with D-30291-6);
		Main Wheel	F172N* s/n F17201515 thru F17201633 (When equipped
		Main Whaal	with D-30291-6);
		Main Wheel Main Wheel	F172N s/n all (When equipped with D-30580);
		Main Wheel	F172N* s/n F17201634 thru F17202039 (When equipped with D-30660-1);
		Main Wheel	F172P s/n all (When equipped with D-30291-6);
		Main Wheel	F172P s/n all (When equipped with D-30580);
		Main Wheel	F172P s/n all (When equipped with D-30660-1);
		Main Wheel	FP172 s/n all (When equipped with D-30660-1);
		Main Wheel	FR172J* s/n FR1720420 thru FR17200590 (When
			equipped with D-30660-1);
		Main Wheel	FR172K s/n all (When equipped with D-30291-6);
		Main Wheel	FR172K s/n all (When equipped with D-30660-1);
		Main Wheel	P172D s/n all (When equipped with D-30660-1);
		Main Wheel	R172K s/n all (When equipped with D-30291-6);
		Main Wheel	R172K s/n all (When equipped with D-30660-1);
		Main Wheel	177 s/n all (When equipped with D-30291-6);



Rev Part Number MC153-30015	Replaces 153-30015, A30015	<u>Location</u> Main Wheel	Model and Serial Number Range 177 s/n all (When equipped with D-30580);
		Main Wheel	177 s/n all (When equipped with D-30660-1);
		Main Wheel	177B* s/n 17702314 thru 17702347 (When equipped with
			D-30580);
		Main Wheel	177B* s/n 17702348 thru 17702614 (When equipped with
			D-30291-6);
		Main Wheel	177B* s/n 17702615 thru 17702752 (When equipped with
			D-30660-1);
		Main Wheel	177RG* s/n 177RG0788 thru 177RG0805 (When
			equipped with D-30580);
		Main Wheel	177RG* s/n 177RG0805 thru 177RG1108 (When
			equipped with D-30291-6);
		Main Wheel	177RG* s/n 177RG1109 thru 177RG1366 (When
			equipped with D-30660-1);
		Main Wheel	F177RG* s/n F177RG0139 thru F177RG0144 (When
			equipped with D-30580);
		Main Wheel	F177RG* s/n F177RG0145 thru F177RG0172 (When
			equipped with D-30291-6);
		Main Wheel	F177RG* s/n F177RG0173 thru F177RG0177 (When
			equipped with D-30660-1);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
			D-30291-1);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
			D-30291-3);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with D-30291-1);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			D-30291-3);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			D-30660-3);
D		Main Wheel	180K* s/n 18052771 thru 18052924 (When equipped with
			D-30291-1);
D		Main Wheel	180K* s/n 18052771 thru 18052924 (When equipped with
			D-30291-3);
D		Main Wheel	180K* s/n 18052925 thru 18053203 (When equipped with
			D-30660-2);
D		Main Wheel	182P* s/n 18262466 thru 18264307 (When equipped with
			D-30580);
D		Main Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
_			D-30660-1);
D		Main Wheel	182P* s/n 18264308 thru 18265175 (When equipped with
D.			D-30291-6);
D		Main Wheel	182Q* s/n 18265176 thru 18265328 (When equipped
D			with D-30291-6);
D		Main Wheel	182Q* s/n 18265329 thru 18267715 (When equipped with D-30660-1);



ev Part Number MC153-30015	<u>Replaces</u> 153-30015, A30015	<u>Location</u> Main Wheel	Model and Serial Number Range 182R s/n all (When equipped with D-30291-6);
)		Main Wheel	182R s/n all (When equipped with D-30660-1);
		Main Wheel	182R s/n all (When equipped with D-30660-3);
		Main Wheel	F182P s/n all (When equipped with D-30291-6);
		Main Wheel	F182Q s/n all (When equipped with D-30291-6);
		Main Wheel	F182Q* s/n F18200074 thru F18200169 (When equipped with D-30660-1);
		Main Wheel	FR182 s/n all (When equipped with D-30660-3);
		Main Wheel	R182 s/n all (When equipped with D-30660-3);
		Main Wheel	T182 s/n all (When equipped with D-30291-6);
		Main Wheel	T182 s/n all (When equipped with D-30660-3);
		Main Wheel	TR182 s/n all (When equipped with D-30660-3);
		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
		Main Wheel	with D-30291-1);
		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
		Main Whaal	with D-30291-3);
		Main Wheel	A185F* s/n 18502311 thru 18503504 (When equipped
		Main Whaal	with D-30291-1);
		Main Wheel	A185F* s/n 18502311 thru 18503504 (When equipped
		N 4 = : \ \ \ / = -	with D-30291-3);
		Main Wheel	A185F* s/n 18503505 thru 18504448 (When equipped
			with D-30660-2);
		Aux Wheel	206 s/n all (When equipped with D-30665);
		Aux Wheel	P206 s/n all (When equipped with D-30665);
		Aux Wheel	P206A s/n all (When equipped with D-30665);
		Aux Wheel	P206B s/n all (When equipped with D-30665);
		Aux Wheel	P206C s/n all (When equipped with D-30665);
		Aux Wheel	P206D s/n all (When equipped with D-30665);
		Aux Wheel	P206E s/n all (When equipped with D-30665);
		Aux Wheel	TP206A s/n all (When equipped with D-30665);
		Aux Wheel	TP206B s/n all (When equipped with D-30665);
		Aux Wheel	TP206C s/n all (When equipped with D-30665);
		Aux Wheel	TP206D s/n all (When equipped with D-30665);
		Aux Wheel	TP206E s/n all (When equipped with D-30665);
		Aux Wheel	TU206A s/n all (When equipped with D-30665);
		Aux Wheel	TU206B s/n all (When equipped with D-30665);
		Aux Wheel	TU206C s/n all (When equipped with D-30665);
		Aux Wheel	TU206D s/n all (When equipped with D-30665);
		Aux Wheel	TU206E s/n all (When equipped with D-30665);
		Aux Wheel	TU206F* s/n U20601701 thru U20602199 (When equipped with D-30665);
		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When equipped with D-30660-2);
		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
		Mail Milee	equipped with D-30660-3);
			equipped with D-30000-3),



Rev Part Numb	er Replaces	Location	Model and Serial Number Range
D MC153-30		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with D-30665);
D		Main Wheel	TU206G s/n all (When equipped with D-30660-2);
D		Main Wheel	TU206G s/n all (When equipped with D-30660-3);
D		Aux Wheel	TU206G s/n all (When equipped with D-30665);
D		Aux Wheel	U206 s/n all (When equipped with D-30665);
D		Aux Wheel	U206A s/n all (When equipped with D-30665);
D		Aux Wheel	U206B s/n all (When equipped with D-30665);
D		Aux Wheel	U206C s/n all (When equipped with D-30665);
D		Aux Wheel	U206D s/n all (When equipped with D-30665);
D		Aux Wheel	U206E s/n all (When equipped with D-30665);
D		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
D			with D-30665);
В		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped with D-30660-2);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
D		Aux Wheel	with D-30660-3); U206F* s/n U20602200 thru U20603521 (When equipped
		Aux Wileel	with D-30665);
D		Main Wheel	U206G s/n all (When equipped with D-30660-2);
D		Main Wheel	U206G s/n all (When equipped with D-30660-2);
D		Aux Wheel	U206G s/n all (When equipped with D-30665);
D		Aux Wheel	
		Aux Wheel	207* s/n 20700212 thru 20700362 (When equipped with D-30665);
D		Aux Wheel	207A s/n all (When equipped with D-30665);
D		Aux Wheel	T207* s/n 20700212 thru 20700362 (When equipped with D-30665);
D		Aux Wheel	T207A s/n all (When equipped with D-30665);
D		Main Wheel	210L* s/n 21060090 thru 21061573 (When equipped with
			D-30660-3);
D		Main Wheel	210M s/n all (When equipped with D-30660-3);
D		Main Wheel	210N* s/n 21062955 thru 21064135 (When equipped with
			D-30660-3);
D		Main Wheel	P210N s/n all (When equipped with D-30660-3);
D		Main Wheel	P210R s/n all (When equipped with D-30660-3);
D		Main Wheel	T210L* s/n 21060090 thru 21061573 (When equipped
			with D-30660-3);
D		Main Wheel	T210M s/n all (When equipped with D-30660-3);
D		Main Wheel	T210N* s/n 21062955 thru 21064135 (When equipped
			with D-30660-3);
D		Aux Wheel	310R s/n all (When equipped with D-30665);
D		Aux Wheel	T310R s/n all (When equipped with D-30665);
D		Aux Wheel	337G s/n all (When equipped with D-30665);
D		Aux Wheel	337H s/n all (When equipped with D-30665);
D		Aux Wheel	F337G s/n all (When equipped with D-30665);
D		Aux Wheel	F337H s/n all (When equipped with D-30665);



	Part Number MC153-30015	Replaces 153-30015, A30015	<u>Location</u> Aux Wheel	Model and Serial Number Range T337G* s/n P3370028 thru P3370282 (When equipped
		,		with D-30665);
D			Aux Wheel	T337H s/n all (When equipped with D-30665);
0			Aux Wheel	340 s/n all (When equipped with D-30665);
D			Aux Wheel	340A* s/n 340A0001 thru 340A1000 (When equipped
				with D-30665);
D			Aux Wheel	402 s/n all (When equipped with D-30665);
0			Aux Wheel	402A s/n all (When equipped with D-30665);
D			Aux Wheel	402B s/n all (When equipped with D-30665);
D			Aux Wheel	404 s/n all (When equipped with D-30665);
)			Aux Wheel	414 s/n all (When equipped with D-30665);
)			Aux Wheel	414A s/n all (When equipped with D-30665);
)			Aux Wheel	421 s/n all (When equipped with D-30665);
)			Aux Wheel	421A s/n all (When equipped with D-30665);
)			Aux Wheel	421B s/n all (When equipped with D-30665);
)			Aux Wheel	421C s/n all (When equipped with D-30665);
	NO454 00000	454.00000.0004		
	MC154-00300	154-00300, 3021	Main Gear	120 s/n all (When Equipped With 40-97A / STC
:			Main Coor	SA13GL);
			Main Gear	140 s/n all (When Equipped With 40-97A / STC
			Main Coor	SA13GL);
			Main Gear	140A s/n all (When Equipped With 40-97A / STC
			Main Mhaal	SA13GL);
			Main Wheel	150D s/n all (When equipped with 40-79);
;			Main Wheel	150D s/n all (When equipped with 40-79A);
5			Main Wheel	150E s/n all (When equipped with 40-79);
;			Main Wheel	150E s/n all (When equipped with 40-79A);
<i>,</i>			Main Wheel	150F s/n all (When equipped with 40-97);
			Main Wheel	150F s/n all (When equipped with 40-97A);
;			Main Wheel	150G* s/n 15064533 thru 15065809 (When equipped
			NA - 1 - NA/I I	with 40-97);
			Main Wheel	150G s/n all (When equipped with 40-97A);
;			Main Wheel	150H s/n all (When equipped with 40-97A);
			Main Wheel	150J s/n all (When equipped with 40-97A);
;			Main Wheel	150K s/n all (When equipped with 40-97A);
•			Main Wheel	150L* s/n 15072004 thru 15074891 (When equipped with
:			Main What	D3060-1);
			Main Wheel	150L s/n all (When equipped with 40-113);
			Main Wheel	150M* s/n 15075782 thru 15077085 (When equipped with D30660-1);
;			Main Wheel	150M s/n all (When equipped with 40-113);
;			Main Wheel	150M* s/n 15077086 thru 15077379 (When equipped with D30580);
С			Main Wheel	150M* s/n 15077381 thru 15077401 (When equipped with D30580);



Rev Part Number	Replaces	<u>Location</u>	Model and Serial Number Range
c MC154-00300	154-00300, 3021	Main Wheel	150M* s/n 15077404 thru 15079113 (When equipped
			with D30291-6);
С		Main Wheel	150M* s/n 15079114 thru 15079405 (When equipped
			with D30660-1);
C		Main Wheel	A150K s/n all (When equipped with 40-97A);
С		Main Wheel	A150L* s/n A1500227 thru A1500430 (When equipped with D30660-1);
С		Main Wheel	A150L s/n all (When equipped with 40-113);
С		Main Wheel	A150L* s/n A1500431 thru A1500523 (When equipped
			with D30660-1);
С		Main Wheel	A150M* s/n A1500524 thru A1500620 (When equipped
			with D30660-1);
С		Main Wheel	A150M s/n all (When equipped with 40-113);
С		Main Wheel	A150M* s/n A1500621 thru A1500641 (When equipped
			with D30580);
С		Main Wheel	A150M* s/n A1500642 thru A1500734 (When equipped
			with D30291-6);
С		Main Wheel	F150F s/n all (When equipped with 40-97);
С		Main Wheel	F150F s/n all (When equipped with 40-97A);
С		Main Wheel	F150G* s/n F150-0068 thru F150-0167 (When equipped with 40-97);
С		Main Wheel	F150G s/n all (When equipped with 40-97A);
С		Main Wheel	F150H s/n all (When equipped with 40-97A);
С		Main Wheel	F150J s/n all (When equipped with 40-97A);
С		Main Wheel	F150K s/n all (When equipped with 40-97A);
С		Main Wheel	F150L s/n all (When equipped with 40-113);
С		Main Wheel	F150L s/n all (When equipped with D30660-1);
С		Main Wheel	F150M* s/n F15001144 thru F15001418 (When equipped with D30660-1);
С		Main Wheel	F150M s/n all (When equipped with 40-113);
С		Main Wheel	F150M* s/n F15001312 thru F15001332 (When equipped
			with D30580);
С		Main Wheel	F150M* s/n F15001333 thru F15001418 (When equipped
			with D30291-6);
С		Main Wheel	F150M* s/n F15001419 thru F15001428 (When equipped
			with D30660-1);
С		Main Wheel	FA150K s/n all (When equipped with 40-97A);
С		Main Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with 40-113);
С		Main Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with D30660-1);
С		Main Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
			40-113);



Rev Part Number	Replaces	Location	Model and Serial Number Range
c MC154-00300	154-00300, 3021	Main Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
			D30660-1);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500262 thru FA1500299 (When equipped with
			D30660-1);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316) s/n all
			(When equipped with 40-113);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500312 thru FA1500336 (When equipped with
			D30291-6);
С		Main Wheel	152 s/n all (When equipped with 40-113);
С		Main Wheel	152 s/n all (When equipped with D30660-1);
C		Main Wheel	A152 s/n all (When equipped with 40-113);
C		Main Wheel	A152 s/n all (When equipped with D30660-1);
C C		Main Wheel	F152 s/n all (When equipped with 40-113);
C		Main Wheel	F152 s/n all (When equipped with D30660-1);
C		Main Wheel	FA152 s/n all (When equipped with 40-113);
E		Main Wheel	FA152 s/n all (When equipped with D30660-1);
		Main Gear	170 s/n all (When Equipped With 40-97A / STC
E		Main Coor	SA13GL);
		Main Gear	170A s/n all (When Equipped With 40-97A / STC
E		Main Gear	SA13GL);
_		Main Geal	170B s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Gear	SA13GL); 172 s/n all (When Equipped With 40-97A / STC
		Main Ocai	SA13GL);
E		Main Gear	172A s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	172B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	172C s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	172D s/n all (When equipped with 40-113);
		Main Wheel	172D s/n all (When equipped with 40-97A);
E		Main Gear	172D s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	172D s/n all (When equipped with D-30660-1);
		Main Wheel	172E s/n all (When equipped with 40-113);
		Main Wheel	172E s/n all (When equipped with 40-97A);
E		Main Gear	172E s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	172E s/n all (When equipped with D-30660-1);
		Main Wheel	172F (T-41A) s/n all (When equipped with 40-113);
		Main Wheel	172F (T-41A) s/n all (When equipped with 40-97A);
		Main Wheel	172F (T-41A) s/n all (When equipped with D-30660-1);



Rev Part Number MC154-00300	Replaces 154-00300, 3021	<u>Location</u> Main Wheel	Model and Serial Number Range 172G s/n all (When equipped with 40-113);
	,	Main Wheel	172G s/n all (When equipped with 40-97A);
		Main Wheel	172G s/n all (When equipped with D-30660-1);
		Main Wheel	172H (T-41A) s/n all (When equipped with 40-113);
		Main Wheel	172H (T-41A) s/n all (When equipped with 40-97A);
		Main Wheel	172H (T-41A) s/n all (When equipped with D-30660-1);
		Main Wheel	172I s/n all (When equipped with 40-113);
		Main Wheel	172I s/n all (When equipped with 40-97A);
		Main Wheel	172I s/n all (When equipped with D-30660-1);
		Main Wheel	172K s/n all (When equipped with 40-113);
		Main Wheel	172K s/n all (When equipped with 40-97A);
		Main Wheel	172K s/n all (When equipped with D-30660-1);
		Main Wheel	172L s/n all (When equipped with 40-113);
		Main Wheel	172L s/n all (When equipped with 40-97A);
		Main Wheel	172L s/n all (When equipped with D-30660-1);
		Main Wheel	172M* s/n 17260759 thru 17263458 (When equipped with 40-113);
		Main Wheel	172M* s/n 17260759 thru 17263458 (When equipped with 40-97A);
		Main Wheel	172M* s/n 17260835 thru 17263458 (When equipped with D-30660-1);
		Main Wheel	172M* s/n 17263459 thru 17265648 (When equipped with D-30660-1);
		Main Wheel	172M* s/n 17263459 thru 17267584 (When equipped with 40-113);
		Main Wheel	172M* s/n 17265649 thru 17266053 (When equipped with D-30580);
		Main Wheel	172M* s/n 17266054 thru 17267584 (When equipped with D-30291-6);
		Main Wheel	172N* s/n 17267585 thru 17268399 (When equipped with D-30291-6);
		Main Wheel	172N s/n all (When equipped with 40-113);
		Main Wheel	172N s/n all (When equipped with D-30580);
		Main Wheel	172N* s/n 17268400 thru 17274009 (When equipped with D-30660-1);
		Main Wheel	172P s/n all (When equipped with 40-113);
		Main Wheel	172P s/n all (When equipped with D-30291-6);
		Main Wheel	172P s/n all (When equipped with D-30580);
		Main Wheel	172P s/n all (When equipped with D-30660-1);
		Main Wheel	172Q s/n all (When equipped with 40-113);
		Main Wheel	172Q s/n all (When equipped with D-30291-6);
		Main Wheel	172Q s/n all (When equipped with D-30580);
		Main Wheel	172Q s/n all (When equipped with D-30660-1);
		Main Wheel	172R s/n all (When equipped with 40-113);
		Main Wheel	172RG s/n all (When equipped with 40-113);
		Main Wheel	172RG s/n all (When equipped with D-30660-1);



Rev Part Number MC154-00300	Replaces 154-00300, 3021	<u>Location</u> Main Wheel	Model and Serial Number Range 172S s/n all (When equipped with 40-113);
We for deed	101 00000, 0021	Main Wheel	F172D s/n all (When equipped with 40-113);
		Main Wheel	F172D s/n all (When equipped with 40-97A);
		Main Wheel	F172D s/n all (When equipped with D-30660-1);
		Main Wheel	F172E s/n all (When equipped with 40-113);
		Main Wheel	F172E s/n all (When equipped with 40-97A);
		Main Wheel	F172E s/n all (When equipped with D-30660-1);
		Main Wheel	F172F s/n all (When equipped with 40-113);
		Main Wheel	F172F s/n all (When equipped with 40-97A);
		Main Wheel	F172F s/n all (When equipped with D-30660-1);
		Main Wheel	F172G s/n all (When equipped with 40-113);
		Main Wheel	F172G s/n all (When equipped with 40-97A);
		Main Wheel	F172G s/n all (When equipped with D-30660-1);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped
			with 40-113);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped
			with 40-97A);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped
			with D-30660-1);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
			with 40-113);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
			with 40-97A);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
			with D-30660-1);
		Main Wheel	F172K s/n all (When equipped with 40-113);
		Main Wheel	F172K s/n all (When equipped with 40-97A);
		Main Wheel	F172K s/n all (When equipped with D-30660-1);
		Main Wheel	F172L s/n all (When equipped with 40-113);
		Main Wheel	F172L s/n all (When equipped with 40-97A);
		Main Wheel	F172L* s/n F17200901 thru F17200904 (When equipped with D-30660-1);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
		IVIAIII VVIICCI	with 40-113);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
		Wall Wilcel	with 40-97A);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
			with D-30660-1);
		Main Wheel	F172M* s/n F17201235 thru F17201465 (When equipped
			with D-30660-1);
		Main Wheel	F172M* s/n F17201235 thru F17201514 (When equipped
		Wall Wilco	with 40-113);
		Main Wheel	F172M* s/n F17201466 thru F17201485 (When equipped
		Wall Wilco	with D-30580);
		Main Wheel	F172M* s/n F17201486 thru F17201514 (When equipped
			with D-30291-6);
l			



Rev Part Number	<u>Replaces</u>	<u>Location</u>	Model and Serial Number Range
MC154-00300	154-00300, 3021	Main Wheel	F172N* s/n F17201515 thru F17201633 (When equipped
			with D-30291-6);
		Main Wheel	F172N s/n all (When equipped with 40-113);
		Main Wheel	F172N s/n all (When equipped with D-30580);
		Main Wheel	F172N* s/n F17201634 thru F17202039 (When equipped
			with D-30660-1);
		Main Wheel	F172P s/n all (When equipped with 40-113);
		Main Wheel	F172P s/n all (When equipped with D-30291-6);
		Main Wheel	F172P s/n all (When equipped with D-30580);
		Main Wheel	F172P s/n all (When equipped with D-30660-1);
		Main Wheel	FP172 s/n all (When equipped with 40-113);
		Main Wheel	FP172 s/n all (When equipped with 40-97A);
		Main Wheel	FP172 s/n all (When equipped with D-30660-1);
		Main Wheel	FR172E s/n all (When equipped with 40-113);
		Main Wheel	FR172E s/n all (When equipped with 40-97A);
		Main Wheel	FR172F s/n all (When equipped with 40-113);
		Main Wheel	FR172F s/n all (When equipped with 40-97A);
		Main Wheel	FR172G s/n all (When equipped with 40-113);
		Main Wheel	FR172G s/n all (When equipped with 40-97A);
		Main Wheel	FR172H s/n all (When equipped with 40-113);
		Main Wheel	FR172H s/n all (When equipped with 40-97A);
		Main Wheel	FR172J* s/n FR1720420 thru FR17200590 (When
			equipped with D-30660-1);
		Main Wheel	FR172J s/n all (When equipped with 40-113);
		Main Wheel	FR172J s/n all (When equipped with 40-97A);
		Main Wheel	FR172K s/n all (When equipped with 40-113);
		Main Wheel	FR172K s/n all (When equipped with D-30291-6);
		Main Wheel	FR172K s/n all (When equipped with D-30660-1);
		Main Wheel	P172D s/n all (When equipped with 40-113);
		Main Wheel	P172D s/n all (When equipped with 40-97A);
E		Main Gear	P172D s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	P172D s/n all (When equipped with D-30660-1);
		Main Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-113);
		Main Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-97A);
		Main Wheel	R172F (T-41D) s/n all (When equipped with 40-113);
		Main Wheel	R172F (T-41D) s/n all (When equipped with 40-97A);
		Main Wheel	R172G (T-41C,D) s/n all (When equipped with 40-113);
		Main Wheel	R172G (T-41C,D) s/n all (When equipped with 40-97A);
		Main Wheel	R172H (T-41D) s/n all (When equipped with 40-113);
		Main Wheel	R172H (T-41D) s/n all (When equipped with 40-97A);
		Main Wheel	R172K s/n all (When equipped with 40-113);
		Main Wheel	R172K s/n all (When equipped with D-30291-6);
		Main Wheel	R172K s/n all (When equipped with D-30660-1);
E		Main Gear	175 s/n all (When Equipped With 40-97A / STC
			SA13GL);
			•



D D IN I	D 1	1	M II IO IIN I D
Rev Part Number	Replaces	Location	Model and Serial Number Range
^E MC154-00300	154-00300, 3021	Main Gear	175A s/n all (When Equipped With 40-97A / STC
E		Main Oann	SA13GL);
_		Main Gear	175B s/n all (When Equipped With 40-97A / STC
E			SA13GL);
_		Main Gear	175C s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	177 s/n all (When equipped with 40-97A);
		Main Wheel	177 s/n all (When equipped with D-30291-6);
		Main Wheel	177 s/n all (When equipped with D-30580);
		Main Wheel	177 s/n all (When equipped with D-30660-1);
		Main Wheel	177A s/n all (When equipped with 40-97A);
		Main Wheel	177B* s/n 17701371 thru 17701530 (When equipped with
			40-97A);
		Main Wheel	177B* s/n 17701531 thru 17702752 (When equipped with
			40-113);
		Main Wheel	177B* s/n 17702314 thru 17702347 (When equipped with
			D-30580);
		Main Wheel	177B* s/n 17702348 thru 17702614 (When equipped with
			D-30291-6);
		Main Wheel	177B* s/n 17702615 thru 17702752 (When equipped with
			D-30660-1);
		Main Wheel	177RG s/n all (When equipped with 40-113);
		Main Wheel	177RG* s/n 177RG0788 thru 177RG0805 (When
			equipped with D-30580);
		Main Wheel	177RG* s/n 177RG0805 thru 177RG1108 (When
			equipped with D-30291-6);
		Main Wheel	177RG* s/n 177RG1109 thru 177RG1366 (When
			equipped with D-30660-1);
		Main Wheel	F177RG s/n all (When equipped with 40-113);
		Main Wheel	F177RG* s/n F177RG0139 thru F177RG0144 (When
			equipped with D-30580);
		Main Wheel	F177RG* s/n F177RG0145 thru F177RG0172 (When
			equipped with D-30291-6);
		Main Wheel	F177RG* s/n F177RG0173 thru F177RG0177 (When
			equipped with D-30660-1);
E		Main Gear	180 s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180 s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180 s/n all (When Equipped With 40-97A / STC
		Main Soai	SA13GL);
E		Main Gear	180A s/n all (When Equipped With 40-75B / STC
		Main Cour	SA62GL);
E		Main Gear	180A s/n all (When Equipped With 40-75D or 40-75T /
		Widin Ocai	STC SA63GL);
			OTO OAUJOLJ,



Rev Part Number MC154-00300	Replaces 154-00300, 3021	<u>Location</u> Main Gear	Model and Serial Number Range 180A s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180B s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Gear	180B s/n all (When Equipped With 40-75D or 40-75T /
		Main Geal	STC SA63GL);
E		Main Gear	180B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180C s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180C s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180C s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180D s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180D s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180D s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180E s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180E s/n all (When Equipped With 40-75D or 40-75T /
_			STC SA63GL);
E		Main Gear	180E s/n all (When Equipped With 40-97A / STC
E		M : 0	SA13GL);
_ E		Main Gear	180F s/n all (When Equipped With 40-75B / STC
E		Main Coor	SA62GL);
_		Main Gear	180F s/n all (When Equipped With 40-75D or 40-75T /
E		Main Gear	STC SA63GL); 180F s/n all (When Equipped With 40-97A / STC
		Main Ocai	SA13GL);
D		Main Wheel	180G s/n all (When equipped with 40-75 or 40-75B);
E		Main Gear	180G s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	180H s/n all (When equipped with 40-75 or 40-75B);
E		Main Gear	180H s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180H s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	180H* s/n 18052011 thru 18052284 (When equipped with
			40-75D);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When Equipped
			With 40-75B / STC SA62GL);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
			40-75D);



Rev Part Number	Replaces	Location	Model and Serial Number Range
E MC154-00300	154-00300, 3021	Main Gear	180J* s/n 18052285 thru 18052384 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
			D-30291-1);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
			D-30291-3);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			40-75B);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			40-75D);
E		Main Gear	180J* s/n 18052385 thru 18052770 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			D-30291-1);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			D-30291-3);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			D-30660-3);
D		Main Wheel	180K* s/n 18052771 thru 18052924 (When equipped with
			D-30291-1);
D		Main Wheel	180K* s/n 18052771 thru 18052924 (When equipped with
			D-30291-3);
D		Main Wheel	180K s/n all (When equipped with 40-75B);
D		Main Wheel	180K s/n all (When equipped with 40-75D);
E		Main Gear	180K s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	180K* s/n 18052925 thru 18053203 (When equipped with
			D-30660-2);
E		Main Gear	182 s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	182A s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	182B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	182C s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	182D s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	182E s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	182F s/n all (When Equipped With 40-97A / STC
_			SA13GL);
E		Main Gear	182G s/n all (When Equipped With 40-97A / STC
_			SA13GL);
D		Main Wheel	182H s/n all (When equipped with 40-97A);
D		Main Wheel	182J s/n all (When equipped with 40-97A);



Day Dart Number	Danlassa	Location	Madal and Carial Number Dance
Rev Part Number MC154-00300	<u>Replaces</u> 154-00300, 3021	<u>Location</u> Main Wheel	Model and Serial Number Range 182K s/n all (When equipped with 40-97A);
D	104 00000, 0021	Main Wheel	182L s/n all (When equipped with 40-97A);
D		Main Wheel	182M s/n all (When equipped with 40-97A);
D		Main Wheel	182N* s/n 18260056 thru 18260445 (When equipped with
		Walli Wilcel	40-97A);
D		Main Wheel	182N* s/n 18260446 thru 18260825 (When equipped with
			40-113);
D		Main Wheel	182P* s/n 18260826 thru 18262465 (When equipped with
			40-113);
D		Main Wheel	182P* s/n 18262466 thru 18264307 (When equipped with
			D-30580);
D		Main Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
			40-113);
D		Main Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
			D-30660-1);
D		Main Wheel	182P* s/n 18264308 thru 18265175 (When equipped with
			D-30291-6);
D		Main Wheel	182Q* s/n 18265176 thru 18265328 (When equipped
			with D-30291-6);
D		Main Wheel	182Q s/n all (When equipped with 40-113);
D		Main Wheel	182Q* s/n 18265329 thru 18267715 (When equipped
			with D-30660-1);
D		Main Wheel	182R s/n all (When equipped with D-30291-6);
D		Main Wheel	182R s/n all (When equipped with D-30660-1);
D		Main Wheel	182R s/n all (When equipped with D-30660-3);
D		Main Wheel	182S s/n all (When equipped with 40-75B);
D		Main Wheel	182T s/n all (When equipped with 40-75B);
D		Main Wheel	A182J s/n all (When equipped with 40-97A);
D D		Main Wheel	A182K s/n all (When equipped with 40-97A);
D		Main Wheel	A182L s/n all (When equipped with 40-97A);
		Main Wheel	A182N* s/n A182-0117 thru A182-0136 (When equipped with 40-97A);
D		Main Wheel	A182N* s/n A182-0137 thru A182-0148 (When equipped
			with 40-113);
D		Main Wheel	F182P s/n all (When equipped with 40-113);
D		Main Wheel	F182P s/n all (When equipped with D-30291-6);
D		Main Wheel	F182Q s/n all (When equipped with 40-113);
D		Main Wheel	F182Q s/n all (When equipped with D-30291-6);
D		Main Wheel	F182Q* s/n F18200074 thru F18200169 (When equipped
			with D-30660-1);
D		Main Wheel	FR182 s/n all (When equipped with D-30660-3);
D		Main Wheel	R182 s/n all (When equipped with D-30660-3);
D		Main Wheel	T182 s/n all (When equipped with D-30291-6);
D		Main Wheel	T182 s/n all (When equipped with D-30660-3);
D		Main Wheel	T182T s/n all (When equipped with 40-75B);
D		Main Wheel	TR182 s/n all (When equipped with D-30660-3);
1			



ev Part Number	Replaces	<u>Location</u>	Model and Serial Number Range
MC154-00300	154-00300, 3021	Main Gear	185 s/n all (When Equipped With 40-75B / STC SA62GL);
		Main Gear	185 s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
		Main Gear	185A s/n all (When Equipped With 40-75B / STC
			SA62GL);
		Main Gear	185A s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
		Main Gear	185B s/n all (When Equipped With 40-75B / STC
			SA62GL);
		Main Gear	185B s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
		Main Wheel	185C s/n all (When equipped with 40-75 or 40-75B);
		Main Gear	185C s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
		Main Wheel	185D s/n all (When equipped with 40-75 or 40-75B);
		Main Gear	185D s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
		Main Wheel	185E s/n all (When equipped with 40-75 or 40-75B);
		Main Gear	185E s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
		Main Wheel	A185E* s/n 185-0968 thru 185-1599 (When Equipped
			With 40-75B / STC SA62GL);
		Main Gear	A185E* s/n 185-0968 thru 185-1599 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
		Main Wheel	A185E* s/n 185-1471 thru 185-1599 (When equipped
			with 40-75D);
		Main Wheel	A185E* s/n 18501600 thru 18502090 (When Equipped
			With 40-75B / STC SA62GL);
		Main Wheel	A185E* s/n 18501600 thru 18502090 (When equipped
		Main Coor	with 40-75D);
		Main Gear	A185E* s/n 18501600 thru 18502090 (When Equipped
		Main Wheel	With 40-75D or 40-75T / STC SA63GL); A185F* s/n 18502091 thru 18502310 (When Equipped
		Wall Wilce	With 40-75B / STC SA62GL);
		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
			with 40-75D);
		Main Gear	A185F* s/n 18502091 thru 18502310 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
			with D-30291-1);
		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
			with D-30291-3);
		Main Wheel	A185F* s/n 18502311 thru 18503504 (When equipped
			with D-30291-1);

	McFarlane McFarlane Aviation, Inc. 696 East 1700 Road Baldwin City, Kansas									
Title:	ELIGIBILITY: WHEEL SEAL COMPONENTS CESSNA									
Size:	A	Scale:	NA	Drawn:	DPH		Sheet:	76	of	140
Drawin	Drawing Number: 6551						ľ	REVISION		
										F

ev Part Number	Replaces	<u>Location</u>	Model and Serial Number Range
P MC154-00300	154-00300, 3021	Main Wheel	A185F* s/n 18502311 thru 18503504 (When equipped
_			with D-30291-3);
)		Main Wheel	A185F* s/n 18502311 thru 18504448 (When equipped
_			with 40-75B);
)		Main Wheel	A185F* s/n 18502311 thru 18504448 (When equipped
			with 40-75D);
		Main Wheel	A185F* s/n 18503505 thru 18504448 (When equipped with D-30660-2);
		Main Wheel	188 s/n all (When equipped with 40-75 or 40-75B);
		Main Wheel	188A s/n all (When equipped with 40-75B);
		Main Wheel	188B s/n all (When equipped with 40-75B);
		Main Wheel	188B s/n all (When equipped with 40-98A);
		Main Wheel	A188 s/n all (When equipped with 40-75B);
		Main Wheel	A188A s/n all (When equipped with 40-75B);
		Main Wheel	A188B* s/n 18800833 thru 18802348 (When equipped
			with 40-75B);
		Main Wheel	A188B* s/n 18800833 thru 18802348 (When equipped
			with 40-98A);
		Main Wheel	A188B* s/n 18802349 thru 18803973 (When equipped
			with 40-98A);
		Main Wheel	A-188B s/n all (When equipped with 40-75B);
		Main Wheel	A-188B s/n all (When equipped with 40-98A);
		Main Wheel	A188B (w/ large hopper)* s/n 18800833T thru 18802348
			(When equipped with 40-75B);
		Main Wheel	A188B (w/ large hopper)* s/n 18800833T thru 18802348
		Main Wheel	(When equipped with 40-98A);
		Main Wheel	A188B (w/ large hopper)* s/n 18802349T thru 18803973 (When equipped with 40-98A);
		Main Wheel	A-A188B s/n all (When equipped with 40-75B);
		Main Wheel	A-A188B s/n all (When equipped with 40-98A);
		Main Wheel	T188C s/n all (When equipped with 40-98A);
		Main Wheel	210-5A (205A) s/n all (When equipped with 40-75);
		Main Wheel	210-5A (205A) s/n all (When equipped with 40-75B);
		Main Wheel	206 s/n all (When equipped with 40-75B);
		Main Wheel	206 s/n all (When equipped with 40-75D);
		Main Gear	206 s/n all (When Equipped With 40-75D or 40-75T /
		Main Wheel	STC SA63GL); 206H s/n all (When equipped with 40-75B);
		Main Wheel	
		Main Wheel	206H s/n all (When equipped with 40-75D); P206 s/n all (When equipped with 40-75B);
		Main Wheel	, , , , , , , , , , , , , , , , , , , ,
			P206 s/n all (When equipped with 40-75D);
		Main Gear	P206 s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
		Main Wheel	P206A s/n all (When equipped with 40-75B);
		Main Wheel	P206A s/n all (When equipped with 40-75D);
		Main Wheel	P206B s/n all (When equipped with 40-75B);



Rev Part Number	Replaces	Location	Model and Serial Number Range
D MC154-00300	154-00300, 3021	Main Wheel Main Wheel	P206B s/n all (When equipped with 40-75D); P206C s/n all (When equipped with 40-75B);
D		Main Wheel	, , , , , ,
D			P206C s/n all (When equipped with 40-75D);
D		Main Wheel	P206D s/n all (When equipped with 40-75B);
D		Main Wheel	P206D s/n all (When equipped with 40-75D);
D		Main Wheel	P206E s/n all (When equipped with 40-75B);
D		Main Wheel	P206E s/n all (When equipped with 40-75D);
D		Main Wheel	T206H s/n all (When equipped with 40-75B);
D		Main Wheel	T206H s/n all (When equipped with 40-75D);
D		Main Wheel	TP206A s/n all (When equipped with 40-75B);
D		Main Wheel	TP206A s/n all (When equipped with 40-75D);
D		Main Wheel	TP206B s/n all (When equipped with 40-75B);
D		Main Wheel	TP206B s/n all (When equipped with 40-75D);
D		Main Wheel	TP206C s/n all (When equipped with 40-75B);
D		Main Wheel	TP206C s/n all (When equipped with 40-75D);
D		Main Wheel	TP206D s/n all (When equipped with 40-75B);
D D		Main Wheel	TP206D s/n all (When equipped with 40-75D);
D		Main Wheel	TP206E s/n all (When equipped with 40-75D);
D		Main Wheel	TU206A s/n all (When equipped with 40-75B);
		Main Wheel	TU206A s/n all (When equipped with 40-75D);
D		Main Wheel	TU206B s/n all (When equipped with 40-75B);
D		Main Wheel	TU206B s/n all (When equipped with 40-75D);
D		Main Wheel	TU206C s/n all (When equipped with 40-75B);
D		Main Wheel	TU206C s/n all (When equipped with 40-75D);
D		Main Wheel	TU206D s/n all (When equipped with 40-75B);
D		Main Wheel	TU206D s/n all (When equipped with 40-75D);
D		Main Wheel	TU206E s/n all (When equipped with 40-75B / STC SA62GL);
D		Main Wheel	TU206E s/n all (When equipped with 40-75D);
E		Main Gear	TU206E s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	TU206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75B / STC SA62GL);
D		Main Wheel	TU206F* s/n U20601701 thru U20602199 (When
			equipped with 40-75D);
E		Main Gear	TU206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-75B / STC SA62GL);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-75D);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with D-30660-2);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with D-30660-3);
D		Main Wheel	TU206G s/n all (When equipped with 40-75B);



Rev Part Number MC154-00300	Replaces 154-00300, 3021	<u>Location</u> Main Wheel	Model and Serial Number Range TU206G s/n all (When equipped with 40-75D);
E	104 00000, 0021	Main Gear	TU206G s/n all (When Equipped With 40-75D or 40-75T /
		Wall Scal	STC SA63GL);
D		Main Wheel	TU206G s/n all (When equipped with D-30660-2);
D		Main Wheel	TU206G s/n all (When equipped with D-30660-3);
D		Main Wheel	U206 s/n all (When equipped with 40-75B);
D		Main Wheel	U206 s/n all (When equipped with 40-75D);
E		Main Gear	U206 s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	U206A s/n all (When equipped with 40-75B);
D		Main Wheel	U206A s/n all (When equipped with 40-75D);
D		Main Wheel	U206B s/n all (When equipped with 40-75B);
D		Main Wheel	U206B s/n all (When equipped with 40-75D);
D		Main Wheel	U206C s/n all (When equipped with 40-75B);
D		Main Wheel	U206C s/n all (When equipped with 40-75D);
D		Main Wheel	U206D s/n all (When equipped with 40-75B);
D		Main Wheel	U206D s/n all (When equipped with 40-75D);
D		Main Wheel	U206E s/n all (When equipped with 40-75B / STC SA62GL);
D		Main Wheel	U206E s/n all (When equipped with 40-75D);
D		Main Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
			with 40-75B / STC SA62GL);
D		Main Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
			with 40-75D);
E		Main Gear	U206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with 40-75B / STC SA62GL);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with 40-75D);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped with D-30660-2);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with D-30660-3);
D		Main Wheel	U206G s/n all (When equipped with 40-75B);
D		Main Wheel	U206G s/n all (When equipped with 40-75D);
E		Main Gear	U206G s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	U206G s/n all (When equipped with D-30660-2);
D		Main Wheel	U206G s/n all (When equipped with D-30660-3);
D		Main Wheel	207 s/n all (When equipped with 40-75B);
D		Main Wheel	207 s/n all (When equipped with 40-75D);
D		Main Wheel	207A s/n all (When equipped with 40-75B);
D		Main Wheel	207A s/n all (When equipped with 40-75D);
D		Main Wheel	T207 s/n all (When equipped with 40-75B);
D		Main Wheel	T207 s/n all (When equipped with 40-75D);
			(1: rr //



Rev Part Number	Replaces	Location	Model and Serial Number Range
^D MC154-00300	154-00300, 3021	Main Wheel Main Wheel	T207A s/n all (When equipped with 40-75B); T207A s/n all (When equipped with 40-75D);
E		Main Gear	210 s/n all (When Equipped With 40-75B / STC
		Main Geal	SA52GL);
Е		Main Gear	210A s/n all (When Equipped With 40-75B / STC
			SA52GL);
E		Main Gear	210B s/n all (When Equipped With 40-75B / STC
			SA52GL);
E		Main Gear	210C s/n all (When Equipped With 40-75B / STC
			SA52GL);
D		Main Wheel	210D s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	210E s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	210F s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	210G s/n all (When equipped with 40-75B);
D		Main Wheel	210H s/n all (When equipped with 40-75B);
D		Main Wheel	210J s/n all (When equipped with 40-75B);
D		Main Wheel	210K s/n all (When equipped with 40-75B);
E		Main Gear	210K s/n all (When Equipped With 40-75B / STC
_			SA52GL);
E		Main Wheel	210L s/n all (When Equipped With 40-75B / STC
D			SA52GL);
b d		Main Wheel	210L* s/n 21060090 thru 21061573 (When equipped with
E		N 4 = !:= NA //- = = I	D-30660-3);
		Main Wheel	210M s/n all (When Equipped With 40-75B / STC
D		Main Wheel	SA52GL);
D		Main Wheel	210M s/n all (When equipped with D-30660-3);
		Main Wheel	210N* s/n 21062955 thru 21064135 (When equipped with 40-75B);
D		Main Wheel	210N* s/n 21062955 thru 21064135 (When equipped with
			D-30660-3);
D		Main Wheel	210N* s/n 21064136 thru 21064822 (When equipped with 40-75B);
D		Main Wheel	210N* s/n 21064823 thru 21064897 (When equipped with
			40-142);
D		Main Wheel	210R s/n all (When equipped with 40-142);
D		Main Wheel	P210N s/n all (When equipped with 40-142);
E		Main Wheel	P210N s/n all (When Equipped With 40-75B / STC
			SA52GL);
D		Main Wheel	P210N s/n all (When equipped with D-30660-3);
D		Main Wheel	P210R s/n all (When equipped with 40-142);
D		Main Wheel	P210R s/n all (When equipped with 40-75B);
D		Main Wheel	P210R s/n all (When equipped with D-30660-3);
D		Main Wheel	T210F s/n all (When equipped with 40-75 or 40-75B);
D D		Main Wheel	T210G s/n all (When equipped with 40-75B);
D		Main Wheel	T210H s/n all (When equipped with 40-75B);
		Main Wheel	T210J s/n all (When equipped with 40-75B);
İ.			



E MC154-00300	154-00300, 3021	<u>Location</u> Main Wheel	Model and Serial Number Range T210K s/n all (When Equipped With 40-75B / STC
	154-00500, 5021	Main Wheel	· · · · ·
E		Main Wheel	SA52GL); T210L s/n all (When Equipped With 40-75B / STC
		Maill Wileei	SA52GL);
D		Main Wheel	T210L* s/n 21060090 thru 21061573 (When equipped
		Wall Wilco	with D-30660-3);
E		Main Wheel	T210M s/n all (When Equipped With 40-75B / STC
		maii viilooi	SA52GL);
D		Main Wheel	T210M s/n all (When equipped with D-30660-3);
D		Main Wheel	T210N* s/n 21062955 thru 21064135 (When equipped
			with 40-75B);
)		Main Wheel	T210N* s/n 21062955 thru 21064135 (When equipped
			with D-30660-3);
•		Main Wheel	T210N* s/n 21064136 thru 21064822 (When equipped
			with 40-75B);
		Main Wheel	T210N* s/n 21064823 thru 21064897 (When equipped
			with 40-142);
		Main Wheel	T210R s/n all (When equipped with 40-142);
		Main Wheel	T303 s/n all (When equipped with 40-142);
		Main Wheel	T303 s/n all (When equipped with 40-98H);
		Main Wheel	336* s/n 336-0075 thru 336-0195 (When equipped with
			40-75B);
		Main Wheel	337 s/n all (When equipped with 40-96E);
		Main Wheel	337A (USAF O2B) s/n all (When equipped with 40-96E);
		Main Wheel	337B s/n all (When equipped with 40-96E);
		Main Wheel	337C s/n all (When equipped with 40-96E);
		Main Wheel	337D s/n all (When equipped with 40-96E);
		Main Wheel	337E s/n all (When equipped with 40-96E);
		Main Wheel	337E s/n all (When equipped with 40-98A);
		Main Wheel	337F s/n all (When equipped with 40-96E);
		Main Wheel	337F s/n all (When equipped with 40-98A);
		Main Wheel	337G s/n all (When equipped with 40-96E);
		Main Wheel	337G s/n all (When equipped with 40-98A);
		Main Wheel	337H s/n all (When equipped with 40-96E);
		Main Wheel Main Wheel	337H s/n all (When equipped with 40-98A);
		Main Wheel	F337G s/n all (When equipped with 40-96E); F337G s/n all (When equipped with 40-98A);
1		Main Wheel	F337H s/n all (When equipped with 40-96E);
))		Main Wheel	F337H s/n all (When equipped with 40-98A);
)		Main Wheel	FT337GP (FP337) s/n all (When equipped with 40-96E
		Widin Willow	or 40-98A);
)		Main Wheel	FT337HP (FP337H) s/n all (When equipped with 40-96E
			or 40-98A);
D		Main Wheel	M337B (USAF O2A) s/n all (When equipped with
			40-96E);
0		Main Wheel	P337H s/n all (When equipped with 40-96E or 40-98A);



ev Part Number MC154-00300	Replaces 154-00300, 3021	<u>Location</u> Main Wheel	Model and Serial Number Range T337B s/n all (When equipped with 40-96E);
MC 134-00300	104-00000, 3021	Main Wheel	T337C s/n all (When equipped with 40-96E);
		Main Wheel	T337D s/n all (When equipped with 40-96E);
		Main Wheel	
			T337E s/n all (When equipped with 40-96E);
		Main Wheel	T337E s/n all (When equipped with 40-98A);
		Main Wheel	T337F s/n all (When equipped with 40-96E);
		Main Wheel	T337F s/n all (When equipped with 40-98A);
		Main Wheel	T337G s/n all (When equipped with 40-96E or 40-98A);
		Main Wheel	T337H s/n all (When equipped with 40-96E);
		Main Wheel	T337H s/n all (When equipped with 40-98A);
		Main Wheel	T337H-SP s/n all (When equipped with 40-96E or 40-98A);
MC154-00600	154-00600, 154-6,	Main Wheel	150A s/n 15059019 thru 15059350 (When equipped with
	A30047	Main Wheel	40-12);
	IVIAIII VVIICEI	150A s/n 15059019 thru 15059350 (When equipped with	
		Main Wheel	40-18);
		IVIAIII VVIICEI	150B s/n 15059351 thru 15059700 (When equipped with
		Main Wheel	40-12);
		Maill Wileel	150B s/n 15059351 thru 15059700 (When equipped with
		Main Wheel	40-18);
		Main Wheel Aux Wheel	150C s/n all (When equipped with 40-19);
		Aux vvneei	150C* s/n 15059711 thru 15060087 (When equipped with 40-20);
		Aux Wheel	150C* s/n 15059711 thru 15060087 (When equipped with 40-77);
		Aux Wheel	150D s/n all (When equipped with 40-77);
		Main Wheel	150D s/n all (When equipped with 40-78);
		Aux Wheel	150E s/n all (When equipped with 40-77);
		Main Wheel	150E s/n all (When equipped with 40-78);
		Aux Wheel	150F s/n all (When equipped with 40-77);
		Aux Wheel	150G s/n all (When equipped with 40-77);
		Aux Wheel	150H s/n all (When equipped with 40-77);
		Aux Wheel	150J s/n all (When equipped with 40-77);
		Aux Wheel	150K s/n all (When equipped with 40-77);
		Aux Wheel	150L s/n all (When equipped with 40-77);
		Aux Wheel	150L s/n all (When equipped with D30500);
		Aux Wheel	150M* s/n 15075782 thru 15077813 (When equipped
		Aux Wheel	with D30500); 150M s/n all (When equipped with 40-77);
		Aux Wheel	, , , , , , , , , , , , , , , , , , , ,
			150M* s/n 15077814 thru 15078321 (When equipped with C30480);
		Aux Wheel	150M* s/n 15078322 thru 15079405 (When equipped with D30500);
		Aux Wheel	A150K s/n all (When equipped with 40-77);
		Aux Wheel	A150L s/n all (When equipped with 40-77);



Rev Part Number MC154-00600	Replaces 154-00600, 154-6,	<u>Location</u> Aux Wheel	Model and Serial Number Range A150L s/n all (When equipped with D30500);
	A30047		
С		Aux Wheel	A150M* s/n A1500524 thru A1500653 (When equipped
			with D30500);
С		Aux Wheel	A150M s/n all (When equipped with 40-77);
С		Aux Wheel	A150M* s/n A1500651 thru A1500675 (When equipped
			with C30480);
С		Aux Wheel	A150M* s/n A1500673 thru A1500734 (When equipped
			with D30500);
С		Aux Wheel	F150F s/n all (When equipped with 40-77);
С		Aux Wheel	F150G s/n all (When equipped with 40-77);
С		Aux Wheel	F150H s/n all (When equipped with 40-77);
С		Aux Wheel	F150J s/n all (When equipped with 40-77);
С		Aux Wheel	F150K s/n all (When equipped with 40-77);
С		Aux Wheel	F150L s/n all (When equipped with 40-77);
С		Aux Wheel	F150L s/n all (When equipped with D30500);
С		Aux Wheel	F150M* s/n F15001144 thru F15001300 (When equipped
			with D30500);
С		Aux Wheel	F150M s/n all (When equipped with 40-77);
С		Aux Wheel	F150M* s/n F15001301 thru F15001378 (When equipped
			with C30480);
С		Aux Wheel	F150M* s/n F15001379 thru F15001428 (When equipped
			with D30500);
С		Aux Wheel	FA150K s/n all (When equipped with 40-77);
С		Aux Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with 40-77);
С		Aux Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with D30500);
С		Aux Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
			40-77);
5		Aux Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
			D30500);
С		Aux Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500262 thru FA1500300 (When equipped with
			D30500);
С		Aux Wheel	FA150M (with FKA150-2311 and FKA150-2316) s/n all
			(When equipped with 40-77);
С		Aux Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500301 thru FA1500317 (When equipped with
			C30480);
c		Aux Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500318 thru FA1500336 (When equipped with
			D30500);
С		Aux Wheel	152 s/n all (When equipped with 40-77);



Rev Part Number		<u>Location</u>	Model and Serial Number Range
^c MC154-0060		Aux Wheel	152 s/n all (When equipped with D30500);
	A30047		
C		Aux Wheel	A152 s/n all (When equipped with 40-77);
С		Aux Wheel	A152 s/n all (When equipped with D30500);
С		Aux Wheel	F152 s/n all (When equipped with 40-77);
С		Aux Wheel	F152 s/n all (When equipped with D30500);
C		Aux Wheel	FA152 s/n all (When equipped with 40-77);
C		Aux Wheel	FA152 s/n all (When equipped with D30500);
С		Aux Wheel	172* s/n 46421 thru 46754 (When equipped with 40-18);
С		Aux Wheel	172* s/n 46421 thru 46754 (When equipped with 40-77);
С		Aux Wheel	172A s/n all (When equipped with 40-18);
С		Aux Wheel	172A s/n all (When equipped with 40-77);
C		Aux Wheel	172B s/n all (When equipped with 40-18);
C		Aux Wheel	172B s/n all (When equipped with 40-77);
С		Aux Wheel	172C s/n all (When equipped with 40-18);
С		Aux Wheel	172C s/n all (When equipped with 40-77);
		Nose Wheel	172F (T-41A) s/n all (When equipped with 40-77);
		Aux Wheel	172G s/n all (When equipped with 40-77);
		Nose Wheel	172H (T-41A) s/n all (When equipped with 40-77);
		Nose Wheel	172I s/n all (When equipped with 40-77);
		Nose Wheel	172K s/n all (When equipped with 40-77);
		Nose Wheel	172L s/n all (When equipped with 40-77);
		Nose Wheel	172M* s/n 17260759 thru 17263458 (When equipped with 40-77);
		Nose Wheel	172M* s/n 17260835 thru 17263458 (When equipped with D-30500);
		Aux Wheel	172M* s/n 17263459 thru 17266562 (When equipped with D-30500);
		Aux Wheel	172M* s/n 17263459 thru 17267584 (When equipped with 40-77);
С		Aux Wheel	172M* s/n 17266563 thru 17267200 (When equipped
С			with C30480);
		Aux Wheel	172M* s/n 17267201 thru 17267584 (When equipped
			with D-30500);
		Aux Wheel	172N s/n all (When equipped with 40-77);
		Aux Wheel	172N s/n all (When equipped with D-30500);
		Aux Wheel	172P s/n all (When equipped with 40-77);
		Aux Wheel	172P s/n all (When equipped with D-30500);
		Aux Wheel	172Q s/n all (When equipped with 40-77);
		Aux Wheel	172Q s/n all (When equipped with D-30500);
		Aux Wheel	172R s/n all (When equipped with 40-77);
		Aux Wheel	172RG s/n all (When equipped with 40-77);
		Aux Wheel	172RG s/n all (When equipped with D-30500);
		Aux Wheel	172S s/n all (When equipped with 40-77);
		Nose Wheel	F172F s/n all (When equipped with 40-77);
		Nose Wheel	F172G s/n all (When equipped with 40-77);



Rev Part Number MC154-00600	Replaces	Location Nose Wheel	Model and Serial Number Range
WIC 154-00000	154-00600, 154-6,	Nose wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped
	A30047	Nose Wheel	with 40-77);
		Nose Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
		Nose Wheel	with 40-77);
		Nose Wheel	F172K s/n all (When equipped with 40-77);
		Nose Wheel	F172L s/n all (When equipped with 40-77);
		Nose Wheel	F172L* s/n F17200901 thru F17200904 (When equipped with D-30500);
		Aux Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
			with 40-77);
		Aux Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
			with D-30500);
		Aux Wheel	F172M* s/n F17201235 thru F17201481 (When equipped with D-30500);
		Aux Wheel	F172M* s/n F17201235 thru F17201514 (When equipped
			with 40-77);
С		Aux Wheel	F172M* s/n F17201482 thru F17201514 (When equipped
			with C30480);
		Aux Wheel	F172N s/n all (When equipped with 40-77);
		Aux Wheel	F172N s/n all (When equipped with D-30500);
		Aux Wheel	F172P s/n all (When equipped with 40-77);
		Aux Wheel	F172P s/n all (When equipped with D-30500);
		Aux Wheel	FR172E s/n all (When equipped with 40-77);
		Aux Wheel	FR172E s/n all (When equipped with D-30500);
		Aux Wheel	FR172F s/n all (When equipped with 40-77);
		Aux Wheel	FR172F s/n all (When equipped with D-30500);
		Aux Wheel	FR172G s/n all (When equipped with 40-77);
		Aux Wheel	FR172G s/n all (When equipped with D-30500);
		Aux Wheel	FR172H s/n all (When equipped with 40-77);
		Aux Wheel	FR172H s/n all (When equipped with D-30500);
		Aux Wheel	FR172J s/n all (When equipped with 40-77);
		Aux Wheel	FR172J s/n all (When equipped with D-30500);
		Aux Wheel	FR172K s/n all (When equipped with 40-77);
		Aux Wheel	FR172K s/n all (When equipped with D-30500);
		Aux Wheel	R172K s/n all (When equipped with 40-77);
		Aux Wheel	R172K s/n all (When equipped with D-30500);
С		Aux Wheel	175* s/n 55876 thru 56238 (When equipped with 40-18);
С		Aux Wheel	175* s/n 55876 thru 56238 (When equipped with 40-77);
С		Aux Wheel	175A s/n all (When equipped with 40-18);
С		Aux Wheel	175A s/n all (When equipped with 40-77);
С		Aux Wheel	175B s/n all (When equipped with 40-18);
С		Aux Wheel	175B s/n all (When equipped with 40-77);
C		Aux Wheel	175C s/n all (When equipped with 40-18);
С		Aux Wheel	175C s/n all (When equipped with 40-77);
		Aux Wheel	177 s/n all (When equipped with 40-77);
		Aux Wheel	177 s/n all (When equipped with D-30500);



Rev Part Number	Replaces	Location	Model and Serial Number Range
MC154-00600	154-00600, 154-6,	Aux Wheel	177A s/n all (When equipped with 40-77);
	A30047		, , , , , , , , , , , , , , , , , , , ,
		Aux Wheel	177B s/n all (When equipped with 40-77);
		Aux Wheel	177B* s/n 17701774 thru 17702251 (When equipped with
			D-30500);
С		Aux Wheel	177B* s/n 17702252 thru 17702491 (When equipped with
			C-30480);
		Aux Wheel	177B* s/n 17702492 thru 17702752 (When equipped with
			D-30500);
		Aux Wheel	177RG s/n all (When equipped with 40-77);
		Aux Wheel	177RG* s/n 177RG0274 thru 177RG0641 (When
			equipped with D-30500);
		Aux Wheel	177RG* s/n 177RG0642 thru 177RG0911 (When
			equipped with C-30480);
		Aux Wheel	177RG* s/n 177RG0912 thru 177RG1366 (When
			equipped with D-30500);
		Aux Wheel	F177RG s/n all (When equipped with 40-77);
		Aux Wheel	F177RG* s/n F177RG0154 thru F177RG0177 (When
			equipped with D-30500);
D		Aux Wheel	182B* s/n 51887 thru 52358 (When equipped with 40-77
			or 40-35);
D		Aux Wheel	182C s/n all (When equipped with 40-77 or 40-35);
D		Aux Wheel	182D s/n all (When equipped with 40-77 or 40-35);
D		Aux Wheel	182E s/n all (When equipped with 40-35);
D		Aux Wheel	182E s/n all (When equipped with 40-77);
D		Aux Wheel	182H s/n all (When equipped with 40-77);
D		Aux Wheel	182J s/n all (When equipped with 40-77);
D		Aux Wheel	182K s/n all (When equipped with 40-77);
D		Aux Wheel	182L s/n all (When equipped with 40-77);
D		Aux Wheel	182M s/n all (When equipped with 40-77);
D		Aux Wheel	182N s/n all (When equipped with 40-77);
D		Aux Wheel	182P* s/n 18260826 thru 18262465 (When equipped with
			40-77);
D		Aux Wheel	182P* s/n 18261299 thru 18262465 (When equipped with
			D-30500);
D		Aux Wheel	182P* s/n 18262466 thru 18264743 (When equipped with
			C-30480);
D		Aux Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
			40-77);
D		Aux Wheel	182P* s/n 18264744 thru 18265175 (When equipped with
			D-30500);
D		Aux Wheel	182Q s/n all (When equipped with 40-77);
D		Aux Wheel	182Q s/n all (When equipped with D-30500);
D		Aux Wheel	182R s/n all (When equipped with 40-77);
D		Aux Wheel	182R s/n all (When equipped with D-30500);
D		Aux Wheel	182S s/n all (When equipped with 40-77);



Rev Part Number MC154-00600	Replaces 154-00600, 154-6,	Location Aux Wheel	Model and Serial Number Range 182T s/n all (When equipped with 40-77);
	A30047		
D	7100047	Aux Wheel	A182J s/n all (When equipped with 40-77);
D		Aux Wheel	A182K s/n all (When equipped with 40-77);
D		Aux Wheel	A182L s/n all (When equipped with 40-77);
D		Aux Wheel	A182N s/n all (When equipped with 40-77);
D		Aux Wheel	F182P s/n all (When equipped with 40-77);
D		Aux Wheel	F182P s/n all (When equipped with C-30480);
D		Aux Wheel	F182Q s/n all (When equipped with 40-77);
D		Aux Wheel	F182Q s/n all (When equipped with D-30500);
D		Aux Wheel	FR182 s/n all (When equipped with 40-77);
D		Aux Wheel	FR182 s/n all (When equipped with D-30500);
D		Aux Wheel	R182 s/n all (When equipped with 40-77);
D		Aux Wheel	R182 s/n all (When equipped with D-30500);
D		Aux Wheel	T182 s/n all (When equipped with 40-77);
D		Aux Wheel	T182 s/n all (When equipped with D-30500);
D		Aux Wheel	T182T s/n all (When equipped with 40-77);
D		Aux Wheel	TR182 s/n all (When equipped with 40-77);
D		Aux Wheel	TR182 s/n all (When equipped with D-30500);
D		Aux Wheel	210-5 (205) s/n all (When equipped with 40-20);
D		Aux Wheel	210-5 (205) s/n all (When equipped with 40-77);
D		Aux Wheel	210-5A (205A) s/n all (When equipped with 40-77);
D		Aux Wheel	206 s/n all (When equipped with 40-77);
D		Aux Wheel	206 s/n all (When equipped with D-30500);
D		Aux Wheel	206H s/n all (When equipped with 40-77);
D		Aux Wheel	P206 s/n all (When equipped with 40-77);
D		Aux Wheel	P206 s/n all (When equipped with D-30500);
D		Aux Wheel	P206A s/n all (When equipped with 40-77);
D		Aux Wheel	P206A s/n all (When equipped with D-30500);
D		Aux Wheel	P206B s/n all (When equipped with 40-77);
D		Aux Wheel	P206B s/n all (When equipped with D-30500);
D		Aux Wheel	P206C s/n all (When equipped with 40-77);
D		Aux Wheel	P206C s/n all (When equipped with D-30500);
D		Aux Wheel	P206D s/n all (When equipped with 40-77);
D		Aux Wheel	P206D s/n all (When equipped with D-30500);
D		Aux Wheel	P206E s/n all (When equipped with 40-77);
D		Aux Wheel	P206E s/n all (When equipped with D-30500);
D		Aux Wheel	T206H s/n all (When equipped with 40-77);
D		Aux Wheel	TP206A s/n all (When equipped with 40-77);
D		Aux Wheel	TP206A s/n all (When equipped with D-30500);
D		Aux Wheel	TP206B s/n all (When equipped with 40-77);
D		Aux Wheel	TP206B s/n all (When equipped with D-30500);
D		Aux Wheel	TP206C s/n all (When equipped with 40-77);
D		Aux Wheel	TP206C s/n all (When equipped with D-30500);
D		Aux Wheel	TP206D s/n all (When equipped with 40-77);
D		Aux Wheel	TP206D s/n all (When equipped with D-30500);



Rev Part Number MC154-00600	Replaces	Location	Model and Serial Number Range
^D MC154-00600	154-00600, 154-6, A30047	Aux Wheel	TP206E s/n all (When equipped with 40-77);
D	7.00011	Aux Wheel	TP206E s/n all (When equipped with D-30500);
D		Aux Wheel	TU206A s/n all (When equipped with 40-77);
D		Aux Wheel	TU206A s/n all (When equipped with D-30500);
D		Aux Wheel	TU206B s/n all (When equipped with 40-77);
D		Aux Wheel	TU206B s/n all (When equipped with D-30500);
D		Aux Wheel	TU206C s/n all (When equipped with 40-77);
D		Aux Wheel	TU206C s/n all (When equipped with D-30500);
D		Aux Wheel	TU206D s/n all (When equipped with 40-77);
D		Aux Wheel	TU206D s/n all (When equipped with D-30500);
D		Aux Wheel	TU206E s/n all (When equipped with 40-77);
D		Aux Wheel	TU206E s/n all (When equipped with D-30500);
D		Aux Wheel	TU206F* s/n U20601701 thru U20602199 (When
		Aux Wilou	equipped with 40-77);
D		Aux Wheel	TU206F* s/n U20601701 thru U20602199 (When
		Aux Wilou	equipped with D-30500);
D		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
		Aux Milooi	equipped with 40-77);
D		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
		Aux Wilcol	equipped with D-30500);
D		Aux Wheel	TU206G s/n all (When equipped with 40-77);
D		Aux Wheel	TU206G s/n all (When equipped with D-30500);
D		Aux Wheel	U206 s/n all (When equipped with 40-77);
D		Aux Wheel	U206 s/n all (When equipped with D-30500);
D		Aux Wheel	U206A s/n all (When equipped with b-30300);
D		Aux Wheel	U206A s/n all (When equipped with D-30500);
D		Aux Wheel	U206B s/n all (When equipped with 40-77);
D		Aux Wheel	U206B s/n all (When equipped with D-30500);
D		Aux Wheel	
D		Aux Wheel	U206C s/n all (When equipped with 40-77);
D			U206C s/n all (When equipped with D-30500);
D		Aux Wheel	U206D s/n all (When equipped with 40-77);
D		Aux Wheel	U206D s/n all (When equipped with D-30500);
D		Aux Wheel	U206E s/n all (When equipped with 40-77);
D		Aux Wheel	U206E s/n all (When equipped with D-30500);
		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped with 40-77);
D		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
D		Aux Wheel	with D-30500); U206F* s/n U20602200 thru U20603521 (When equipped
			with 40-77);
D		Aux Wheel	U206F* s/n U20602200 thru U20603521 (When equipped with D-30500);
D		Aux Wheel	U206G s/n all (When equipped with 40-77);
D		Aux Wheel	U206G s/n all (When equipped with D-30500);
D		Aux Wheel	207 s/n all (When equipped with 40-77);
			==: o o \ ode:/peaching 10 /1/;



Rev Part Number MC154-00600	Replaces 154-00600, 154-6,	<u>Location</u> Aux Wheel	Model and Serial Number Range 207* s/n 20700212 thru 20700362 (When equipped with
	A30047		D-30500);
D		Aux Wheel	207A s/n all (When equipped with 40-77);
D		Aux Wheel	207A s/n all (When equipped with D-30500);
D		Aux Wheel	T207 s/n all (When equipped with 40-77);
D		Aux Wheel	T207* s/n 20700212 thru 20700362 (When equipped with
			D-30500);
D		Aux Wheel	T207A s/n all (When equipped with 40-77);
)		Aux Wheel	T207A s/n all (When equipped with D-30500);
)		Aux Wheel	210A* s/n 21057734 thru 21057840 (When equipped with 40-35):
)		Aux Wheel	210B s/n all (When equipped with 40-35);
1		Aux Wheel	210C s/n all (When equipped with 40-68);
1		Aux Wheel	210D s/n all (When equipped with 40-77);
)		Aux Wheel	210E s/n all (When equipped with 40-77);
)		Aux Wheel	210F s/n all (When equipped with 40-77);
		Aux Wheel	210G s/n all (When equipped with 40-77);
		Aux Wheel	210H s/n all (When equipped with 40-77);
		Aux Wheel	210J s/n all (When equipped with 40-77);
		Aux Wheel	210K s/n all (When equipped with 40-77);
		Aux Wheel	210L s/n all (When equipped with 40-77);
		Aux Wheel	
		Aux Wileel	210L* s/n 21059662 thru 21061573 (When equipped with
		Aux Wheel	D-30500); 210M s/n all (When equipped with 40-77);
		Aux Wheel	210M s/n all (When equipped with D-30500);
		Aux Wheel	210N* s/n 21062955 thru 21064135 (When equipped with
		A \	40-77);
		Aux Wheel	210N* s/n 21062955 thru 21064135 (When equipped with D-30500);
)		Aux Wheel	210N* s/n 21064136 thru 21064897 (When equipped with D-30500);
		Aux Wheel	210R s/n all (When equipped with D-30500);
		Aux Wheel	P210N s/n all (When equipped with D-30500);
		Aux Wheel	P210R s/n all (When equipped with D-30500);
		Aux Wheel	T210F s/n all (When equipped with 40-77);
		Aux Wheel	T210G s/n all (When equipped with 40-77);
		Aux Wheel	T210H s/n all (When equipped with 40-77);
)		Aux Wheel	T210J s/n all (When equipped with 40-77);
)		Aux Wheel	T210K s/n all (When equipped with 40-77);
		Aux Wheel	T210L s/n all (When equipped with 40-77);
1		Aux Wheel	T210L* s/n 21059662 thru 21061573 (When equipped with D-30500);
)		Aux Wheel	T210M s/n all (When equipped with 40-77);
)		Aux Wheel	T210M s/n all (When equipped with D-30500);
)		Aux Wheel	T210N* s/n 21062955 thru 21064135 (When equipped
		AGA TTIOO	with 40-77);



E MC154-00900	A30047 154-00900, 154-9, 154-9	Aux Wheel Aux Wheel	with D-30500); T210N* s/n 21064136 thru 21064897 (When equipped with D-30500); T210R s/n all (When equipped with D-30500);
E MC154-00900		Aux Wheel	with D-30500);
E MC154-00900			
E MC154-00900			1210R s/n all (when equipped with D-30500);
c		Main Whaal	
		Main Wheel	150C s/n all (When equipped with 40-57A);
		Nose Wheel	172D s/n all (When equipped with 40-55);
		Aux Wheel	172G* s/n 17253393 thru 17254572 (When equipped with 40-55);
		Nose Wheel	F172D s/n all (When equipped with 40-55);
:		Aux Wheel	FP172 s/n all (When equipped with 40-55);
		Nose Wheel	P172D s/n all (When equipped with 40-55);
		Aux Wheel	182E s/n all (When equipped with 40-55);
		Aux Wheel	182F* s/n 18254700 thru 18255058 (When equipped with 40-55);
		Aux Wheel	210-5 (205) s/n all (When equipped with 40-55);
		Main Wheel	210-5 (205) s/n all (When equipped with 40-67);
		Main Wheel	210C s/n all (When equipped with 40-21);
		Aux Wheel	336* s/n 336-0001 thru 336-0098 (When equipped with 40-55);
		Main Wheel	336* s/n 336-0001 thru 336-0098 (When equipped with
			40-67);
MC154-01300	154-01300, MC154-13	Main Gear	120 s/n all (When Equipped With 40-97A / STC SA13GL);
		Main Gear	140 s/n all (When Equipped With 40-97A / STC SA13GL);
		Main Gear	140A s/n all (When Equipped With 40-97A / STC SA13GL);
		Main Wheel	150D s/n all (When equipped with 40-79);
		Main Wheel	150D s/n all (When equipped with 40-79A);
		Aux Wheel	150D* s/n 15060477 thru 15060772 (When equipped with 40-76A);
		Aux Wheel	150E s/n all (When equipped with 40-76A);
		Main Wheel	150E s/n all (When equipped with 40-79);
		Main Wheel	150E s/n all (When equipped with 40-79A);
		Aux Wheel	150F* s/n 15061533 thru 15063457 (When equipped with 40-76A);
;		Main Wheel	150F s/n all (When equipped with 40-97);
		Main Wheel	150F s/n all (When equipped with 40-97A);
		Main Wheel	150G* s/n 15064533 thru 15065809 (When equipped with 40-97);
;		Main Wheel	150G s/n all (When equipped with 40-97A);
:		Main Wheel	150H s/n all (When equipped with 40-97A);
С		Main Wheel	150J s/n all (When equipped with 40-97A);



Rev Part Number	Replaces	Location	Model and Serial Number Range
c MC154-01300	154-01300, MC154-13	Main Wheel Main Wheel	150K s/n all (When equipped with 40-97A); 150L s/n all (When equipped with 40-113);
c		Main Wheel	150L s/n all (When equipped with 40-113);
С		Main Wheel	A150K s/n all (When equipped with 40-173);
c		Main Wheel	A150L s/n all (When equipped with 40-113);
c		Main Wheel	A150M s/n all (When equipped with 40-113);
С		Aux Wheel	F150F* s/n F150-0001 thru F150-0055 (When equipped
		7.67.7.7.7.00.	with 40-76A):
С		Main Wheel	F150F s/n all (When equipped with 40-97);
С		Main Wheel	F150F s/n all (When equipped with 40-97A);
С		Main Wheel	F150G* s/n F150-0068 thru F150-0167 (When equipped
			with 40-97);
С		Main Wheel	F150G s/n all (When equipped with 40-97A);
С		Main Wheel	F150H s/n all (When equipped with 40-97A);
С		Main Wheel	F150J s/n all (When equipped with 40-97A);
С		Main Wheel	F150K s/n all (When equipped with 40-97A);
С		Main Wheel	F150L s/n all (When equipped with 40-113);
С		Main Wheel	F150M s/n all (When equipped with 40-113);
С		Main Wheel	FA150K s/n all (When equipped with 40-97A);
С		Main Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with 40-113);
С		Main Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
			40-113);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316) s/n all
			(When equipped with 40-113);
С		Main Wheel	152 s/n all (When equipped with 40-113);
C		Main Wheel	A152 s/n all (When equipped with 40-113);
C		Main Wheel	F152 s/n all (When equipped with 40-113);
C _		Main Wheel	FA152 s/n all (When equipped with 40-113);
E		Main Gear	170 s/n all (When Equipped With 40-97A / STC
E			SA13GL);
_		Main Gear	170A s/n all (When Equipped With 40-97A / STC
E		Main Coor	SA13GL);
_		Main Gear	170B s/n all (When Equipped With 40-97A / STC
E		Main Coor	SA13GL);
_		Main Gear	172 s/n all (When Equipped With 40-97A / STC
E		Main Gear	SA13GL); 172A s/n all (When Equipped With 40-97A / STC
		Maii Geal	SA13GL);
E		Main Gear	172B s/n all (When Equipped With 40-97A / STC
		Wall Coal	SA13GL);
E		Main Gear	172C s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	172D s/n all (When equipped with 40-113);
		Main Wheel	172D s/n all (When equipped with 40-97A);
			, , , , , , , , , , , , , , , , , , , ,
1			



Rev Part Nu	ımber	Replaces	Location	Model and Serial Number Range
E MC154		154-01300, MC154-13	Main Gear	172D s/n all (When Equipped With 40-97A / STC
				SA13GL);
			Main Wheel	172E s/n all (When equipped with 40-113);
			Nose Wheel	172E s/n all (When equipped with 40-76A);
			Main Wheel	172E s/n all (When equipped with 40-97A);
E			Main Gear	172E s/n all (When Equipped With 40-97A / STC
				SA13GL);
			Main Wheel	172F (T-41A) s/n all (When equipped with 40-113);
			Nose Wheel	172F (T-41A) s/n all (When equipped with 40-76A);
			Main Wheel	172F (T-41A) s/n all (When equipped with 40-97A);
			Main Wheel	172G s/n all (When equipped with 40-113);
			Aux Wheel	172G s/n all (When equipped with 40-76A);
			Main Wheel	172G s/n all (When equipped with 40-97A);
			Main Wheel	172H (T-41A) s/n all (When equipped with 40-113);
			Nose Wheel	172H (T-41A) s/n all (When equipped with 40-76A);
			Main Wheel	172H (T-41A) s/n all (When equipped with 40-97A);
			Main Wheel	172I s/n all (When equipped with 40-113);
			Nose Wheel	172I s/n all (When equipped with 40-76A);
			Main Wheel	172I s/n all (When equipped with 40-97A);
			Main Wheel	172K s/n all (When equipped with 40-113);
			Nose Wheel	172K s/n all (When equipped with 40-76A);
			Main Wheel	172K s/n all (When equipped with 40-97A);
			Main Wheel	172L s/n all (When equipped with 40-113);
			Nose Wheel	172L s/n all (When equipped with 40-76A);
			Main Wheel	172L s/n all (When equipped with 40-97A);
			Main Wheel	172M* s/n 17260759 thru 17263458 (When equipped
				with 40-113);
			Nose Wheel	172M* s/n 17260759 thru 17263458 (When equipped
				with 40-76A);
			Main Wheel	172M* s/n 17260759 thru 17263458 (When equipped
				with 40-97A);
			Main Wheel	172M* s/n 17263459 thru 17267584 (When equipped
				with 40-113);
			Main Wheel	172N s/n all (When equipped with 40-113);
			Main Wheel	172P s/n all (When equipped with 40-113);
			Main Wheel	172Q s/n all (When equipped with 40-113);
			Main Wheel	172R s/n all (When equipped with 40-113);
			Main Wheel	172RG s/n all (When equipped with 40-113);
			Main Wheel	172S s/n all (When equipped with 40-113);
			Main Wheel	F172D s/n all (When equipped with 40-113);
			Main Wheel	F172D s/n all (When equipped with 40-97A);
			Main Wheel	F172E s/n all (When equipped with 40-113);
			Nose Wheel	F172E s/n all (When equipped with 40-76A);
			Main Wheel	F172E s/n all (When equipped with 40-97A);
			Main Wheel	F172F s/n all (When equipped with 40-113);
			Nose Wheel	F172F s/n all (When equipped with 40-76A);



Rev Part Number MC154-01300	Replaces 154-01300, MC154-13	<u>Location</u> Main Wheel	Model and Serial Number Range F172F s/n all (When equipped with 40-97A);
	101 01000, 1010 101 10	Main Wheel	F172G s/n all (When equipped with 40-113);
		Nose Wheel	F172G s/n all (When equipped with 40-76A);
		Main Wheel	F172G s/n all (When equipped with 40-97A);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped
		maiii viilooi	with 40-113);
		Nose Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped
			with 40-76A);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped
			with 40-97A);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
			with 40-113);
		Nose Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
			with 40-76A);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
			with 40-97A);
		Main Wheel	F172K s/n all (When equipped with 40-113);
		Nose Wheel	F172K s/n all (When equipped with 40-76A);
		Main Wheel	F172K s/n all (When equipped with 40-97A);
		Main Wheel	F172L s/n all (When equipped with 40-113);
		Nose Wheel	F172L s/n all (When equipped with 40-76A);
		Main Wheel	F172L s/n all (When equipped with 40-97A);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equippe
			with 40-113);
		Aux Wheel	F172M* s/n F17200905 thru F17201234 (When equippe
			with 40-76A);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equippe
			with 40-97A);
		Main Wheel	F172M* s/n F17201235 thru F17201514 (When equippe
			with 40-113);
		Main Wheel	F172N s/n all (When equipped with 40-113);
		Main Wheel	F172P s/n all (When equipped with 40-113);
		Main Wheel	FP172 s/n all (When equipped with 40-113);
		Main Wheel	FP172 s/n all (When equipped with 40-97A);
		Main Wheel	FR172E s/n all (When equipped with 40-113);
		Aux Wheel	FR172E s/n all (When equipped with 40-76A);
		Main Wheel	FR172E s/n all (When equipped with 40-97A);
		Main Wheel	FR172F s/n all (When equipped with 40-113);
		Aux Wheel	FR172F s/n all (When equipped with 40-76A);
		Main Wheel	FR172F s/n all (When equipped with 40-97A);
		Main Wheel	FR172G s/n all (When equipped with 40-113);
		Aux Wheel	FR172G s/n all (When equipped with 40-76A);
		Main Wheel	FR172G s/n all (When equipped with 40-97A);
		Main Wheel	FR172H s/n all (When equipped with 40-113);
		Aux Wheel	FR172H s/n all (When equipped with 40-76A);
		Main Wheel	FR172H s/n all (When equipped with 40-97A);



Rev	Part Number	Replaces	Location	Model and Serial Number Range
	MC154-01300	154-01300, MC154-13	Main Wheel	FR172J s/n all (When equipped with 40-113);
			Aux Wheel	FR172J s/n all (When equipped with 40-76A);
			Main Wheel	FR172J s/n all (When equipped with 40-97A);
			Main Wheel	FR172K s/n all (When equipped with 40-113);
			Main Wheel	P172D s/n all (When equipped with 40-113);
			Main Wheel	P172D s/n all (When equipped with 40-97A);
E			Main Gear	P172D s/n all (When Equipped With 40-97A / STC
				SA13GL);
			Main Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-113);
			Aux Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-76A);
			Main Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-97A);
			Main Wheel	R172F (T-41D) s/n all (When equipped with 40-113);
			Aux Wheel	R172F (T-41D) s/n all (When equipped with 40-76A);
			Main Wheel	R172F (T-41D) s/n all (When equipped with 40-97A);
			Main Wheel	R172G (T-41C,D) s/n all (When equipped with 40-113);
			Aux Wheel	R172G (T-41C,D) s/n all (When equipped with 40-76A);
			Main Wheel	R172G (T-41C,D) s/n all (When equipped with 40-97A);
			Main Wheel	R172H (T-41D) s/n all (When equipped with 40-113);
			Aux Wheel	R172H (T-41D) s/n all (When equipped with 40-76A);
			Main Wheel	R172H (T-41D) s/n all (When equipped with 40-97A);
E			Main Wheel Main Gear	R172K s/n all (When equipped with 40-113);
			Mail Geal	175 s/n all (When Equipped With 40-97A / STC SA13GL);
E			Main Gear	•
			Main Geal	175A s/n all (When Equipped With 40-97A / STC SA13GL);
E			Main Gear	175B s/n all (When Equipped With 40-97A / STC
			Wall Ocal	SA13GL);
E			Main Gear	175C s/n all (When Equipped With 40-97A / STC
				SA13GL);
			Aux Wheel	177 s/n all (When equipped with 40-76A);
			Main Wheel	177 s/n all (When equipped with 40-97A);
			Main Wheel	177A s/n all (When equipped with 40-97A);
			Main Wheel	177B* s/n 17701371 thru 17701530 (When equipped with
				40-97A);
			Main Wheel	177B* s/n 17701531 thru 17702752 (When equipped with
				40-113);
			Main Wheel	177RG s/n all (When equipped with 40-113);
			Main Wheel	F177RG s/n all (When equipped with 40-113);
E			Main Gear	180 s/n all (When Equipped With 40-75B / STC
				SA62GL);
E			Main Gear	180 s/n all (When Equipped With 40-75D or 40-75T /
_				STC SA63GL);
E			Main Gear	180 s/n all (When Equipped With 40-97A / STC
E			Main Os ==	SA13GL);
-			Main Gear	180A s/n all (When Equipped With 40-75B / STC
				SA62GL);



Rev Part Number MC154-01300	Replaces 154-01300, MC154-13	<u>Location</u> Main Gear	Model and Serial Number Range 180A s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180A s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180B s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180B s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180C s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180C s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180C s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180D s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180D s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180D s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180E s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180E s/n all (When Equipped With 40-75D or 40-75T /
_			STC SA63GL);
E		Main Gear	180E s/n all (When Equipped With 40-97A / STC
E		Main One	SA13GL);
L		Main Gear	180F s/n all (When Equipped With 40-75B / STC
E		Main Gear	SA62GL);
		Main Geal	180F s/n all (When Equipped With 40-75D or 40-75T /
E		Main Gear	STC SA63GL);
		Iviaiii Geai	180F s/n all (When Equipped With 40-97A / STC SA13GL);
D		Main Wheel	180G s/n all (When equipped with 40-75 or 40-75B);
E		Main Gear	180G s/n all (When Equipped With 40-75D or 40-75T /
		Main Scal	STC SA63GL);
D		Main Wheel	180H s/n all (When equipped with 40-75 or 40-75B);
E		Main Gear	180H s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180H s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	180H* s/n 18052011 thru 18052284 (When equipped with
			40-75D);
D		Main Wheel	180J* s/n 18052285 thru 18052384 (When Equipped
			With 40-75B / STC SA62GL);
			,



Rev Part I	<u>Number</u> <u>Replaces</u> 54-01300 154-01300, MC154	<u>Location</u> 4-13 Main Wheel	Model and Serial Number Range 180J* s/n 18052285 thru 18052384 (When equipped with
			40-75D);
E		Main Gear	180J* s/n 18052285 thru 18052384 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			40-75B);
D		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			40-75D);
E		Main Gear	180J* s/n 18052385 thru 18052770 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	180K s/n all (When equipped with 40-75B);
D		Main Wheel	180K s/n all (When equipped with 40-75D);
E		Main Gear	180K s/n all (When Equipped With 40-75D or 40-75T/
			STC SA63GL);
E		Main Gear	182 s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	182A s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	182B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	182C s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	182D s/n all (When Equipped With 40-97A / STC
			SA13GL);
D		Aux Wheel	182E s/n all (When equipped with 40-76A);
E		Main Gear	182E s/n all (When Equipped With 40-97A / STC
			SA13GL);
D		Aux Wheel	182F* s/n 18254424 thru 18254699 (When equipped with
			40-76A);
E		Main Gear	182F s/n all (When Equipped With 40-97A / STC
			SA13GL);
D		Aux Wheel	182G s/n all (When equipped with 40-76A);
E		Main Gear	182G s/n all (When Equipped With 40-97A / STC
			SA13GL);
D		Aux Wheel	182H s/n all (When equipped with 40-76A);
D		Main Wheel	182H s/n all (When equipped with 40-97A);
D		Aux Wheel	182J s/n all (When equipped with 40-76A);
D		Main Wheel	182J s/n all (When equipped with 40-97A);
D		Aux Wheel	182K s/n all (When equipped with 40-76A);
D		Main Wheel	182K s/n all (When equipped with 40-97A);
D		Aux Wheel	182L s/n all (When equipped with 40-76A);
D		Main Wheel	182L s/n all (When equipped with 40-97A);
D		Aux Wheel	182M s/n all (When equipped with 40-76A);
D		Main Wheel	182M s/n all (When equipped with 40-97A);
D		Main Wheel	182N* s/n 18260056 thru 18260445 (When equipped with
			40-97A);



Rev Part Number MC154-01300	Replaces 154-01300, MC154-13	Location Aux Wheel	Model and Serial Number Range 182N s/n all (When equipped with 40-76A);
D	,	Main Wheel	182N* s/n 18260446 thru 18260825 (When equipped with
			40-113);
D		Main Wheel	182P* s/n 18260826 thru 18262465 (When equipped with
			40-113);
D		Main Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
			40-113);
D		Main Wheel	182Q s/n all (When equipped with 40-113);
D		Main Wheel	182S s/n all (When equipped with 40-75B);
D		Main Wheel	182T s/n all (When equipped with 40-75B);
D		Main Wheel	A182J s/n all (When equipped with 40-97A);
D		Aux Wheel	A182K s/n all (When equipped with 40-76A);
D		Main Wheel	A182K s/n all (When equipped with 40-97A);
D		Aux Wheel	A182L s/n all (When equipped with 40-76A);
D		Main Wheel	A182L s/n all (When equipped with 40-97A);
D		Main Wheel	A182N* s/n A182-0117 thru A182-0136 (When equipped
			with 40-97A);
D		Aux Wheel	A182N s/n all (When equipped with 40-76A);
D		Main Wheel	A182N* s/n A182-0137 thru A182-0148 (When equipped
			with 40-113);
D		Main Wheel	F182P s/n all (When equipped with 40-113);
D		Main Wheel	F182Q s/n all (When equipped with 40-113);
D		Main Wheel	T182T s/n all (When equipped with 40-75B);
E		Main Gear	185 s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Gear	185 s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Gear	185A s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Gear	185A s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Gear	185B s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Gear	185B s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	185C s/n all (When equipped with 40-75 or 40-75B);
E		Main Gear	185C s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	185D s/n all (When equipped with 40-75 or 40-75B);
E		Main Gear	185D s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	185E s/n all (When equipped with 40-75 or 40-75B);
E		Main Gear	185E s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Wheel	A185E* s/n 185-0968 thru 185-1599 (When Equipped
			With 40-75B / STC SA62GL);
			•
1			



Rev	Part Number MC154-01300	Replaces 154-01300, MC154-13	<u>Location</u> Main Gear	Model and Serial Number Range A185E* s/n 185-0968 thru 185-1599 (When Equipped
				With 40-75D or 40-75T / STC SA63GL);
D			Main Wheel	A185E* s/n 185-1471 thru 185-1599 (When equipped
				with 40-75D);
E			Main Wheel	A185E* s/n 18501600 thru 18502090 (When Equipped
				With 40-75B / STC SA62GL);
D			Main Wheel	A185E* s/n 18501600 thru 18502090 (When equipped
				with 40-75D);
E			Main Gear	A185E* s/n 18501600 thru 18502090 (When Equipped
				With 40-75D or 40-75T / STC SA63GL);
E			Main Wheel	A185F* s/n 18502091 thru 18502310 (When Equipped
				With 40-75B / STC SA62GL);
D			Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
				with 40-75D);
E			Main Gear	A185F* s/n 18502091 thru 18502310 (When Equipped
				With 40-75D or 40-75T / STC SA63GL);
D			Main Wheel	A185F* s/n 18502311 thru 18504448 (When equipped
				with 40-75B);
D			Main Wheel	A185F* s/n 18502311 thru 18504448 (When equipped
				with 40-75D);
D			Main Wheel	188 s/n all (When equipped with 40-75 or 40-75B);
D			Main Wheel	188A s/n all (When equipped with 40-75B);
D			Main Wheel	188B s/n all (When equipped with 40-75B);
D			Main Wheel	188B s/n all (When equipped with 40-98A);
D			Main Wheel	A188 s/n all (When equipped with 40-75B);
D			Main Wheel	A188A s/n all (When equipped with 40-75B);
D			Main Wheel	A188B* s/n 18800833 thru 18802348 (When equipped
				with 40-75B);
D			Main Wheel	A188B* s/n 18800833 thru 18802348 (When equipped
				with 40-98A);
D			Main Wheel	A188B* s/n 18802349 thru 18803973 (When equipped
				with 40-98A);
D			Main Wheel	A-188B s/n all (When equipped with 40-75B);
D			Main Wheel	A-188B s/n all (When equipped with 40-98A);
D			Main Wheel	A188B (w/ large hopper)* s/n 18800833T thru 18802348T
				(When equipped with 40-75B);
D			Main Wheel	A188B (w/ large hopper)* s/n 18800833T thru 18802348T
				(When equipped with 40-98A);
D			Main Wheel	A188B (w/ large hopper)* s/n 18802349T thru 18803973T
				(When equipped with 40-98A);
D			Main Wheel	A-A188B s/n all (When equipped with 40-75B);
D			Main Wheel	A-A188B s/n all (When equipped with 40-98A);
D			Main Wheel	T188C s/n all (When equipped with 40-98A);
D			Main Wheel	210-5A (205A) s/n all (When equipped with 40-75);
D			Main Wheel	210-5A (205A) s/n all (When equipped with 40-75B);
D			Aux Wheel	210-5A (205A) s/n all (When equipped with 40-76);
1				



Rev Part Number	Replaces	Location	Model and Serial Number Range
D MC154-01300	154-01300, MC154-13	Aux Wheel Main Wheel	210-5A (205A) s/n all (When equipped with 40-76A); 206 s/n all (When equipped with 40-75B);
D		Main Wheel	206 s/n all (When equipped with 40-75D);
E		Main Gear	206 s/n all (When Equipped With 40-75D or 40-75T /
		Maiir Godi	STC SA63GL);
D		Aux Wheel	206 s/n all (When equipped with 40-76A);
D		Main Wheel	206H s/n all (When equipped with 40-75B);
D		Main Wheel	206H s/n all (When equipped with 40-75D);
D		Main Wheel	206H s/n all (When equipped with 40-76A);
D		Main Wheel	P206 s/n all (When equipped with 40-75B);
D		Main Wheel	P206 s/n all (When equipped with 40-75D);
E		Main Gear	P206 s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	P206 s/n all (When equipped with 40-76A);
D		Main Wheel	P206A s/n all (When equipped with 40-75B);
D		Main Wheel	P206A s/n all (When equipped with 40-75D);
D		Aux Wheel	P206A s/n all (When equipped with 40-76A);
D		Main Wheel	P206B s/n all (When equipped with 40-75B);
D		Main Wheel	P206B s/n all (When equipped with 40-75D);
D		Aux Wheel	P206B s/n all (When equipped with 40-76A);
D		Main Wheel	P206C s/n all (When equipped with 40-75B);
D		Main Wheel	P206C s/n all (When equipped with 40-75D);
D		Aux Wheel	P206C s/n all (When equipped with 40-76A);
D		Main Wheel	P206D s/n all (When equipped with 40-75B);
D		Main Wheel	P206D s/n all (When equipped with 40-75D);
D		Aux Wheel	P206D s/n all (When equipped with 40-76A);
D		Main Wheel	P206E s/n all (When equipped with 40-75B);
D		Main Wheel	P206E s/n all (When equipped with 40-75D);
D		Aux Wheel	P206E s/n all (When equipped with 40-76A);
D		Main Wheel	T206H s/n all (When equipped with 40-75B);
D		Main Wheel	T206H s/n all (When equipped with 40-75D);
D		Main Wheel	T206H s/n all (When equipped with 40-76A);
D D		Main Wheel	TP206A s/n all (When equipped with 40-75B);
D D		Main Wheel	TP206A s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206A s/n all (When equipped with 40-76A);
D		Main Wheel	TP206B s/n all (When equipped with 40-75B);
D		Main Wheel	TP206B s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206B s/n all (When equipped with 40-76A);
D		Main Wheel	TP206C s/n all (When equipped with 40-75B);
D		Main Wheel	TP206C s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206C s/n all (When equipped with 40-76A);
D		Main Wheel	TP206D s/n all (When equipped with 40-75B);
D		Main Wheel	TP206D s/n all (When equipped with 40-75D);
D		Aux Wheel Main Wheel	TP206D s/n all (When equipped with 40-76A);
D		Aux Wheel	TP206E s/n all (When equipped with 40-75D); TP206E s/n all (When equipped with 40-76A);
		AUX WIICCI	11 200L 3/11 all (Which equipped with 40-70A),
İ			



Rev Part Number	Replaces	Location	Model and Serial Number Range
D MC154-01300	154-01300, MC154-13	Main Wheel	TU206A s/n all (When equipped with 40-75B);
D		Main Wheel	TU206A s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206A s/n all (When equipped with 40-76A);
D		Main Wheel	TU206B s/n all (When equipped with 40-75B);
D		Main Wheel	TU206B s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206B s/n all (When equipped with 40-76A);
D		Main Wheel	TU206C s/n all (When equipped with 40-75B);
D		Main Wheel	TU206C s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206C s/n all (When equipped with 40-76A);
D		Main Wheel	TU206D s/n all (When equipped with 40-75B);
D		Main Wheel	TU206D s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206D s/n all (When equipped with 40-76A);
D		Main Wheel	TU206E s/n all (When equipped with 40-75B / STC SA62GL);
D		Main Wheel	TU206E s/n all (When equipped with 40-75D);
E		Main Gear	TU206E s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	TU206E s/n all (When equipped with 40-76A);
D		Main Wheel	TU206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75B / STC SA62GL);
D		Main Wheel	TU206F* s/n U20601701 thru U20602199 (When
			equipped with 40-75D);
E		Main Gear	TU206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75D or 40-75T / STC SA63GL);
D		Aux Wheel	TU206F* s/n U20601701 thru U20602199 (When
			equipped with 40-76A);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-75B / STC SA62GL);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-75D);
D		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-76A);
D		Main Wheel	TU206G s/n all (When equipped with 40-75B);
D		Main Wheel	TU206G s/n all (When equipped with 40-75D);
E		Main Gear	TU206G s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	TU206G s/n all (When equipped with 40-76A);
D		Main Wheel	U206 s/n all (When equipped with 40-75B);
D		Main Wheel	U206 s/n all (When equipped with 40-75D);
E		Main Gear	U206 s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
D		Aux Wheel	U206 s/n all (When equipped with 40-76A);
D		Main Wheel	U206A s/n all (When equipped with 40-75B);
D		Main Wheel	U206A s/n all (When equipped with 40-75D);
D		Aux Wheel	U206A s/n all (When equipped with 40-76A);
D		Main Wheel	U206B s/n all (When equipped with 40-75B);



Rev Part Number	Replaces	Location	Model and Serial Number Range
^D MC154-01300	154-01300, MC154-13	Main Wheel	U206B s/n all (When equipped with 40-75D);
D		Aux Wheel	U206B s/n all (When equipped with 40-76A);
D		Main Wheel	U206C s/n all (When equipped with 40-75B);
D		Main Wheel	U206C s/n all (When equipped with 40-75D);
D		Aux Wheel	U206C s/n all (When equipped with 40-76A);
D		Main Wheel	U206D s/n all (When equipped with 40-75B);
D		Main Wheel	U206D s/n all (When equipped with 40-75D);
D		Aux Wheel	U206D s/n all (When equipped with 40-76A);
D		Main Wheel	U206E s/n all (When equipped with 40-75B / STC SA62GL);
D		Main Wheel	U206E s/n all (When equipped with 40-75D);
D		Aux Wheel	U206E s/n all (When equipped with 40-76A);
D		Main Wheel	U206F* s/n U20601701 thru U20602199 (When equipped with 40-75B / STC SA62GL);
D		Main Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
		Main Wilco	with 40-75D);
E		Main Gear	U206F* s/n U20601701 thru U20602199 (When
		Main Ocai	Equipped With 40-75D or 40-75T / STC SA63GL);
D		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
		Aux Wilcei	with 40-76A);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
		Wall Wilco	with 40-75B / STC SA62GL);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
		Wall Wilco	with 40-75D);
D		Aux Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
-			with 40-76A);
D		Main Wheel	U206G s/n all (When equipped with 40-75B);
D -		Main Wheel	U206G s/n all (When equipped with 40-75D);
E		Main Gear	U206G s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
D		Aux Wheel	U206G s/n all (When equipped with 40-76A);
D		Main Wheel	207 s/n all (When equipped with 40-75B);
D		Main Wheel	207 s/n all (When equipped with 40-75D);
D		Aux Wheel	207 s/n all (When equipped with 40-76A);
D		Main Wheel	207A s/n all (When equipped with 40-75B);
D		Main Wheel	207A s/n all (When equipped with 40-75D);
D		Aux Wheel	207A s/n all (When equipped with 40-76A);
D		Main Wheel	T207 s/n all (When equipped with 40-75B);
D		Main Wheel	T207 s/n all (When equipped with 40-75D);
D		Aux Wheel	T207 s/n all (When equipped with 40-76A);
D		Main Wheel	T207A s/n all (When equipped with 40-75B);
D		Main Wheel	T207A s/n all (When equipped with 40-75D);
D		Aux Wheel	T207A s/n all (When equipped with 40-76A);
E		Main Gear	210 s/n all (When Equipped With 40-75B / STC
			SA52GL);



ev Part Number MC154-01300	Replaces 154-01300, MC154-13	<u>Location</u> Main Gear	Model and Serial Number Range 210A s/n all (When Equipped With 40-75B / STC
			SA52GL);
		Main Gear	210B s/n all (When Equipped With 40-75B / STC
		maii oda	SA52GL);
		Main Gear	210C s/n all (When Equipped With 40-75B / STC
		Main Ocai	SA52GL);
		Main Wheel	210D s/n all (When equipped with 40-75 or 40-75B);
		Main Wheel	210E s/n all (When equipped with 40-75 or 40-75B);
		Main Wheel	210F s/n all (When equipped with 40-75 or 40-75B);
		Main Wheel	210G s/n all (When equipped with 40-75B);
		Main Wheel	210H s/n all (When equipped with 40-75B);
		Main Wheel	
			210J s/n all (When equipped with 40-75B);
		Main Wheel	210K s/n all (When equipped with 40-75B);
		Main Gear	210K s/n all (When Equipped With 40-75B / STC SA52GL);
		Main Wheel	210L s/n all (When Equipped With 40-75B / STC SA52GL);
		Main Wheel	210M s/n all (When Equipped With 40-75B / STC
			SA52GL);
		Main Wheel	210N* s/n 21062955 thru 21064135 (When equipped wit 40-75B);
		Main Wheel	210N* s/n 21064136 thru 21064822 (When equipped wit 40-75B);
		Main Wheel	,,
		Maili Wileei	210N* s/n 21064823 thru 21064897 (When equipped wit 40-142);
		Main Wheel	210R s/n all (When equipped with 40-142);
		Main Wheel	P210N s/n all (When equipped with 40-142);
		Main Wheel	
			P210N s/n all (When Equipped With 40-75B / STC SA52GL);
		Main Wheel	P210R s/n all (When equipped with 40-142);
		Main Wheel	P210R s/n all (When equipped with 40-75B);
		Main Wheel	T210F s/n all (When equipped with 40-75 or 40-75B);
		Main Wheel	T210G s/n all (When equipped with 40-75B);
		Main Wheel	T210H s/n all (When equipped with 40-75B);
		Main Wheel	T210J s/n all (When equipped with 40-75B);
		Main Wheel	T210K s/n all (When Equipped With 40-75B / STC SA52GL);
		Main Wheel	T210L s/n all (When Equipped With 40-75B / STC SA52GL);
		Main Wheel	T210M s/n all (When Equipped With 40-75B / STC SA52GL);
		Main Wheel	T210N* s/n 21062955 thru 21064135 (When equipped
		Main Wheel	with 40-75B); T210N* s/n 21064136 thru 21064822 (When equipped with 40-75B);



ev Part Number MC154-01300	Replaces 154-01300, MC154-13	<u>Location</u> Main Wheel	Model and Serial Number Range T210N* s/n 21064823 thru 21064897 (When equipped
			with 40-142);
D		Main Wheel	T210R s/n all (When equipped with 40-142);
D		Main Wheel	T303 s/n all (When equipped with 40-142);
D		Main Wheel	T303 s/n all (When equipped with 40-98H);
D		Main Wheel	336* s/n 336-0075 thru 336-0195 (When equipped with
			40-75B);
)		Aux Wheel	336* s/n 336-0099 thru 336-0195 (When equipped with
			40-73 or 40-76A);
		Aux Wheel	337 s/n all (When equipped with 40-73 or 40-76A);
		Main Wheel	337 s/n all (When equipped with 40-96E);
		Aux Wheel	337A (USAF O2B) s/n all (When equipped with 40-73 or 40-76A);
		Main Wheel	337A (USAF O2B) s/n all (When equipped with 40-96E);
		Aux Wheel	337B s/n all (When equipped with 40-73 or 40-76A);
		Main Wheel	337B s/n all (When equipped with 40-96E);
		Aux Wheel	337C s/n all (When equipped with 40-73 or 40-76A);
		Main Wheel	337C s/n all (When equipped with 40-96E);
		Aux Wheel	337D s/n all (When equipped with 40-73 or 40-76A);
		Main Wheel	337D s/n all (When equipped with 40-96E);
		Aux Wheel	337E s/n all (When equipped with 40-76A);
		Main Wheel	337E s/n all (When equipped with 40-96E);
		Main Wheel	337E s/n all (When equipped with 40-98A);
		Aux Wheel	337F s/n all (When equipped with 40-76A);
		Main Wheel	337F s/n all (When equipped with 40-96E);
		Main Wheel	337F s/n all (When equipped with 40-98A);
		Aux Wheel	337G s/n all (When equipped with 40-76A);
		Main Wheel	337G s/n all (When equipped with 40-96E);
		Main Wheel	337G s/n all (When equipped with 40-98A);
		Aux Wheel	337H s/n all (When equipped with 40-76A);
		Main Wheel	337H s/n all (When equipped with 40-96E);
		Main Wheel	337H s/n all (When equipped with 40-98A);
		Aux Wheel	F337G s/n all (When equipped with 40-76A);
		Main Wheel	F337G s/n all (When equipped with 40-96E);
		Main Wheel	F337G s/n all (When equipped with 40-98A);
		Aux Wheel	F337H s/n all (When equipped with 40-76A);
		Main Wheel	F337H s/n all (When equipped with 40-96E);
		Main Wheel	F337H s/n all (When equipped with 40-98A);
		Aux Wheel	FT337GP (FP337)* s/n FP3370001 thru FP3370007
			(When equipped with 40-73 or 40-76A);
		Main Wheel	FT337GP (FP337) s/n all (When equipped with 40-96E
			or 40-98A);
		Main Wheel	FT337HP (FP337H) s/n all (When equipped with 40-96E
			or 40-98A);
		Aux Wheel	M337B (USAF O2A) s/n all (When equipped with 40-73
		a	or 40-76A);



^D MC154-01300	Replaces 154-01300, MC154-13	<u>Location</u> Main Wheel	Model and Serial Number Range M337B (USAF O2A) s/n all (When equipped with
			40-96E);
D		Main Wheel	P337H s/n all (When equipped with 40-96E or 40-98A);
D		Aux Wheel	T337B s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	T337B s/n all (When equipped with 40-96E);
D		Aux Wheel	T337C s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	T337C s/n all (When equipped with 40-96E);
D		Aux Wheel	T337D s/n all (When equipped with 40-73 or 40-76A);
D		Main Wheel	T337D s/n all (When equipped with 40-96E);
D		Aux Wheel	T337E s/n all (When equipped with 40-76A);
D		Main Wheel	T337E s/n all (When equipped with 40-96E);
D		Main Wheel	T337E s/n all (When equipped with 40-98A);
D		Aux Wheel	T337F s/n all (When equipped with 40-76A);
D		Main Wheel	T337F s/n all (When equipped with 40-96E);
D		Main Wheel	T337F s/n all (When equipped with 40-98A);
D		Main Wheel	T337G s/n all (When equipped with 40-96E or 40-98A);
D		Aux Wheel	T337H s/n all (When equipped with 40-76A);
D		Main Wheel	T337H s/n all (When equipped with 40-96E);
D		Main Wheel	T337H s/n all (When equipped with 40-98A);
D			
		Main Wheel	T337H-SP s/n all (When equipped with 40-96E or 40-98A);
D		Aux Wheel	340A* s/n 340A1001 thru 340A1817 (When equipped
_			with 40-140A);
)		Aux Wheel	401 s/n all (When equipped with D-76A);
)		Aux Wheel	401A s/n all (When equipped with D-76A);
D		Aux Wheel	401B s/n all (When equipped with D-76A);
D		Aux Wheel	402 s/n all (When equipped with D-76A);
D		Aux Wheel	402A s/n all (When equipped with D-76A);
D		Aux Wheel	402B* s/n 402B0001 thru 402B1323 (When equipped with D-76A);
D		Aux Wheel	402C s/n all (When equipped with 40-140A);
D		Aux Wheel	404 s/n all (When equipped with 40-140A);
D		Aux Wheel	406 s/n all (When equipped with 40-140A);
D		Aux Wheel	F406* s/n F406-0001 thru F406-9999 (When equipped
D		Aux Wheel	with 40-140A); 411 s/n all (When equipped with 40-76A);
D			411 s/n all (When equipped with 40-76A);
- D		Aux Wheel	
D		Aux Wheel	414 s/n all (When equipped with 40-140A);
D		Aux Wheel	414A s/n all (When equipped with 40-140A);
D		Aux Wheel	421C s/n all (When equipped with 40-140A);
D U		Aux Wheel	425 s/n all (When equipped with 40-140A);
D .		Aux Wheel	441 s/n all (When equipped with 40-140A);
	154-30010, A30010	Main Wheel	150L* s/n 15072004 thru 15074891 (When equipped with



Rev Part Number MC154-30010	Replaces 154-30010, A30010	<u>Location</u> Main Wheel	Model and Serial Number Range 150M* s/n 15075782 thru 15077085 (When equipped
			with D30660-1);
С		Main Wheel	150M* s/n 15077086 thru 15077379 (When equipped
			with D30580);
С		Main Wheel	150M* s/n 15077381 thru 15077401 (When equipped
			with D30580);
С		Main Wheel	150M* s/n 15077404 thru 15079113 (When equipped
			with D30291-6);
С		Main Wheel	150M* s/n 15079114 thru 15079405 (When equipped
			with D30660-1);
С		Main Wheel	A150L* s/n A1500227 thru A1500430 (When equipped
			with D30660-1);
С		Main Wheel	A150L* s/n A1500431 thru A1500523 (When equipped
			with D30660-1);
С		Main Wheel	A150M* s/n A1500524 thru A1500620 (When equipped
			with D30660-1);
С		Main Wheel	A150M* s/n A1500621 thru A1500641 (When equipped
			with D30580);
С		Main Wheel	A150M* s/n A1500642 thru A1500734 (When equipped
			with D30291-6);
С		Main Wheel	F150L s/n all (When equipped with D30660-1);
С		Main Wheel	F150M* s/n F15001144 thru F15001418 (When equipped
			with D30660-1);
С		Main Wheel	F150M* s/n F15001312 thru F15001332 (When equipped
			with D30580);
С		Main Wheel	F150M* s/n F15001333 thru F15001418 (When equipped
			with D30291-6);
С		Main Wheel	F150M* s/n F15001419 thru F15001428 (When equipped
			with D30660-1);
С		Main Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with D30660-1);
С		Main Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
			D30660-1);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500262 thru FA1500299 (When equipped with
			D30660-1);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
			FA1500312 thru FA1500336 (When equipped with
			D30291-6);
С		Main Wheel	152 s/n all (When equipped with D30660-1);
С		Main Wheel	A152 s/n all (When equipped with D30660-1);
С		Main Wheel	F152 s/n all (When equipped with D30660-1);
С		Main Wheel	FA152 s/n all (When equipped with D30660-1);
		Main Wheel	172D s/n all (When equipped with D-30660-1);
		Main Wheel	172E s/n all (When equipped with D-30660-1);



<u>Rev_Part Number</u>	Replaces	Location	Model and Serial Number Range
MC154-30010	154-30010, A30010	Main Wheel	172F (T-41A) s/n all (When equipped with D-30660-1);
		Main Wheel	172G s/n all (When equipped with D-30660-1);
		Main Wheel	172H (T-41A) s/n all (When equipped with D-30660-1);
		Main Wheel	172I s/n all (When equipped with D-30660-1);
		Main Wheel	172K s/n all (When equipped with D-30660-1);
		Main Wheel	172L s/n all (When equipped with D-30660-1);
		Main Wheel	172M* s/n 17260835 thru 17263458 (When equipped with D-30660-1);
		Main Wheel	172M* s/n 17263459 thru 17265648 (When equipped
		Main Wheel	with D-30660-1); 172M* s/n 17265649 thru 17266053 (When equipped
			with D-30580);
		Main Wheel	172M* s/n 17266054 thru 17267584 (When equipped with D-30291-6);
		Main Wheel	172N* s/n 17267585 thru 17268399 (When equipped with
			D-30291-6);
		Main Wheel	172N s/n all (When equipped with D-30580);
		Main Wheel	172N* s/n 17268400 thru 17274009 (When equipped with D-30660-1);
		Main Wheel	172P s/n all (When equipped with D-30291-6);
		Main Wheel	172P s/n all (When equipped with D-30580);
		Main Wheel	172P s/n all (When equipped with D-30660-1);
		Main Wheel	172Q s/n all (When equipped with D-30291-6);
		Main Wheel	172Q s/n all (When equipped with D-30580);
		Main Wheel	172Q s/n all (When equipped with D-30660-1);
		Main Wheel	172RG s/n all (When equipped with D-30660-1);
		Main Wheel	F172D s/n all (When equipped with D-30660-1);
		Main Wheel	F172E s/n all (When equipped with D-30660-1);
		Main Wheel	F172F s/n all (When equipped with D-30660-1);
		Main Wheel	F172G s/n all (When equipped with D-30660-1);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
		Walli Wilcol	with D-30660-1);
		Main Wheel	F172K s/n all (When equipped with D-30660-1);
		Main Wheel	F172L* s/n F17200901 thru F17200904 (When equipped
		Wall Wilco	with D-30660-1);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
		Walli Willoof	with D-30660-1);
		Main Wheel	F172M* s/n F17201235 thru F17201465 (When equipped
		maii viilooi	with D-30660-1);
		Main Wheel	F172M* s/n F17201466 thru F17201485 (When equipped with D-30580);



Rev Part Number MC154-30010	Replaces 154-30010, A30010	<u>Location</u> Main Wheel	Model and Serial Number Range F172N* s/n F17201515 thru F17201633 (When equipped
	,		with D-30291-6);
		Main Wheel	F172N s/n all (When equipped with D-30580);
		Main Wheel	F172N* s/n F17201634 thru F17202039 (When equipped
			with D-30660-1);
		Main Wheel	F172P s/n all (When equipped with D-30291-6);
		Main Wheel	F172P s/n all (When equipped with D-30580);
		Main Wheel	F172P s/n all (When equipped with D-30660-1);
		Main Wheel	FP172 s/n all (When equipped with D-30660-1);
		Main Wheel	FR172J* s/n FR1720420 thru FR17200590 (When
			equipped with D-30660-1);
		Main Wheel	FR172K s/n all (When equipped with D-30291-6);
		Main Wheel	FR172K s/n all (When equipped with D-30660-1);
		Main Wheel	P172D s/n all (When equipped with D-30660-1);
		Main Wheel	R172K s/n all (When equipped with D-30291-6);
		Main Wheel	R172K s/n all (When equipped with D-30660-1);
		Main Wheel	177 s/n all (When equipped with D-30291-6);
		Main Wheel	177 s/n all (When equipped with D-30580);
		Main Wheel	177 s/n all (When equipped with D-30660-1);
		Main Wheel	177B* s/n 17702314 thru 17702347 (When equipped with
			D-30580);
		Main Wheel	177B* s/n 17702348 thru 17702614 (When equipped with
			D-30291-6);
		Main Wheel	177B* s/n 17702615 thru 17702752 (When equipped with
			D-30660-1);
		Main Wheel	177RG* s/n 177RG0788 thru 177RG0805 (When
			equipped with D-30580);
		Main Wheel	177RG* s/n 177RG0805 thru 177RG1108 (When
			equipped with D-30291-6);
		Main Wheel	177RG* s/n 177RG1109 thru 177RG1366 (When
			equipped with D-30660-1);
		Main Wheel	F177RG* s/n F177RG0139 thru F177RG0144 (When
			equipped with D-30580);
		Main Wheel	F177RG* s/n F177RG0145 thru F177RG0172 (When
			equipped with D-30291-6);
		Main Wheel	F177RG* s/n F177RG0173 thru F177RG0177 (When
D		Main Whal	equipped with D-30660-1);
		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
D		Main Wheel	D-30291-1);
		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
D		Main Wheel	D-30291-3);
		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
D		Main Wheel	D-30291-1);
		IVIAIII VVIICEI	180J* s/n 18052385 thru 18052770 (When equipped with
			D-30291-3);



Rev Part Number	Renlaces	<u>Location</u>	Model and Serial Number Range
D MC154-30010	<u>Replaces</u> 154-30010, A30010	Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with
			D-30660-3);
D		Main Wheel	180K* s/n 18052771 thru 18052924 (When equipped with
			D-30291-1);
D		Main Wheel	180K* s/n 18052771 thru 18052924 (When equipped with
		main miles	D-30291-3);
D		Main Wheel	180K* s/n 18052925 thru 18053203 (When equipped with
		main miles	D-30660-2);
D		Main Wheel	182P* s/n 18262466 thru 18264307 (When equipped with
		main miles	D-30580);
D		Main Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
		Wall Wilco	D-30660-1);
D		Main Wheel	182P* s/n 18264308 thru 18265175 (When equipped with
		Wall Wilco	D-30291-6);
D		Main Wheel	182Q* s/n 18265176 thru 18265328 (When equipped
			with D-30291-6);
D		Main Wheel	182Q* s/n 18265329 thru 18267715 (When equipped
			with D-30660-1);
D		Main Wheel	182R s/n all (When equipped with D-30291-6);
D		Main Wheel	182R s/n all (When equipped with D-30660-1);
D		Main Wheel	182R s/n all (When equipped with D-30660-3);
D		Main Wheel	F182P s/n all (When equipped with D-30291-6);
D		Main Wheel	F182Q s/n all (When equipped with D-30291-6);
D		Main Wheel	F182Q* s/n F18200074 thru F18200169 (When equipped
			with D-30660-1);
D		Main Wheel	FR182 s/n all (When equipped with D-30660-3);
D		Main Wheel	R182 s/n all (When equipped with D-30660-3);
D		Main Wheel	T182 s/n all (When equipped with D-30291-6);
D		Main Wheel	T182 s/n all (When equipped with D-30660-3);
D		Main Wheel	TR182 s/n all (When equipped with D-30660-3);
D		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
			with D-30291-1);
D		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
			with D-30291-3);
D		Main Wheel	A185F* s/n 18502311 thru 18503504 (When equipped
			with D-30291-1);
D		Main Wheel	A185F* s/n 18502311 thru 18503504 (When equipped
			with D-30291-3);
D		Main Wheel	A185F* s/n 18503505 thru 18504448 (When equipped
			with D-30660-2);
D		Aux Wheel	206 s/n all (When equipped with D-30665);
D		Aux Wheel	P206 s/n all (When equipped with D-30665);
D		Aux Wheel	P206A s/n all (When equipped with D-30665);
D		Aux Wheel	P206B s/n all (When equipped with D-30665);
D		Aux Wheel	P206C s/n all (When equipped with D-30665);
D		Aux Wheel	P206D s/n all (When equipped with D-30665);
i e			



ev Part Number MC154-30010	<u>Replaces</u> 154-30010, A30010	<u>Location</u> Aux Wheel	Model and Serial Number Range P206E s/n all (When equipped with D-30665);
D		Aux Wheel	TP206A s/n all (When equipped with D-30665);
D		Aux Wheel	TP206B s/n all (When equipped with D-30665);
D		Aux Wheel	TP206C s/n all (When equipped with D-30665);
ס		Aux Wheel	TP206D s/n all (When equipped with D-30665);
)		Aux Wheel	TP206E s/n all (When equipped with D-30665);
)		Aux Wheel	TU206A s/n all (When equipped with D-30665);
)		Aux Wheel	TU206B s/n all (When equipped with D-30665);
)		Aux Wheel	TU206C s/n all (When equipped with D-30665);
)		Aux Wheel	TU206D s/n all (When equipped with D-30665);
1		Aux Wheel	TU206E s/n all (When equipped with D-30665);
1		Aux Wheel	TU206F* s/n U20601701 thru U20602199 (When
		TUX WITCOI	equipped with D-30665);
		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
		Walli Wilcel	equipped with D-30660-2);
		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
		Walli Wilcel	equipped with D-30660-3);
		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
		Aux Wilcei	•
		Main Wheel	equipped with D-30665); TU206G s/n all (When equipped with D-30660-2);
		Main Wheel	TU206G s/n all (When equipped with D-30660-3);
		Aux Wheel	TU206G s/n all (When equipped with D-30665);
		Aux Wheel	U206 s/n all (When equipped with D-30665);
		Aux Wheel	U206A s/n all (When equipped with D-30665);
		Aux Wheel	
			U206B s/n all (When equipped with D-30665);
		Aux Wheel	U206C s/n all (When equipped with D-30665);
		Aux Wheel	U206D s/n all (When equipped with D-30665);
		Aux Wheel	U206E s/n all (When equipped with D-30665);
		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped with D-30665);
		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with D-30660-2);
		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with D-30660-3);
		Aux Wheel	U206F* s/n U20602200 thru U20603521 (When equipped with D-30665);
		Main Wheel	U206G s/n all (When equipped with D-30660-2);
		Main Wheel	U206G s/n all (When equipped with D-30660-3);
		Aux Wheel	U206G s/n all (When equipped with D-30665);
		Aux Wheel	207* s/n 20700212 thru 20700362 (When equipped with
			D-30665);
		Aux Wheel	207A s/n all (When equipped with D-30665);
		Aux Wheel	T207* s/n 20700212 thru 20700362 (When equipped with D-30665);
		Aux Wheel	T207A s/n all (When equipped with D-30665);



Rev Part Number MC154-30010	Replaces 154-30010, A30010	<u>Location</u> Main Wheel	Model and Serial Number Range
IVIC 104-300 IU	194-90010, A30010	IVIAIII VVIIEEI	210L* s/n 21060090 thru 21061573 (When equipped with
D		Main Wheel	D-30660-3); 210M s/n all (When equipped with D-30660-3);
D		Main Wheel	
		Main wheel	210N* s/n 21062955 thru 21064135 (When equipped with D-30660-3):
D		Main Wheel	P210N s/n all (When equipped with D-30660-3);
D		Main Wheel	P210R s/n all (When equipped with D-30660-3);
D		Main Wheel	T210L* s/n 21060090 thru 21061573 (When equipped with D-30660-3);
D		Main Wheel	T210M s/n all (When equipped with D-30660-3);
D		Main Wheel	T210N* s/n 21062955 thru 21064135 (When equipped with D-30660-3):
D		Aux Wheel	310R s/n all (When equipped with D-30665);
D		Aux Wheel	T310R s/n all (When equipped with D-30665);
D		Aux Wheel	337G s/n all (When equipped with D-30665);
D		Aux Wheel	337H s/n all (When equipped with D-30665);
D		Aux Wheel	F337G s/n all (When equipped with D-30665);
D		Aux Wheel	F337H s/n all (When equipped with D-30665);
D		Aux Wheel	T337G* s/n P3370028 thru P3370282 (When equipped with D-30665);
D		Aux Wheel	T337H s/n all (When equipped with D-30665);
D		Aux Wheel	340 s/n all (When equipped with D-30665);
D		Aux Wheel	340A* s/n 340A0001 thru 340A1000 (When equipped with D-30665);
D		Aux Wheel	402 s/n all (When equipped with D-30665);
D		Aux Wheel	402A s/n all (When equipped with D-30665);
D		Aux Wheel	402B s/n all (When equipped with D-30665);
D		Aux Wheel	404 s/n all (When equipped with D-30665);
D		Aux Wheel	414 s/n all (When equipped with D-30665);
D		Aux Wheel	414A s/n all (When equipped with D-30665);
D		Aux Wheel	421 s/n all (When equipped with D-30665);
D		Aux Wheel	421A s/n all (When equipped with D-30665);
D		Aux Wheel	421B s/n all (When equipped with D-30665);
D		Aux Wheel	421C s/n all (When equipped with D-30665);
E MC155-00100	155-00100, 155-0100, 3023	Main Gear	120 s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Gear	140 s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Gear	140A s/n all (When Equipped With 40-97A / STC SA13GL);
C		Main Wheel	150D s/n all (When equipped with 40-79);
С		Main Wheel	150D s/n all (When equipped with 40-79A);
С		Aux Wheel	150D* s/n 15060477 thru 15060772 (When equipped with 40-76A);
		Aux Wheel	150E s/n all (When equipped with 40-76A);



Rev Part Number	Replaces	Location	Model and Serial Number Range
c MC155-00100	155-00100, 155-0100,	Main Wheel	150E s/n all (When equipped with 40-79);
	3023		
С		Main Wheel	150E s/n all (When equipped with 40-79A);
С		Aux Wheel	150F* s/n 15061533 thru 15063457 (When equipped with
			40-76A);
С		Main Wheel	150F s/n all (When equipped with 40-97);
С		Main Wheel	150F s/n all (When equipped with 40-97A);
С		Main Wheel	150G* s/n 15064533 thru 15065809 (When equipped
			with 40-97);
С		Main Wheel	150G s/n all (When equipped with 40-97A);
С		Main Wheel	150H s/n all (When equipped with 40-97A);
С		Main Wheel	150J s/n all (When equipped with 40-97A);
С		Main Wheel	150K s/n all (When equipped with 40-97A);
С		Main Wheel	150L s/n all (When equipped with 40-113);
С		Main Wheel	150M s/n all (When equipped with 40-113);
С		Main Wheel	A150K s/n all (When equipped with 40-97A);
С		Main Wheel	A150L s/n all (When equipped with 40-113);
С		Main Wheel	A150M s/n all (When equipped with 40-113);
С		Aux Wheel	F150F* s/n F150-0001 thru F150-0055 (When equipped
			with 40-76A);
С		Main Wheel	F150F s/n all (When equipped with 40-97);
С		Main Wheel	F150F s/n all (When equipped with 40-97A);
С		Main Wheel	F150G* s/n F150-0068 thru F150-0167 (When equipped
			with 40-97);
С		Main Wheel	F150G s/n all (When equipped with 40-97A);
С		Main Wheel	F150H s/n all (When equipped with 40-97A);
С		Main Wheel	F150J s/n all (When equipped with 40-97A);
С		Main Wheel	F150K s/n all (When equipped with 40-97A);
C		Main Wheel	F150L s/n all (When equipped with 40-113);
C		Main Wheel	F150M s/n all (When equipped with 40-113);
C		Main Wheel	FA150K s/n all (When equipped with 40-97A);
C		Main Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with 40-113);
C		Main Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
С		NA - 1 - 1 A // 1	40-113);
		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316) s/n all
С		NA - 1 - NA/I 1	(When equipped with 40-113);
c		Main Wheel	152 s/n all (When equipped with 40-113);
c		Main Wheel	A152 s/n all (When equipped with 40-113);
c		Main Wheel	F152 s/n all (When equipped with 40-113);
E		Main Wheel	FA152 s/n all (When equipped with 40-113);
		Main Gear	170 s/n all (When Equipped With 40-97A / STC
E		Main Goar	SA13GL);
		Main Gear	170A s/n all (When Equipped With 40-97A / STC
			SA13GL);



	Part Number	Replaces	Location	Model and Serial Number Range
E	MC155-00100	155-00100, 155-0100,	Main Gear	170B s/n all (When Equipped With 40-97A / STC
_		3023		SA13GL);
E			Main Gear	172 s/n all (When Equipped With 40-97A / STC
_				SA13GL);
E			Main Gear	172A s/n all (When Equipped With 40-97A / STC
				SA13GL);
E			Main Gear	172B s/n all (When Equipped With 40-97A / STC
				SA13GL);
E			Main Gear	172C s/n all (When Equipped With 40-97A / STC
				SA13GL);
			Main Wheel	172D s/n all (When equipped with 40-113);
			Main Wheel	172D s/n all (When equipped with 40-97A);
E			Main Gear	172D s/n all (When Equipped With 40-97A / STC
				SA13GL);
			Main Wheel	172E s/n all (When equipped with 40-113);
			Nose Wheel	172E s/n all (When equipped with 40-76A);
			Main Wheel	172E s/n all (When equipped with 40-97A);
E			Main Gear	172E s/n all (When Equipped With 40-97A / STC
				SA13GL);
			Main Wheel	172F (T-41A) s/n all (When equipped with 40-113);
			Nose Wheel	172F (T-41A) s/n all (When equipped with 40-76A);
			Main Wheel	172F (T-41A) s/n all (When equipped with 40-97A);
			Main Wheel	172G s/n all (When equipped with 40-113);
			Aux Wheel	172G s/n all (When equipped with 40-76A);
			Main Wheel	172G s/n all (When equipped with 40-97A);
			Main Wheel	172H (T-41A) s/n all (When equipped with 40-113);
			Nose Wheel	172H (T-41A) s/n all (When equipped with 40-76A);
			Main Wheel	172H (T-41A) s/n all (When equipped with 40-97A);
			Main Wheel	172I s/n all (When equipped with 40-113);
			Nose Wheel	172I s/n all (When equipped with 40-76A);
			Main Wheel	172I s/n all (When equipped with 40-97A);
			Main Wheel	172K s/n all (When equipped with 40-113);
			Nose Wheel	172K s/n all (When equipped with 40-76A);
			Main Wheel	172K s/n all (When equipped with 40-97A);
			Main Wheel	172L s/n all (When equipped with 40-113);
			Nose Wheel	172L s/n all (When equipped with 40-76A);
			Main Wheel	172L s/n all (When equipped with 40-97A);
			Main Wheel	172M* s/n 17260759 thru 17263458 (When equipped
				with 40-113);
			Nose Wheel	172M* s/n 17260759 thru 17263458 (When equipped
				with 40-76A);
			Main Wheel	172M* s/n 17260759 thru 17263458 (When equipped
				with 40-97A);
			Main Wheel	172M* s/n 17263459 thru 17267584 (When equipped
				with 40-113);
			Main Wheel	172N s/n all (When equipped with 40-113);
1				
i				



Rev Part Number Replaces 4 1 Location Model and Serial Number Range MC155-00100 155-00100, 155-0100, Main Wheel 172P s/n all (When equipped with 40-113); 3023 Main Wheel 172Q s/n all (When equipped with 40-113); Main Wheel 172R s/n all (When equipped with 40-113); Main Wheel 172RG s/n all (When equipped with 40-113); Main Wheel 172S s/n all (When equipped with 40-113); Main Wheel F172D s/n all (When equipped with 40-113); Main Wheel F172D s/n all (When equipped with 40-97A); Main Wheel F172E s/n all (When equipped with 40-113); Nose Wheel F172E s/n all (When equipped with 40-76A); Main Wheel F172E s/n all (When equipped with 40-97A); Main Wheel F172F s/n all (When equipped with 40-113); Nose Wheel F172F s/n all (When equipped with 40-76A); Main Wheel F172F s/n all (When equipped with 40-97A); Main Wheel F172G s/n all (When equipped with 40-113); Nose Wheel F172G s/n all (When equipped with 40-76A); Main Wheel F172G s/n all (When equipped with 40-97A); Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with 40-113); Nose Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with 40-76A); Main Wheel F172H* s/n F172-0320 thru F172-0654 (When equipped with 40-97A); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with 40-113); Nose Wheel F172H* s/n F17200655 thru F17200754 (When equipped with 40-76A); Main Wheel F172H* s/n F17200655 thru F17200754 (When equipped with 40-97A); Main Wheel F172K s/n all (When equipped with 40-113); Nose Wheel F172K s/n all (When equipped with 40-76A); Main Wheel F172K s/n all (When equipped with 40-97A); Main Wheel F172L s/n all (When equipped with 40-113); Nose Wheel F172L s/n all (When equipped with 40-76A); Main Wheel F172L s/n all (When equipped with 40-97A); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with 40-113); Aux Wheel F172M* s/n F17200905 thru F17201234 (When equipped with 40-76A); Main Wheel F172M* s/n F17200905 thru F17201234 (When equipped with 40-97A); Main Wheel F172M* s/n F17201235 thru F17201514 (When equipped with 40-113); Main Wheel F172N s/n all (When equipped with 40-113); Main Wheel F172P s/n all (When equipped with 40-113); Main Wheel FP172 s/n all (When equipped with 40-113);



Rev Part Number MC155-00100	Replaces 155-00100, 155-0100, 3023	<u>Location</u> Main Wheel	Model and Serial Number Range FP172 s/n all (When equipped with 40-97A);
	3023	Main Whool	ED172E s/n all (When equipped with 40 113):
		Main Wheel	FR172E s/n all (When equipped with 40-113);
		Aux Wheel	FR172E s/n all (When equipped with 40-76A);
		Main Wheel	FR172E s/n all (When equipped with 40-97A);
		Main Wheel	FR172F s/n all (When equipped with 40-113);
		Aux Wheel	FR172F s/n all (When equipped with 40-76A);
		Main Wheel	FR172F s/n all (When equipped with 40-97A);
		Main Wheel	FR172G s/n all (When equipped with 40-113);
		Aux Wheel	FR172G s/n all (When equipped with 40-76A);
		Main Wheel	FR172G s/n all (When equipped with 40-97A);
		Main Wheel	FR172H s/n all (When equipped with 40-113);
		Aux Wheel	FR172H s/n all (When equipped with 40-76A);
		Main Wheel	FR172H s/n all (When equipped with 40-97A);
		Main Wheel	FR172J s/n all (When equipped with 40-113);
		Aux Wheel	FR172J s/n all (When equipped with 40-76A);
		Main Wheel	FR172J s/n all (When equipped with 40-97A);
		Main Wheel	FR172K s/n all (When equipped with 40-113);
		Main Wheel	P172D s/n all (When equipped with 40-113);
		Main Wheel	P172D s/n all (When equipped with 40-97A);
E		Main Gear	P172D s/n all (When Equipped With 40-97A / STC
			SA13GL);
		Main Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-113);
		Aux Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-76A);
		Main Wheel	R172E (T-41B,C,D) s/n all (When equipped with 40-97A);
		Main Wheel	R172F (T-41D) s/n all (When equipped with 40-113);
		Aux Wheel	R172F (T-41D) s/n all (When equipped with 40-76A);
		Main Wheel	R172F (T-41D) s/n all (When equipped with 40-97A);
		Main Wheel	R172G (T-41C,D) s/n all (When equipped with 40-113);
		Aux Wheel	R172G (T-41C,D) s/n all (When equipped with 40-76A);
		Main Wheel	R172G (T-41C,D) s/n all (When equipped with 40-97A);
		Main Wheel	R172H (T-41D) s/n all (When equipped with 40-113);
		Aux Wheel	R172H (T-41D) s/n all (When equipped with 40-76A);
		Main Wheel	R172H (T-41D) s/n all (When equipped with 40-97A);
		Main Wheel	R172K s/n all (When equipped with 40-113);
E		Main Gear	175 s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Gear	175A s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Gear	175B s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Gear	175C s/n all (When Equipped With 40-97A / STC SA13GL);
		Aux Wheel	177 s/n all (When equipped with 40-76A);
		Main Wheel	177 s/n all (When equipped with 40-97A);
		Main Wheel	177A s/n all (When equipped with 40-97A);



Rev Part Number MC155-00100	Replaces	<u>Location</u> Main Wheel	Model and Serial Number Range
WIC 155-00 100	155-00100, 155-0100,	Main Wheel	177B* s/n 17701371 thru 17701530 (When equipped with
	3023	Main Wheel	40-97A);
		Main Wileei	177B* s/n 17701531 thru 17702752 (When equipped with
		Main Wheel	40-113);
		Main Wheel	177RG s/n all (When equipped with 40-113);
E			F177RG s/n all (When equipped with 40-113);
		Main Gear	180 s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Gear	180 s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Gear	180 s/n all (When Equipped With 40-97A / STC SA13GL);
E		Main Gear	180A s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180A s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
E		Main Gear	180A s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180B s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180B s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180B s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180C s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180C s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180C s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180D s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Gear	180D s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180D s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180E s/n all (When Equipped With 40-75B / STC SA62GL);
E		Main Gear	180E s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	180E s/n all (When Equipped With 40-97A / STC
			SA13GL);
E		Main Gear	180F s/n all (When Equipped With 40-75B / STC
			SA62GL);
E		Main Gear	180F s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
i .			



ev Part Number MC155-00100	Replaces 155-00100, 155-0100,	<u>Location</u> Main Gear	Model and Serial Number Range 180F s/n all (When Equipped With 40-97A / STC
	3023		SA13GL);
	0020	Main Wheel	180G s/n all (When equipped with 40-75 or 40-75B);
		Main Gear	180G s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
		Main Wheel	180H s/n all (When equipped with 40-75 or 40-75B);
		Main Gear	180H s/n all (When Equipped With 40-75B / STC SA62GL);
		Main Gear	180H s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
		Main Wheel	180H* s/n 18052011 thru 18052284 (When equipped with 40-75D);
		Main Wheel	180J* s/n 18052285 thru 18052384 (When Equipped
		Main Wheel	With 40-75B / STC SA62GL);
			180J* s/n 18052285 thru 18052384 (When equipped with 40-75D);
		Main Gear	180J* s/n 18052285 thru 18052384 (When Equipped With 40-75D or 40-75T / STC SA63GL);
		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with 40-75B);
		Main Wheel	180J* s/n 18052385 thru 18052770 (When equipped with 40-75D);
		Main Gear	180J* s/n 18052385 thru 18052770 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
		Main Wheel	180K s/n all (When equipped with 40-75B);
		Main Wheel	180K s/n all (When equipped with 40-75D);
		Main Gear	180K s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
		Main Gear	182 s/n all (When Equipped With 40-97A / STC SA13GL);
		Main Gear	182A s/n all (When Equipped With 40-97A / STC SA13GL);
		Main Gear	182B s/n all (When Equipped With 40-97A / STC SA13GL);
		Main Gear	182C s/n all (When Equipped With 40-97A / STC
		Main Gear	SA13GL); 182D s/n all (When Equipped With 40-97A / STC
		Aux Wheel	SA13GL); 182E s/n all (When equipped with 40-76A);
		Main Gear	182E s/n all (When Equipped With 40-97A / STC SA13GL);
		Aux Wheel	182F* s/n 18254424 thru 18254699 (When equipped with
		Main Gear	40-76A); 182F s/n all (When Equipped With 40-97A / STC
		Aux Wheel	SA13GL); 182G s/n all (When equipped with 40-76A);



ev Part Number MC155-00100	Replaces 155-00100, 155-0100,	<u>Location</u> Main Gear	Model and Serial Number Range 182G s/n all (When Equipped With 40-97A / STC
1110 100 00 100	3023	Maii Coai	SA13GL);
	3023	Aux Wheel	182H s/n all (When equipped with 40-76A);
		Main Wheel	182H s/n all (When equipped with 40-97A);
		Aux Wheel	182J s/n all (When equipped with 40-76A);
		Main Wheel	182J s/n all (When equipped with 40-97A);
		Aux Wheel	182K s/n all (When equipped with 40-76A);
		Main Wheel	182K s/n all (When equipped with 40-97A);
		Aux Wheel	182L s/n all (When equipped with 40-76A);
		Main Wheel	182L s/n all (When equipped with 40-97A);
		Aux Wheel	182M s/n all (When equipped with 40-76A);
		Main Wheel	182M s/n all (When equipped with 40-97A);
		Main Wheel	182N* s/n 18260056 thru 18260445 (When equipped with
			40-97A);
		Aux Wheel	182N s/n all (When equipped with 40-76A);
		Main Wheel	182N* s/n 18260446 thru 18260825 (When equipped with
			40-113);
		Main Wheel	182P* s/n 18260826 thru 18262465 (When equipped with
			40-113);
		Main Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
			40-113);
		Main Wheel	182Q s/n all (When equipped with 40-113);
		Main Wheel	182S s/n all (When equipped with 40-75B);
		Main Wheel	182T s/n all (When equipped with 40-75B);
		Main Wheel	A182J s/n all (When equipped with 40-97A);
		Aux Wheel	A182K s/n all (When equipped with 40-76A);
		Main Wheel	A182K s/n all (When equipped with 40-97A);
		Aux Wheel	A182L s/n all (When equipped with 40-76A);
		Main Wheel	A182L s/n all (When equipped with 40-97A);
		Main Wheel	A182N* s/n A182-0117 thru A182-0136 (When equipped with 40-97A);
		Aux Wheel	A182N s/n all (When equipped with 40-76A);
		Main Wheel	A182N* s/n A182-0137 thru A182-0148 (When equipped with 40-113);
		Main Wheel	F182P s/n all (When equipped with 40-113);
		Main Wheel	F182Q s/n all (When equipped with 40-113);
		Main Wheel	T182T s/n all (When equipped with 40-75B);
		Main Gear	185 s/n all (When Equipped With 40-75B / STC SA62GL);
		Main Gear	185 s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);
		Main Gear	185A s/n all (When Equipped With 40-75B / STC SA62GL);
		Main Gear	185A s/n all (When Equipped With 40-75D or 40-75T / STC SA63GL);



Rev Part Number	Replaces	Location	Model and Serial Number Range
E MC155-00100	155-00100, 155-0100,	Main Gear	185B s/n all (When Equipped With 40-75B / STC
	3023		SA62GL);
E		Main Gear	185B s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Gear	185C s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	185D s/n all (When equipped with 40-75 or 40-75B);
E		Main Gear	185D s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Main Wheel	185E s/n all (When equipped with 40-75 or 40-75B);
E		Main Gear	185E s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
E		Main Wheel	A185E* s/n 185-0968 thru 185-1599 (When Equipped
			With 40-75B / STC SA62GL);
E		Main Gear	A185E* s/n 185-0968 thru 185-1599 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	A185E* s/n 185-1471 thru 185-1599 (When equipped
			with 40-75D);
E		Main Wheel	A185E* s/n 18501600 thru 18502090 (When Equipped
			With 40-75B / STC SA62GL);
D		Main Wheel	A185E* s/n 18501600 thru 18502090 (When equipped
			with 40-75D);
E		Main Gear	A185E* s/n 18501600 thru 18502090 (When Equipped
			With 40-75D or 40-75T / STC SA63GL);
E		Main Wheel	A185F* s/n 18502091 thru 18502310 (When Equipped
			With 40-75B / STC SA62GL);
D		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
			with 40-75D);
E		Main Gear	A185F* s/n 18502091 thru 18502310 (When Equipped
_			With 40-75D or 40-75T / STC SA63GL);
D		Main Wheel	A185F* s/n 18502311 thru 18504448 (When equipped
			with 40-75D);
D D		Main Wheel	188 s/n all (When equipped with 40-101);
D D		Main Wheel	188 s/n all (When equipped with 40-101A);
D		Main Wheel	188 s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	188A s/n all (When equipped with 40-101);
D		Main Wheel	188A s/n all (When equipped with 40-101A);
D		Main Wheel	188A s/n all (When equipped with 40-75B);
		Main Wheel	188B* s/n 18800833 thru 18801374 (When equipped with
D		Main Whal	40-101A);
D		Main Wheel	188B s/n all (When equipped with 40-75B);
D		Main Wheel	188B s/n all (When equipped with 40-98A);
=		Main Wheel	188B* s/n 18801375 thru 18802348 (When equipped with
D		Main Wheel	40-101);
D		Main Wheel Main Wheel	A188 s/n all (When equipped with 40-101); A188 s/n all (When equipped with 40-101A);
		IVIAIII VVIICEI	A 100 Sill all (Willett Equipped Will 40-101A),
İ			



Rev Part Number	Replaces	Location	Model and Serial Number Range
^D MC155-00100	155-00100, 155-0100,	Main Wheel	A188 s/n all (When equipped with 40-75B);
1110 100 00 100	3023	Main Wilou	, 1100 cm an (111011 equipped mar 10 102),
D	0020	Main Wheel	A188A s/n all (When equipped with 40-101);
D		Main Wheel	A188A s/n all (When equipped with 40-101A);
D		Main Wheel	A188A s/n all (When equipped with 40-75B);
D		Main Wheel	A188B* s/n 18800833 thru 18801374 (When equipped
			with 40-101A);
D		Main Wheel	A188B* s/n 18800833 thru 18802348 (When equipped
			with 40-75B);
D		Main Wheel	A188B* s/n 18800833 thru 18802348 (When equipped
			with 40-98A);
D		Main Wheel	A188B* s/n 18801375 thru 18802348 (When equipped
			with 40-101);
D		Main Wheel	A188B* s/n 18802349 thru 18803973 (When equipped
			with 40-101);
D		Main Wheel	A188B* s/n 18802349 thru 18803973 (When equipped
			with 40-98A);
D		Main Wheel	A-188B s/n all (When equipped with 40-101);
D		Main Wheel	A-188B s/n all (When equipped with 40-98A);
D		Main Wheel	A188B (w/ large hopper)* s/n 18800833T thru 18802348T
			(When equipped with 40-101A);
D		Main Wheel	A188B (w/ large hopper)* s/n 18800833T thru 18802348T
			(When equipped with 40-75B);
D		Main Wheel	A188B (w/ large hopper)* s/n 18800833T thru 18802348T
			(When equipped with 40-98A);
D		Main Wheel	A188B (w/ large hopper)* s/n 18801375T thru 18802348T
			(When equipped with 40-101);
D		Main Wheel	A188B (w/ large hopper)* s/n 18802349T thru 18803973T
			(When equipped with 40-101);
D		Main Wheel	A188B (w/ large hopper)* s/n 18802349T thru 18803973T
			(When equipped with 40-98A);
D		Main Wheel	A-A188B s/n all (When equipped with 40-101);
D D		Main Wheel	A-A188B s/n all (When equipped with 40-101A);
D		Main Wheel	A-A188B s/n all (When equipped with 40-98A);
D		Main Wheel	T188C s/n all (When equipped with 40-101);
D		Main Wheel	T188C s/n all (When equipped with 40-98A);
D		Aux Wheel	210-5 (205) s/n all (When equipped with 40-76B);
D		Main Wheel Main Wheel	210-5A (205A) s/n all (When equipped with 40-75);
 D		Aux Wheel	210-5A (205A) s/n all (When equipped with 40-75B); 210-5A (205A) s/n all (When equipped with 40-76);
D		Aux Wheel	210-5A (205A) s/n all (When equipped with 40-76);
D		Main Wheel	206 s/n all (When equipped with 40-75B);
D		Main Wheel	206 s/n all (When equipped with 40-75D);
E		Main Gear	206 s/n all (When Equipped With 40-75D),
		Maii Gai	STC SA63GL);
D		Aux Wheel	206 s/n all (When equipped with 40-76A);
			250 5.11 dii (1111511 oquippod 11101 10 10/1),



Rev Part Number	Replaces	Location	Model and Serial Number Range
D MC155-00100	155-00100, 155-0100,	Main Wheel	206H s/n all (When equipped with 40-75B);
	3023		
D		Main Wheel	206H s/n all (When equipped with 40-76A);
D		Main Wheel	P206 s/n all (When equipped with 40-75B);
E		Main Gear	P206 s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	P206 s/n all (When equipped with 40-76A);
D		Main Wheel	P206A s/n all (When equipped with 40-75B);
D		Main Wheel	P206A s/n all (When equipped with 40-75D);
D		Aux Wheel	P206A s/n all (When equipped with 40-76A);
D		Main Wheel	P206B s/n all (When equipped with 40-75B);
D		Main Wheel	P206B s/n all (When equipped with 40-75D);
D		Aux Wheel	P206B s/n all (When equipped with 40-76A);
D		Main Wheel	P206C s/n all (When equipped with 40-75B);
D		Main Wheel	P206C s/n all (When equipped with 40-75D);
D		Aux Wheel	P206C s/n all (When equipped with 40-76A);
D		Main Wheel	P206D s/n all (When equipped with 40-75B);
D		Main Wheel	P206D s/n all (When equipped with 40-75D);
D		Aux Wheel	P206D s/n all (When equipped with 40-76A);
D		Main Wheel	P206E s/n all (When equipped with 40-75B);
D		Main Wheel	P206E s/n all (When equipped with 40-75D);
D		Aux Wheel	P206E s/n all (When equipped with 40-76A);
D		Main Wheel	T206H s/n all (When equipped with 40-75B);
D		Main Wheel	T206H s/n all (When equipped with 40-75D);
D		Main Wheel	T206H s/n all (When equipped with 40-76A);
D		Main Wheel	TP206A s/n all (When equipped with 40-75B);
D		Main Wheel	TP206A s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206A s/n all (When equipped with 40-76A);
D		Main Wheel	TP206B s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206B s/n all (When equipped with 40-76A);
D		Main Wheel	TP206C s/n all (When equipped with 40-75B);
D		Main Wheel	TP206C s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206C s/n all (When equipped with 40-76A);
D		Main Wheel	TP206D s/n all (When equipped with 40-75B);
D		Main Wheel	TP206D s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206D s/n all (When equipped with 40-76A);
D		Main Wheel	TP206E s/n all (When equipped with 40-75D);
D		Aux Wheel	TP206E s/n all (When equipped with 40-76A);
D		Main Wheel	TU206A s/n all (When equipped with 40-75B);
D		Main Wheel	TU206A s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206A s/n all (When equipped with 40-76A);
D		Main Wheel	TU206B s/n all (When equipped with 40-75B);
D		Main Wheel	TU206B s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206B s/n all (When equipped with 40-76A);
D		Main Wheel	TU206C s/n all (When equipped with 40-75B);
D		Main Wheel	TU206C s/n all (When equipped with 40-75D);



Rev Part Number MC155-00100	Replaces 155-00100, 155-0100,	Location Aux Wheel	Model and Serial Number Range TU206C s/n all (When equipped with 40-76A);
	3023		
D		Main Wheel	TU206D s/n all (When equipped with 40-75B);
D		Main Wheel	TU206D s/n all (When equipped with 40-75D);
D		Aux Wheel	TU206D s/n all (When equipped with 40-76A);
D		Main Wheel	TU206E s/n all (When equipped with 40-75B / STC
			SA62GL);
D		Main Wheel	TU206E s/n all (When equipped with 40-75D);
E		Main Gear	TU206E s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	TU206E s/n all (When equipped with 40-76A);
D		Main Wheel	TU206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75B / STC SA62GL);
D		Main Wheel	TU206F* s/n U20601701 thru U20602199 (When
			equipped with 40-75D);
E		Main Gear	TU206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75D or 40-75T / STC SA63GL);
D		Aux Wheel	TU206F* s/n U20601701 thru U20602199 (When
			equipped with 40-76A);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-75B / STC SA62GL);
D		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-75D);
D		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with 40-76A);
D		Main Wheel	TU206G s/n all (When equipped with 40-75B);
E		Main Gear	TU206G s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	TU206G s/n all (When equipped with 40-76A);
D		Main Wheel	U206 s/n all (When equipped with 40-75B);
D		Main Wheel	U206 s/n all (When equipped with 40-75D);
E		Main Gear	U206 s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
D		Aux Wheel	U206 s/n all (When equipped with 40-76A);
D		Main Wheel	U206A s/n all (When equipped with 40-75B);
D		Aux Wheel	U206A s/n all (When equipped with 40-76A);
D		Main Wheel	U206B s/n all (When equipped with 40-75B);
D		Aux Wheel	U206B s/n all (When equipped with 40-76A);
D		Main Wheel	U206C s/n all (When equipped with 40-75B);
D		Main Wheel	U206C s/n all (When equipped with 40-75D);
D		Aux Wheel	U206C s/n all (When equipped with 40-76A);
D		Main Wheel	U206D s/n all (When equipped with 40-75B);
D		Main Wheel	U206D s/n all (When equipped with 40-75D);
D		Aux Wheel	U206D s/n all (When equipped with 40-76A);
D		Main Wheel	U206E s/n all (When equipped with 40-75B / STC
		Widni Willol	SA62GL);
			J. 1020L),



ev Part Number MC155-00100	<u>Replaces</u> 155-00100, 155-0100,	<u>Location</u> Main Wheel	Model and Serial Number Range U206E s/n all (When equipped with 40-75D);
	3023		
)		Aux Wheel	U206E s/n all (When equipped with 40-76A);
1		Main Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
			with 40-75B / STC SA62GL);
		Main Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
			with 40-75D);
		Main Gear	U206F* s/n U20601701 thru U20602199 (When
			Equipped With 40-75D or 40-75T / STC SA63GL);
)		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
			with 40-76A);
		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with 40-75B / STC SA62GL);
		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with 40-75D);
		Aux Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with 40-76A);
		Main Wheel	U206G s/n all (When equipped with 40-75D);
		Main Gear	U206G s/n all (When Equipped With 40-75D or 40-75T /
			STC SA63GL);
		Aux Wheel	U206G s/n all (When equipped with 40-76A);
		Main Wheel	207 s/n all (When equipped with 40-75B);
		Main Wheel	207 s/n all (When equipped with 40-75D);
		Aux Wheel	207 s/n all (When equipped with 40-76A);
		Main Wheel	207A s/n all (When equipped with 40-75B);
		Main Wheel	207A s/n all (When equipped with 40-75D);
		Aux Wheel	207A s/n all (When equipped with 40-75D);
		Main Wheel	T207 s/n all (When equipped with 40-75B);
		Main Wheel	T207 s/n all (When equipped with 40-75D);
		Aux Wheel	
		Main Wheel	T207 s/n all (When equipped with 40-76A);
			T207A s/n all (When equipped with 40-75B);
		Main Wheel	T207A s/n all (When equipped with 40-75D);
		Aux Wheel	T207A s/n all (When equipped with 40-76A);
		Aux Wheel	208 s/n all (When equipped with 40-177A);
		Main Wheel	208 s/n all (When equipped with 40-179);
		Aux Wheel	208A s/n all (When equipped with 40-177A);
		Main Wheel	208A s/n all (When equipped with 40-179);
		Aux Wheel	208B s/n all (When equipped with 40-177A);
		Main Wheel	208B s/n all (When equipped with 40-179);
		Main Gear	210 s/n all (When Equipped With 40-75B / STC SA52GL);
		Main Gear	210A s/n all (When Equipped With 40-75B / STC SA52GL);
:		Main Gear	210B s/n all (When Equipped With 40-75B / STC SA52GL);



Day Dart Number	Donlago	Location	Madel and Carial Number Dange
Rev Part Number MC155-00100	<u>Replaces</u> 155-00100, 155-0100,	<u>Location</u> Main Gear	Model and Serial Number Range 210C s/n all (When Equipped With 40-75B / STC
WO 100 00 100	3023	Main Ocai	SA52GL):
D	3023	Main Wheel	210D s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	210E s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	210F s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	210G s/n all (When equipped with 40-75B);
D		Main Wheel	210H s/n all (When equipped with 40-75B);
D		Main Wheel	210J s/n all (When equipped with 40-75B);
D		Main Wheel	210K s/n all (When equipped with 40-75B);
E		Main Gear	210K s/n all (When Equipped With 40-75B / STC
			SA52GL);
E		Main Wheel	210L s/n all (When Equipped With 40-75B / STC SA52GL);
E		Main Wheel	210M s/n all (When Equipped With 40-75B / STC SA52GL);
D		Main Wheel	210N* s/n 21062955 thru 21064135 (When equipped with
			40-75B);
D		Main Wheel	210N* s/n 21064136 thru 21064822 (When equipped with
			40-75B);
D		Main Wheel	210N* s/n 21064823 thru 21064897 (When equipped with
			40-142);
D		Main Wheel	210R s/n all (When equipped with 40-142);
D		Main Wheel	P210N s/n all (When equipped with 40-142);
E		Main Wheel	P210N s/n all (When Equipped With 40-75B / STC SA52GL);
D		Main Wheel	P210R s/n all (When equipped with 40-142);
D		Main Wheel	P210R s/n all (When equipped with 40-75B);
D		Main Wheel	T210F s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	T210G s/n all (When equipped with 40-75B);
D		Main Wheel	T210H s/n all (When equipped with 40-75B);
D		Main Wheel	T210J s/n all (When equipped with 40-75B);
E		Main Wheel	T210K s/n all (When Equipped With 40-75B / STC
			SA52GL);
E		Main Wheel	T210L s/n all (When Equipped With 40-75B / STC SA52GL);
E		Main Wheel	T210M s/n all (When Equipped With 40-75B / STC
		Wall Wilou	SA52GL);
D		Main Wheel	T210N* s/n 21062955 thru 21064135 (When equipped
			with 40-75B);
D		Main Wheel	T210N* s/n 21064136 thru 21064822 (When equipped
			with 40-75B);
D		Main Wheel	T210N* s/n 21064823 thru 21064897 (When equipped with 40-142);
D		Main Wheel	T210R s/n all (When equipped with 40-142);
D		Main Wheel	T303 s/n all (When equipped with 40-142);
D		Main Wheel	T303 s/n all (When equipped with 40-98H);
		aiii viilooi	1000 off all (triton equipped with 40 out 1);



ev Part Number MC155-00100	Replaces	<u>Location</u> Main Wheel	Model and Serial Number Range
MIC 155-00 100	155-00100, 155-0100,	Main Wheel	310R* s/n 310R0501 thru 310R2140 (When equipped
)	3023	Main Wheel	with 40-40A);
		Main Wileei	T310R* s/n 310R0501 thru 310R2140 (When equipped
)		Main Wheel	with 40-40A);
)		Main Wheel	335 s/n all (When equipped with 40-40A);
)		Aux Wheel	335 s/n all (When equipped with 40-40D);
			336* s/n 336-0001 thru 336-0098 (When equipped with 40-76B);
)		Main Wheel	336* s/n 336-0075 thru 336-0195 (When equipped with 40-75B);
		Aux Wheel	336* s/n 336-0099 thru 336-0195 (When equipped with
)		Aux Mhaal	40-73 or 40-76A);
,)		Aux Wheel	337 s/n all (When equipped with 40-73 or 40-76A);
)		Main Wheel	337 s/n all (When equipped with 40-96E);
		Aux Wheel	337A (USAF O2B) s/n all (When equipped with 40-73 or
)		Main What	40-76A);
		Main Wheel	337A (USAF O2B) s/n all (When equipped with 40-96E);
		Aux Wheel	337B s/n all (When equipped with 40-73 or 40-76A);
		Main Wheel	337B s/n all (When equipped with 40-96E);
		Aux Wheel	337C s/n all (When equipped with 40-73 or 40-76A);
		Main Wheel	337C s/n all (When equipped with 40-96E);
		Aux Wheel	337D s/n all (When equipped with 40-73 or 40-76A);
		Main Wheel	337D s/n all (When equipped with 40-96E);
		Aux Wheel	337E s/n all (When equipped with 40-76A);
		Main Wheel	337E s/n all (When equipped with 40-96E);
		Main Wheel	337E s/n all (When equipped with 40-98A);
		Aux Wheel	337F s/n all (When equipped with 40-76A);
		Main Wheel	337F s/n all (When equipped with 40-96E);
		Main Wheel	337F s/n all (When equipped with 40-98A);
		Aux Wheel	337G s/n all (When equipped with 40-76A);
		Main Wheel	337G s/n all (When equipped with 40-96E);
		Main Wheel	337G s/n all (When equipped with 40-98A);
		Aux Wheel	337H s/n all (When equipped with 40-76A);
		Main Wheel	337H s/n all (When equipped with 40-96E);
		Main Wheel	337H s/n all (When equipped with 40-98A);
		Aux Wheel	F337G s/n all (When equipped with 40-76A);
		Main Wheel	F337G s/n all (When equipped with 40-96E);
		Main Wheel	F337G s/n all (When equipped with 40-98A);
		Aux Wheel	F337H s/n all (When equipped with 40-76A);
		Main Wheel	F337H s/n all (When equipped with 40-96E);
		Main Wheel	F337H s/n all (When equipped with 40-98A);
		Aux Wheel	FT337GP (FP337)* s/n FP3370001 thru FP3370007
			(When equipped with 40-73 or 40-76A);
		Main Wheel	FT337GP (FP337) s/n all (When equipped with 40-96E or 40-98A);



Rev	Part Number MC155-00100	Replaces	<u>Location</u> Main Wheel	Model and Serial Number Range
	MIC 199-00 100	155-00100, 155-0100, 3023	Main wheel	FT337HP (FP337H) s/n all (When equipped with 40-96E
D		3023	Aux Wheel	or 40-98A); M337B (USAF O2A) s/n all (When equipped with 40-73
			Ada Wilcoi	or 40-76A);
D			Main Wheel	M337B (USAF O2A) s/n all (When equipped with
			main vinosi	40-96E);
D			Main Wheel	P337H s/n all (When equipped with 40-96E or 40-98A);
D			Aux Wheel	T337B s/n all (When equipped with 40-73 or 40-76A);
D			Main Wheel	T337B s/n all (When equipped with 40-96E);
D			Aux Wheel	T337C s/n all (When equipped with 40-73 or 40-76A);
D			Main Wheel	T337C s/n all (When equipped with 40-96E);
D			Aux Wheel	T337D s/n all (When equipped with 40-73 or 40-76A);
D			Main Wheel	T337D s/n all (When equipped with 40-96E);
D			Aux Wheel	T337E s/n all (When equipped with 40-76A);
D			Main Wheel	T337E s/n all (When equipped with 40-96E);
D			Main Wheel	T337E s/n all (When equipped with 40-98A);
D			Aux Wheel	T337F s/n all (When equipped with 40-76A);
D			Main Wheel	T337F s/n all (When equipped with 40-96E);
D			Main Wheel	T337F s/n all (When equipped with 40-98A);
D			Main Wheel	T337G s/n all (When equipped with 40-96E or 40-98A);
D			Aux Wheel	T337H s/n all (When equipped with 40-76A);
D			Main Wheel	T337H s/n all (When equipped with 40-96E);
D			Main Wheel	T337H s/n all (When equipped with 40-98A);
D			Main Wheel	T337H-SP s/n all (When equipped with 40-96E or 40-98A);
D			Main Wheel	340 s/n all (When equipped with 40-40A);
D			Main Wheel	340* s/n 340-0301 thru 340-0555 (When equipped with 40-40D);
D			Main Wheel	340A* s/n 340A0001 thru 340A1809 (When equipped with 40-40A);
D			Main Wheel	340A s/n all (When equipped with 40-40D);
D			Aux Wheel	340A* s/n 340A1001 thru 340A1817 (When equipped with 40-140A);
D			Main Wheel	401 s/n all (When equipped with 40-40A);
D			Aux Wheel	401 s/n all (When equipped with D-76A);
D			Main Wheel	401A s/n all (When equipped with 40-40A);
D			Aux Wheel	401A s/n all (When equipped with D-76A);
D			Main Wheel	401B s/n all (When equipped with 40-40A);
D			Aux Wheel	401B s/n all (When equipped with D-76A);
D			Main Wheel	402 s/n all (When equipped with 40-40A);
D			Aux Wheel	402 s/n all (When equipped with D-76A);
D			Main Wheel	402A s/n all (When equipped with 40-40A);
D			Aux Wheel	402A s/n all (When equipped with D-76A);
D			Aux Wheel	402B* s/n 402B0001 thru 402B1323 (When equipped with D-76A);
D			Main Wheel	402B s/n all (When equipped with 40-40A);



Rev	Part Number MC155-00100	Replaces 155-00100, 155-0100,	<u>Location</u> Main Wheel	Model and Serial Number Range 402B* s/n 402B1301 thru 402B1384 (When equipped
	WIG 100 00 100	3023	Wall Wilcol	with 40-135A);
D		3023	Main Wheel	402C s/n all (When equipped with 40-135A);
D			Aux Wheel	402C s/n all (When equipped with 40-140A);
D			Aux Wheel	404 s/n all (When equipped with 40-140A);
D			Aux Wheel	406 s/n all (When equipped with 40-140A);
D			Aux Wheel	F406* s/n F406-0001 thru F406-9999 (When equipped
			Aux Wileel	with 40-140A);
D			Main Wheel	411 s/n all (When equipped with 40-40A);
D			Aux Wheel	411 s/n all (When equipped with 40-76A);
D			Main Wheel	411A s/n all (When equipped with 40-40A);
D			Aux Wheel	411A s/n all (When equipped with 40-76A);
D			Main Wheel	414 s/n all (When equipped with 40-135A);
D			Aux Wheel	414 s/n all (When equipped with 40-140A);
D			Main Wheel	
D			Main Wheel	414 s/n all (When equipped with 40-40A);
D			Main Wheel	414 s/n all (When equipped with 40-40D); 414A s/n all (When equipped with 40-135A);
D			Aux Wheel	
D			Main Wheel	414A s/n all (When equipped with 40-140A); 414A s/n all (When equipped with 40-40A);
D			Main Wheel	414A s/n all (When equipped with 40-40A);
D			Main Wheel	421C s/n all (When equipped with 40-135A);
D			Aux Wheel	
D			Main Wheel	421C s/n all (When equipped with 40-140A); 425 s/n all (When equipped with 40-138A);
D				, , , ,
D			Aux Wheel Aux Wheel	425 s/n all (When equipped with 40-140A);
			Aux Wileel	441 s/n all (When equipped with 40-140A);
С	MC155-00200	155-00200, 155-2	Main Wheel	150A s/n 15059019 thru 15059350 (When equipped with
				40-12);
С			Main Wheel	150A s/n 15059019 thru 15059350 (When equipped with
				40-18);
С			Main Wheel	150B s/n 15059351 thru 15059700 (When equipped with
				40-12);
С			Main Wheel	150B s/n 15059351 thru 15059700 (When equipped with
				40-18);
С			Main Wheel	150C s/n all (When equipped with 40-19);
С			Aux Wheel	150C* s/n 15059711 thru 15060087 (When equipped with
С			Aux Wheel	40-20); 150C* s/n 15059711 thru 15060087 (When equipped with
			Aux Wilcol	40-77);
С			Aux Wheel	150D s/n all (When equipped with 40-77);
С			Main Wheel	150D s/n all (When equipped with 40-78);
С			Aux Wheel	150E s/n all (When equipped with 40-77);
С			Main Wheel	150E s/n all (When equipped with 40-78);
С			Aux Wheel	150F s/n all (When equipped with 40-77);
С			Aux Wheel	150G s/n all (When equipped with 40-77);
С			Aux Wheel	150H s/n all (When equipped with 40-77);
1				
i				



Rev Part Number	Replaces	Location	Model and Serial Number Range
c MC155-00200	155-00200, 155-2	Aux Wheel	150J s/n all (When equipped with 40-77);
С		Aux Wheel	150K s/n all (When equipped with 40-77);
С		Aux Wheel	150L s/n all (When equipped with 40-77);
С		Aux Wheel	150M s/n all (When equipped with 40-77);
С		Aux Wheel	A150K s/n all (When equipped with 40-77);
С		Aux Wheel	A150L s/n all (When equipped with 40-77);
С		Aux Wheel	A150M s/n all (When equipped with 40-77);
С		Aux Wheel	F150F s/n all (When equipped with 40-77);
С		Aux Wheel	F150G s/n all (When equipped with 40-77);
С		Aux Wheel	F150H s/n all (When equipped with 40-77);
С		Aux Wheel	F150J s/n all (When equipped with 40-77);
С		Aux Wheel	F150K s/n all (When equipped with 40-77);
С		Aux Wheel	F150L s/n all (When equipped with 40-77);
С		Aux Wheel	F150M s/n all (When equipped with 40-77);
С		Aux Wheel	FA150K s/n all (When equipped with 40-77);
С		Aux Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with 40-77);
С		Aux Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
			40-77);
С		Aux Wheel	FA150M (with FKA150-2311 and FKA150-2316) s/n all
			(When equipped with 40-77);
C		Aux Wheel	152 s/n all (When equipped with 40-77);
C		Aux Wheel	A152 s/n all (When equipped with 40-77);
C		Aux Wheel	F152 s/n all (When equipped with 40-77);
C		Aux Wheel	FA152 s/n all (When equipped with 40-77);
C C		Aux Wheel	172* s/n 46421 thru 46754 (When equipped with 40-18);
C		Aux Wheel	172* s/n 46421 thru 46754 (When equipped with 40-77);
C		Aux Wheel	172A s/n all (When equipped with 40-18);
C		Aux Wheel	172A s/n all (When equipped with 40-77);
C		Aux Wheel	172B s/n all (When equipped with 40-18);
C		Aux Wheel	172B s/n all (When equipped with 40-77);
c		Aux Wheel	172C s/n all (When equipped with 40-18);
		Aux Wheel Nose Wheel	172C s/n all (When equipped with 40-77);
		Aux Wheel	172F (T-41A) s/n all (When equipped with 40-77); 172G s/n all (When equipped with 40-77);
		Nose Wheel	1726 s/ii ali (When equipped with 40-77);
		Nose Wheel	1721 (1-41A) s/n all (When equipped with 40-77);
		Nose Wheel	172f s/n all (When equipped with 40-77);
		Nose Wheel	172K s/n all (When equipped with 40-77);
		Nose Wheel	172L 5/11 all (When equipped with 40-77), 172M* s/n 17260759 thru 17263458 (When equipped
		THOSE WITCH	with 40-77);
		Aux Wheel	172M* s/n 17263459 thru 17267584 (When equipped
			with 40-77);
		Aux Wheel	172N s/n all (When equipped with 40-77);
		Aux Wheel	172P s/n all (When equipped with 40-77);



Rev Part Number	Replaces	<u>Location</u>	Model and Serial Number Range
MC155-00200	155-00200, 155-2	Aux Wheel	172Q s/n all (When equipped with 40-77);
		Aux Wheel	172R s/n all (When equipped with 40-77);
		Aux Wheel	172RG s/n all (When equipped with 40-77);
		Aux Wheel	172S s/n all (When equipped with 40-77);
		Nose Wheel	F172F s/n all (When equipped with 40-77);
		Nose Wheel	F172G s/n all (When equipped with 40-77);
		Nose Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped
			with 40-77);
		Nose Wheel	F172H* s/n F17200655 thru F17200754 (When equipped with 40-77);
		Nose Wheel	F172K s/n all (When equipped with 40-77);
		Nose Wheel	F172L s/n all (When equipped with 40-77);
		Aux Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
		, tak tilles	with 40-77);
		Aux Wheel	F172M* s/n F17201235 thru F17201514 (When equipped
			with 40-77);
		Aux Wheel	F172N s/n all (When equipped with 40-77);
		Aux Wheel	F172P s/n all (When equipped with 40-77);
		Aux Wheel	FR172E s/n all (When equipped with 40-77);
		Aux Wheel	FR172F s/n all (When equipped with 40-77);
		Aux Wheel	FR172G s/n all (When equipped with 40-77);
		Aux Wheel	FR172H s/n all (When equipped with 40-77);
		Aux Wheel	FR172J s/n all (When equipped with 40-77);
		Aux Wheel	FR172K s/n all (When equipped with 40-77);
		Aux Wheel	R172K s/n all (When equipped with 40-77);
С		Aux Wheel	175* s/n 55876 thru 56238 (When equipped with 40-18);
С		Aux Wheel	175* s/n 55876 thru 56238 (When equipped with 40-77);
С		Aux Wheel	175A s/n all (When equipped with 40-18);
С		Aux Wheel	175A s/n all (When equipped with 40-77);
С		Aux Wheel	175B s/n all (When equipped with 40-18);
С		Aux Wheel	175B s/n all (When equipped with 40-77);
С		Aux Wheel	175C s/n all (When equipped with 40-18);
С		Aux Wheel	175C s/n all (When equipped with 40-77);
		Aux Wheel	177 s/n all (When equipped with 40-77);
		Aux Wheel	177A s/n all (When equipped with 40-77);
		Aux Wheel	177B s/n all (When equipped with 40-77);
		Aux Wheel	177RG s/n all (When equipped with 40-77);
		Aux Wheel	F177RG s/n all (When equipped with 40-77);
D		Aux Wheel	182B* s/n 51887 thru 52358 (When equipped with 40-77
			or 40-35);
D		Aux Wheel	182C s/n all (When equipped with 40-77 or 40-35);
D		Aux Wheel	182D s/n all (When equipped with 40-77 or 40-35);
D		Aux Wheel	182E s/n all (When equipped with 40-35);
D		Aux Wheel	182E s/n all (When equipped with 40-77);
D		Aux Wheel	182H s/n all (When equipped with 40-77);
D		Aux Wheel	182J s/n all (When equipped with 40-77);
		7.67. 77.100.	10_0 0.11 d.ii (11.1011 0qu.ppod 11.111 10 11 /);



Rev Part Number MC155-00200	Replaces 155-00200, 155-2	<u>Location</u> Aux Wheel	Model and Serial Number Range 182K s/n all (When equipped with 40-77);
D IVIC 133-00200	155-00200, 155-2	Aux Wheel	182L s/n all (When equipped with 40-77);
D		Aux Wheel	182M s/n all (When equipped with 40-77);
D		Aux Wheel	182N s/n all (When equipped with 40-77);
D		Aux Wheel	182P* s/n 18260826 thru 18262465 (When equipped with
		, tax tilloo.	40-77);
D		Aux Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
			40-77);
D		Aux Wheel	182Q s/n all (When equipped with 40-77);
D		Aux Wheel	182R s/n all (When equipped with 40-77);
D		Aux Wheel	182S s/n all (When equipped with 40-77);
D		Aux Wheel	182T s/n all (When equipped with 40-77);
D		Aux Wheel	A182J s/n all (When equipped with 40-77);
D		Aux Wheel	A182K s/n all (When equipped with 40-77);
D		Aux Wheel	A182L s/n all (When equipped with 40-77);
D		Aux Wheel	A182N s/n all (When equipped with 40-77);
D		Aux Wheel	F182P s/n all (When equipped with 40-77);
D		Aux Wheel	F182Q s/n all (When equipped with 40-77);
D		Aux Wheel	FR182 s/n all (When equipped with 40-77);
D		Aux Wheel	R182 s/n all (When equipped with 40-77);
D		Aux Wheel	T182 s/n all (When equipped with 40-77);
D		Aux Wheel	T182T s/n all (When equipped with 40-77);
D		Aux Wheel	TR182 s/n all (When equipped with 40-77);
D		Main Wheel	185C s/n all (When equipped with 40-75 or 40-75B);
D		Main Wheel	A185F* s/n 18502311 thru 18504448 (When equipped with 40-75B);
D		Main Wheel	A-188B s/n all (When equipped with 40-75B);
D		Main Wheel	A-A188B s/n all (When equipped with 40-75B);
D		Aux Wheel	210-5 (205) s/n all (When equipped with 40-20);
D		Aux Wheel	210-5 (205) s/n all (When equipped with 40-77);
D		Aux Wheel	210-5A (205A) s/n all (When equipped with 40-77);
D		Aux Wheel	206 s/n all (When equipped with 40-77);
D		Main Wheel	206H s/n all (When equipped with 40-75D);
D		Aux Wheel	206H s/n all (When equipped with 40-77);
D		Main Wheel	P206 s/n all (When equipped with 40-75D);
D		Aux Wheel	P206 s/n all (When equipped with 40-77);
D		Aux Wheel	P206A s/n all (When equipped with 40-77);
D		Aux Wheel	P206B s/n all (When equipped with 40-77);
D		Aux Wheel	P206C s/n all (When equipped with 40-77);
D		Aux Wheel	P206D s/n all (When equipped with 40-77);
D D		Aux Wheel	P206E s/n all (When equipped with 40-77);
D		Aux Wheel	T206H s/n all (When equipped with 40-77);
D		Aux Wheel	TP206A s/n all (When equipped with 40-77);
D		Main Wheel	TP206B s/n all (When equipped with 40-75B);
D		Aux Wheel	TP206B s/n all (When equipped with 40-77);
-		Aux Wheel	TP206C s/n all (When equipped with 40-77);



Part Number MC155-00200	Replaces 155-00200, 155-2	<u>Location</u> Aux Wheel	Model and Serial Number Range TP206D s/n all (When equipped with 40-77);
D	100 00200, 100 2	Aux Wheel	TP206E s/n all (When equipped with 40-77);
D		Aux Wheel	TU206A s/n all (When equipped with 40-77);
D		Aux Wheel	TU206B s/n all (When equipped with 40-77);
D		Aux Wheel	TU206C s/n all (When equipped with 40-77);
)		Aux Wheel	TU206D s/n all (When equipped with 40-77);
D		Aux Wheel	TU206E s/n all (When equipped with 40-77);
D		Aux Wheel	
		Aux Wileel	TU206F* s/n U20601701 thru U20602199 (When equipped with 40-77);
)		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
		Aux Wilcei	equipped with 40-77);
) 		Main Wheel	TU206G s/n all (When equipped with 40-75D);
		Aux Wheel	TU206G s/n all (When equipped with 40-77);
		Aux Wheel	U206 s/n all (When equipped with 40-77);
		Main Wheel	U206A s/n all (When equipped with 40-75D);
		Aux Wheel	U206A s/n all (When equipped with 40-73b);
		Main Wheel	
			U206B s/n all (When equipped with 40-75D);
		Aux Wheel	U206B s/n all (When equipped with 40-77);
		Aux Wheel	U206C s/n all (When equipped with 40-77);
		Aux Wheel	U206D s/n all (When equipped with 40-77);
		Aux Wheel	U206E s/n all (When equipped with 40-77);
		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped
		A \ A // I	with 40-77);
		Aux Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
		NA - 1 - NA (1 1	with 40-77);
		Main Wheel	U206G s/n all (When equipped with 40-75B);
		Aux Wheel	U206G s/n all (When equipped with 40-77);
		Aux Wheel	207 s/n all (When equipped with 40-77);
		Aux Wheel	207A s/n all (When equipped with 40-77);
		Aux Wheel	T207 s/n all (When equipped with 40-77);
		Aux Wheel	T207A s/n all (When equipped with 40-77);
		Aux Wheel	210A* s/n 21057734 thru 21057840 (When equipped with
			40-35);
		Aux Wheel	210B s/n all (When equipped with 40-35);
		Aux Wheel	210C s/n all (When equipped with 40-68);
		Aux Wheel	210D s/n all (When equipped with 40-77);
		Aux Wheel	210E s/n all (When equipped with 40-77);
		Aux Wheel	210F s/n all (When equipped with 40-77);
		Aux Wheel	210G s/n all (When equipped with 40-77);
		Aux Wheel	210H s/n all (When equipped with 40-77);
		Aux Wheel	210J s/n all (When equipped with 40-77);
		Aux Wheel	210K s/n all (When equipped with 40-77);
		Aux Wheel	210L s/n all (When equipped with 40-77);
		Aux Wheel	210M s/n all (When equipped with 40-77);
		Aux Wheel	210N* s/n 21062955 thru 21064135 (When equipped with



<u>rev</u>	Part Number MC155-00200	Replaces 155-00200, 155-2	Location Aux Wheel	Model and Serial Number Range T210F s/n all (When equipped with 40-77);
D	MC 155-00200	155-00200, 155-2	Aux Wheel	T210G s/n all (When equipped with 40-77);
D			Aux Wheel	T210G s/n all (When equipped with 40-77);
D			Aux Wheel	T2101 s/n all (When equipped with 40-77);
D			Aux Wheel	T2103 s/n all (When equipped with 40-77); T210K s/n all (When equipped with 40-77);
D			Aux Wheel	T210K s/n all (When equipped with 40-77);
D			Aux Wheel	
D			Aux Wheel	T210M s/n all (When equipped with 40-77);
			Aux vineei	T210N* s/n 21062955 thru 21064135 (When equipped with 40-77);
С	MC155-11800	155-11800, A1636-23, A1636-23	Aux Wheel	150L s/n all (When equipped with D30500);
С			Aux Wheel	150M* s/n 15075782 thru 15077813 (When equipped with D30500);
С			Aux Wheel	150M* s/n 15077814 thru 15078321 (When equipped with C30480);
С			Aux Wheel	150M* s/n 15078322 thru 15079405 (When equipped with D30500);
С			Aux Wheel	A150L s/n all (When equipped with D30500);
С			Aux Wheel	A150M* s/n A1500524 thru A1500653 (When equipped with D30500);
С			Aux Wheel	A150M* s/n A1500651 thru A1500675 (When equipped with C30480);
С			Aux Wheel	A150M* s/n A1500673 thru A1500734 (When equipped with D30500);
С			Aux Wheel	F150L s/n all (When equipped with D30500);
С			Aux Wheel	F150M* s/n F15001144 thru F15001300 (When equipped with D30500);
С			Aux Wheel	F150M* s/n F15001301 thru F15001378 (When equipped with C30480);
С			Aux Wheel	F150M* s/n F15001379 thru F15001428 (When equipped with D30500);
С			Aux Wheel	FA150L* s/n FA1500082 thru FA1500120 (When equipped with D30500);
С			Aux Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n FA1500121 thru FA1500261 (When equipped with D30500);
С			Aux Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n FA1500262 thru FA1500300 (When equipped with D30500);
С			Aux Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n FA1500301 thru FA1500317 (When equipped with C30480);
С			Aux Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n FA1500318 thru FA1500336 (When equipped with D30500);



Rev Part Number	Replaces	Location	Model and Serial Number Range
^c MC155-11800	155-11800, A1636-23,	Aux Wheel	152 s/n all (When equipped with D30500);
c	A1636-23	Aux Wheel	A152 s/n all (When equipped with D30500);
С		Aux Wheel	F152 s/n all (When equipped with D30500);
С		Aux Wheel	FA152 s/n all (When equipped with D30500);
		Nose Wheel	172M* s/n 17260835 thru 17263458 (When equipped
		NOSC WHICE	with D-30500);
		Aux Wheel	172M* s/n 17263459 thru 17266562 (When equipped with D-30500);
С		Aux Wheel	172M* s/n 17266563 thru 17267200 (When equipped with C30480);
С		Aux Wheel	172M* s/n 17267201 thru 17267584 (When equipped with D-30500);
		Aux Wheel	172N s/n all (When equipped with D-30500);
		Aux Wheel	172P s/n all (When equipped with D-30500);
		Aux Wheel	172Q s/n all (When equipped with D-30500);
		Aux Wheel	172RG s/n all (When equipped with D-30500);
		Nose Wheel	F172L* s/n F17200901 thru F17200904 (When equipped
		Aug Mhool	with D-30500);
		Aux Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
		Aux Wheel	with D-30500);
		Aux Wileel	F172M* s/n F17201235 thru F17201481 (When equipped with D-30500);
С		Aux Wheel	F172M* s/n F17201482 thru F17201514 (When equipped
		AUX WIICCI	with C30480);
		Aux Wheel	F172N s/n all (When equipped with D-30500);
		Aux Wheel	F172P s/n all (When equipped with D-30500);
		Aux Wheel	FR172E s/n all (When equipped with D-30500);
		Aux Wheel	FR172F s/n all (When equipped with D-30500);
		Aux Wheel	FR172G s/n all (When equipped with D-30500);
		Aux Wheel	FR172H s/n all (When equipped with D-30500);
		Aux Wheel	FR172J s/n all (When equipped with D-30500);
		Aux Wheel	FR172K s/n all (When equipped with D-30500);
		Aux Wheel	R172K s/n all (When equipped with D-30500);
		Aux Wheel	177 s/n all (When equipped with D-30500);
		Aux Wheel	177B* s/n 17701774 thru 17702251 (When equipped with D-30500);
С		Aux Wheel	177B* s/n 17702252 thru 17702491 (When equipped with
		, tax villooi	C-30480);
		Aux Wheel	177B* s/n 17702492 thru 17702752 (When equipped with
			D-30500);
		Aux Wheel	177RG* s/n 177RG0274 thru 177RG0641 (When equipped with D-30500);
		Aux Wheel	177RG* s/n 177RG0642 thru 177RG0911 (When
			equipped with C-30480);



Rev Part Number	Replaces	Location	Model and Serial Number Range
MC155-11800	155-11800, A1636-23,	Aux Wheel	177RG* s/n 177RG0912 thru 177RG1366 (When
	A1636-23		equipped with D-30500);
		Aux Wheel	F177RG* s/n F177RG0154 thru F177RG0177 (When
			equipped with D-30500);
D		Aux Wheel	182P* s/n 18261299 thru 18262465 (When equipped with
			D-30500);
D		Aux Wheel	182P* s/n 18262466 thru 18264743 (When equipped with
			C-30480);
D		Aux Wheel	182P* s/n 18264744 thru 18265175 (When equipped with
			D-30500);
D		Aux Wheel	182Q s/n all (When equipped with D-30500);
D		Aux Wheel	182R s/n all (When equipped with D-30500);
D		Aux Wheel	F182P s/n all (When equipped with C-30480);
D		Aux Wheel	F182Q s/n all (When equipped with D-30500);
D		Aux Wheel	FR182 s/n all (When equipped with D-30500);
D		Aux Wheel	R182 s/n all (When equipped with D-30500);
D		Aux Wheel	T182 s/n all (When equipped with D-30500);
D		Aux Wheel	TR182 s/n all (When equipped with D-30500);
D		Aux Wheel	206 s/n all (When equipped with D-30500);
D		Aux Wheel	P206 s/n all (When equipped with D-30500);
D		Aux Wheel	P206A s/n all (When equipped with D-30500);
D		Aux Wheel	P206B s/n all (When equipped with D-30500);
D		Aux Wheel	P206C s/n all (When equipped with D-30500);
D D		Aux Wheel	P206D s/n all (When equipped with D-30500);
D		Aux Wheel	P206E s/n all (When equipped with D-30500);
D		Aux Wheel	TP206A s/n all (When equipped with D-30500);
D		Aux Wheel	TP206B s/n all (When equipped with D-30500);
D		Aux Wheel	TP206C s/n all (When equipped with D-30500);
D		Aux Wheel	TP206D s/n all (When equipped with D-30500);
D		Aux Wheel	TP206E s/n all (When equipped with D-30500);
D		Aux Wheel	TU206A s/n all (When equipped with D-30500);
D		Aux Wheel	TU206B s/n all (When equipped with D-30500);
D		Aux Wheel	TU206C s/n all (When equipped with D-30500);
D		Aux Wheel Aux Wheel	TU206D s/n all (When equipped with D-30500);
		Aux Wheel	TU206E s/n all (When equipped with D-30500);
_		Aux Wileel	TU206F* s/n U20601701 thru U20602199 (When
D		Aux Wheel	equipped with D-30500);
		Aux Wileel	TU206F* s/n U20602200 thru U20603521 (When
D		Aux Wheel	equipped with D-30500); TU206G s/n all (When equipped with D-30500);
D		Aux Wheel	U206 s/n all (When equipped with D-30500);
D		Aux Wheel	U206A s/n all (When equipped with D-30500);
D		Aux Wheel	U206B s/n all (When equipped with D-30500);
D		Aux Wheel	U206C s/n all (When equipped with D-30500);
D		Aux Wheel	U206D s/n all (When equipped with D-30500);
D		Aux Wheel	U206E s/n all (When equipped with D-30500);
			a (a aqa.ppaa mu b aaaaa),



Rev Part Number	Replaces	Location	Model and Serial Number Range
[□] MC155-11800	155-11800, A1636-23, A1636-23	Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped with D-30500);
D	A1030-23	Aux Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
		Aux Wilcoi	with D-30500);
D		Aux Wheel	U206G s/n all (When equipped with D-30500);
D		Aux Wheel	207* s/n 20700212 thru 20700362 (When equipped with
			D-30500);
D		Aux Wheel	207A s/n all (When equipped with D-30500);
D		Aux Wheel	T207* s/n 20700212 thru 20700362 (When equipped with D-30500);
D		Aux Wheel	T207A s/n all (When equipped with D-30500);
D		Aux Wheel	210L* s/n 21059662 thru 21061573 (When equipped with
		Ada Wilcol	D-30500);
D		Aux Wheel	210M s/n all (When equipped with D-30500);
D		Aux Wheel	210N* s/n 21062955 thru 21064135 (When equipped with
			D-30500);
D		Aux Wheel	210N* s/n 21064136 thru 21064897 (When equipped with
			D-30500);
D		Aux Wheel	210R s/n all (When equipped with D-30500);
D		Aux Wheel	P210N s/n all (When equipped with D-30500);
D		Aux Wheel	P210R s/n all (When equipped with D-30500);
D		Aux Wheel	T210L* s/n 21059662 thru 21061573 (When equipped with D-30500);
D		Aux Wheel	T210M s/n all (When equipped with D-30500);
D		Aux Wheel	T210N* s/n 21062955 thru 21064135 (When equipped with D-30500);
D		Aux Wheel	T210N* s/n 21064136 thru 21064897 (When equipped with D-30500);
D		Aux Wheel	T210R s/n all (When equipped with D-30500);
c MC155-11900	155-11900, A1636-24	Main Wheel	150L* s/n 15072004 thru 15074891 (When equipped with D30660-1);
С		Main Wheel	150M* s/n 15075782 thru 15077085 (When equipped
			with D30660-1);
С		Main Wheel	150M* s/n 15077086 thru 15077379 (When equipped with D30580);
c c		Main Wheel	150M* s/n 15077381 thru 15077401 (When equipped with D30580);
		Main Wheel	150M* s/n 15077404 thru 15079113 (When equipped
С		Main Wheel	with D30291-6); 150M* s/n 15079114 thru 15079405 (When equipped
С		Main Wheel	with D30660-1); A150L* s/n A1500227 thru A1500430 (When equipped with D30660.1);
		Main Wheel	with D30660-1); A150L* s/n A1500431 thru A1500523 (When equipped



Rev Part Number MC155-11900	Replaces 155-11900, A1636-24	Location Main Wheel	Model and Serial Number Range A150M* s/n A1500524 thru A1500620 (When equipped
			with D30660-1);
С		Main Wheel	A150M* s/n A1500621 thru A1500641 (When equipped
С			with D30580);
		Main Wheel	A150M* s/n A1500642 thru A1500734 (When equipped with D30291-6);
С		Main Wheel	F150L s/n all (When equipped with D30660-1);
С		Main Wheel	F150M* s/n F15001144 thru F15001418 (When equipped
			with D30660-1);
С		Main Wheel	F150M* s/n F15001312 thru F15001332 (When equipped with D30580);
С		Main Wheel	F150M* s/n F15001333 thru F15001418 (When equipped
			with D30291-6);
С		Main Wheel	F150M* s/n F15001419 thru F15001428 (When equipped
			with D30660-1);
С		Main Wheel	FA150L* s/n FA1500082 thru FA1500120 (When
			equipped with D30660-1);
С		Main Wheel	FA150L (with FKA150-2311 and FKA150-2316)* s/n
			FA1500121 thru FA1500261 (When equipped with
С		Main Wheel	D30660-1);
		Main Wileei	FA150M (with FKA150-2311 and FKA150-2316)* s/n FA1500262 thru FA1500299 (When equipped with
			D30660-1);
С		Main Wheel	FA150M (with FKA150-2311 and FKA150-2316)* s/n
		Wall Wilco	FA1500312 thru FA1500336 (When equipped with
			D30291-6);
С		Main Wheel	152 s/n all (When equipped with D30660-1);
С		Main Wheel	A152 s/n all (When equipped with D30660-1);
С		Main Wheel	F152 s/n all (When equipped with D30660-1);
С		Main Wheel	FA152 s/n all (When equipped with D30660-1);
		Main Wheel	172D s/n all (When equipped with D-30660-1);
		Main Wheel	172E s/n all (When equipped with D-30660-1);
		Main Wheel	172F (T-41A) s/n all (When equipped with D-30660-1);
		Main Wheel	172G s/n all (When equipped with D-30660-1);
		Main Wheel	172H (T-41A) s/n all (When equipped with D-30660-1);
		Main Wheel	172I s/n all (When equipped with D-30660-1);
		Main Wheel	172K s/n all (When equipped with D-30660-1);
		Main Wheel	172L s/n all (When equipped with D-30660-1);
		Main Wheel	172M* s/n 17260835 thru 17263458 (When equipped with D-30660-1);
		Main Wheel	172M* s/n 17263459 thru 17265648 (When equipped with D-30660-1);
		Main Wheel	172M* s/n 17265649 thru 17266053 (When equipped with D-30580);
		Main Wheel	172M* s/n 17266054 thru 17267584 (When equipped
			with D-30291-6);



Rev Part Number	Replaces	<u>Location</u>	Model and Serial Number Range
MC155-11900	155-11900, A1636-24	Main Wheel	172N* s/n 17267585 thru 17268399 (When equipped with
			D-30291-6);
		Main Wheel	172N s/n all (When equipped with D-30580);
		Main Wheel	172N* s/n 17268400 thru 17274009 (When equipped with
			D-30660-1);
		Main Wheel	172P s/n all (When equipped with D-30291-6);
		Main Wheel	172P s/n all (When equipped with D-30580);
		Main Wheel	172P s/n all (When equipped with D-30660-1);
		Main Wheel	172Q s/n all (When equipped with D-30291-6);
		Main Wheel	172Q s/n all (When equipped with D-30580);
		Main Wheel	172Q s/n all (When equipped with D-30660-1);
		Main Wheel	172RG s/n all (When equipped with D-30660-1);
		Main Wheel	F172D s/n all (When equipped with D-30660-1);
		Main Wheel	F172E s/n all (When equipped with D-30660-1);
		Main Wheel	F172F s/n all (When equipped with D-30660-1);
		Main Wheel	F172G s/n all (When equipped with D-30660-1);
		Main Wheel	F172H* s/n F172-0320 thru F172-0654 (When equipped with D-30660-1);
		Main Wheel	F172H* s/n F17200655 thru F17200754 (When equipped
		Wall Wilce	with D-30660-1);
		Main Wheel	F172K s/n all (When equipped with D-30660-1);
		Main Wheel	F172L* s/n F17200901 thru F17200904 (When equipped
		Wall Wilcol	with D-30660-1);
		Main Wheel	F172M* s/n F17200905 thru F17201234 (When equipped
			with D-30660-1);
		Main Wheel	F172M* s/n F17201235 thru F17201465 (When equipped
			with D-30660-1);
		Main Wheel	F172M* s/n F17201466 thru F17201485 (When equipped
			with D-30580);
		Main Wheel	F172M* s/n F17201486 thru F17201514 (When equipped
			with D-30291-6);
		Main Wheel	F172N* s/n F17201515 thru F17201633 (When equipped
			with D-30291-6);
		Main Wheel	F172N s/n all (When equipped with D-30580);
		Main Wheel	F172N* s/n F17201634 thru F17202039 (When equipped with D-30660-1);
		Main Wheel	F172P s/n all (When equipped with D-30291-6);
		Main Wheel	F172P s/n all (When equipped with D-30580);
		Main Wheel	F172P s/n all (When equipped with D-30660-1);
		Main Wheel	FP172 s/n all (When equipped with D-30660-1);
		Main Wheel	FR172J* s/n FR1720420 thru FR17200590 (When
			equipped with D-30660-1);
		Main Wheel	FR172K s/n all (When equipped with D-30291-6);
		Main Wheel	FR172K s/n all (When equipped with D-30660-1);
		Main Wheel	P172D s/n all (When equipped with D-30660-1);
		Main Wheel	R172K s/n all (When equipped with D-30291-6);
			, , , , , , , , , , , , , , , , , , ,



Rev Part Number MC155-11900	Replaces 155-11900, A1636-24	Location Main Wheel	Model and Serial Number Range R172K s/n all (When equipped with D-30660-1);
WO 100-11900	155-11500, A1050-24	Main Wheel	177 s/n all (When equipped with D-30291-6);
		Main Wheel	177 s/n all (When equipped with D-30580);
		Main Wheel	177 s/n all (When equipped with D-30660-1);
		Main Wheel	177B* s/n 17702314 thru 17702347 (When equipped with
		Walli Wilcei	D-30580);
		Main Wheel	177B* s/n 17702348 thru 17702614 (When equipped with
		Walli Wilcei	D-30291-6);
		Main Wheel	177B* s/n 17702615 thru 17702752 (When equipped with
		Walli Wilcei	D-30660-1);
		Main Wheel	177RG* s/n 177RG0788 thru 177RG0805 (When
		IVIAIII VVIICEI	•
		Main Wheel	equipped with D-30580);
		IVIAIII VVIICEI	177RG* s/n 177RG0805 thru 177RG1108 (When
		Main Wheel	equipped with D-30291-6);
		IVIAIII VVIICEI	177RG* s/n 177RG1109 thru 177RG1366 (When
		Main Wheel	equipped with D-30660-1);
		Main Wileei	F177RG* s/n F177RG0139 thru F177RG0144 (When
		Main Wheel	equipped with D-30580);
		Main Wheel	F177RG* s/n F177RG0145 thru F177RG0172 (When
		Main Wheel	equipped with D-30291-6);
		Main Wheel	F177RG* s/n F177RG0173 thru F177RG0177 (When
		Main Wheel	equipped with D-30660-1);
		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
		Main Wheel	D-30291-1);
		Main Wheel	180J* s/n 18052285 thru 18052384 (When equipped with
		Main Wheel	D-30291-3);
		Main Wileei	180J* s/n 18052385 thru 18052770 (When equipped with
		Main Wheel	D-30291-1);
		Main Wileei	180J* s/n 18052385 thru 18052770 (When equipped with
		Main Wheel	D-30291-3);
		Main Wileei	180J* s/n 18052385 thru 18052770 (When equipped with
		Main Wheel	D-30660-3);
		Main Wheel	180K* s/n 18052771 thru 18052924 (When equipped with
		Main Wheel	D-30291-1);
		Main Wileei	180K* s/n 18052771 thru 18052924 (When equipped with
		Main Wheel	D-30291-3);
		Main Wileei	180K* s/n 18052925 thru 18053203 (When equipped with
		Main Wheel	D-30660-2);
		Main Wileei	182P* s/n 18262466 thru 18264307 (When equipped with
		Main Whool	D-30580);
		Main Wheel	182P* s/n 18262466 thru 18265175 (When equipped with
		Main Whaal	D-30660-1);
		Main Wheel	182P* s/n 18264308 thru 18265175 (When equipped with
1		14-i- \1/k !	D-30291-6);
)		Main Wheel	182Q* s/n 18265176 thru 18265328 (When equipped with D-30291-6);
			with 11 20201 GV



ev Part Number MC155-11900	Replaces 155-11900, A1636-24	<u>Location</u> Main Wheel	Model and Serial Number Range 182Q* s/n 18265329 thru 18267715 (When equipped
			with D-30660-1);
)		Main Wheel	182R s/n all (When equipped with D-30291-6);
)		Main Wheel	182R s/n all (When equipped with D-30660-1);
)		Main Wheel	182R s/n all (When equipped with D-30660-3);
)		Main Wheel	F182P s/n all (When equipped with D-30291-6);
)		Main Wheel	F182Q s/n all (When equipped with D-30291-6);
) 		Main Wheel	
			F182Q* s/n F18200074 thru F18200169 (When equipped with D-30660-1);
		Main Wheel	FR182 s/n all (When equipped with D-30660-3);
		Main Wheel	R182 s/n all (When equipped with D-30660-3);
		Main Wheel	T182 s/n all (When equipped with D-30291-6);
		Main Wheel	T182 s/n all (When equipped with D-30660-3);
		Main Wheel	TR182 s/n all (When equipped with D-30660-3);
		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped with D-30291-1);
		Main Wheel	A185F* s/n 18502091 thru 18502310 (When equipped
		Wall Willow	with D-30291-3);
		Main Wheel	A185F* s/n 18502311 thru 18503504 (When equipped
		Wall Wilco	with D-30291-1);
		Main Wheel	A185F* s/n 18502311 thru 18503504 (When equipped
		Wall Wilco	with D-30291-3);
		Main Wheel	**
		Main Wileei	A185F* s/n 18503505 thru 18504448 (When equipped
		Aux Wheel	with D-30660-2); 206 s/n all (When equipped with D-30665);
		Aux Wheel	
			P206 s/n all (When equipped with D-30665);
		Aux Wheel	P206A s/n all (When equipped with D-30665);
		Aux Wheel	P206B s/n all (When equipped with D-30665);
		Aux Wheel	P206C s/n all (When equipped with D-30665);
		Aux Wheel	P206D s/n all (When equipped with D-30665);
		Aux Wheel	P206E s/n all (When equipped with D-30665);
		Aux Wheel	TP206A s/n all (When equipped with D-30665);
		Aux Wheel	TP206B s/n all (When equipped with D-30665);
		Aux Wheel	TP206C s/n all (When equipped with D-30665);
		Aux Wheel	TP206D s/n all (When equipped with D-30665);
		Aux Wheel	TP206E s/n all (When equipped with D-30665);
		Aux Wheel	TU206A s/n all (When equipped with D-30665);
		Aux Wheel	TU206B s/n all (When equipped with D-30665);
		Aux Wheel	TU206C s/n all (When equipped with D-30665);
		Aux Wheel	TU206D s/n all (When equipped with D-30665);
		Aux Wheel	TU206E s/n all (When equipped with D-30665);
		Aux Wheel	TU206F* s/n U20601701 thru U20602199 (When equipped with D-30665);
		Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with D-30660-2);
			equipped with D-30000-2),



Rev Part Number	Replaces	Location	Model and Serial Number Range
[□] MC155-11900	155-11900, A1636-24	Main Wheel	TU206F* s/n U20602200 thru U20603521 (When
			equipped with D-30660-3);
D		Aux Wheel	TU206F* s/n U20602200 thru U20603521 (When
_			equipped with D-30665);
D		Main Wheel	TU206G s/n all (When equipped with D-30660-2);
D		Main Wheel	TU206G s/n all (When equipped with D-30660-3);
D		Aux Wheel	TU206G s/n all (When equipped with D-30665);
D		Aux Wheel	U206 s/n all (When equipped with D-30665);
D		Aux Wheel	U206A s/n all (When equipped with D-30665);
D		Aux Wheel	U206B s/n all (When equipped with D-30665);
D		Aux Wheel	U206C s/n all (When equipped with D-30665);
D		Aux Wheel	U206D s/n all (When equipped with D-30665);
D		Aux Wheel	U206E s/n all (When equipped with D-30665);
D		Aux Wheel	U206F* s/n U20601701 thru U20602199 (When equipped with D-30665);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with D-30660-2);
D		Main Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with D-30660-3);
		Aux Wheel	U206F* s/n U20602200 thru U20603521 (When equipped
			with D-30665);
D		Main Wheel	U206G s/n all (When equipped with D-30660-2);
D		Main Wheel	U206G s/n all (When equipped with D-30660-3);
D		Aux Wheel	U206G s/n all (When equipped with D-30665);
D		Aux Wheel	207* s/n 20700212 thru 20700362 (When equipped with D-30665);
D		Aux Wheel	207A s/n all (When equipped with D-30665);
D		Aux Wheel	T207* s/n 20700212 thru 20700362 (When equipped with
			D-30665);
D		Aux Wheel	T207A s/n all (When equipped with D-30665);
D		Main Wheel	210L* s/n 21060090 thru 21061573 (When equipped with D-30660-3);
D		Main Wheel	210M s/n all (When equipped with D-30660-3);
D		Main Wheel	
		Maii Wileei	210N* s/n 21062955 thru 21064135 (When equipped with D-30660-3);
D		Main Wheel	P210N s/n all (When equipped with D-30660-3);
D		Main Wheel	P210R s/n all (When equipped with D-30660-3);
D		Main Wheel	T210L* s/n 21060090 thru 21061573 (When equipped
			with D-30660-3);
D		Main Wheel	T210M s/n all (When equipped with D-30660-3);
D		Main Wheel	T210N* s/n 21062955 thru 21064135 (When equipped with D-30660-3);
D		Aux Wheel	310R s/n all (When equipped with D-30665);
D		Aux Wheel	T310R s/n all (When equipped with D-30665);
D		Aux Wheel	337G s/n all (When equipped with D-30665);
D		Aux Wheel	337H s/n all (When equipped with D-30665);
			, , , , , , , , , , , , , , , , , , , ,



Rev Part Number	Replaces	<u>Location</u>	Model and Serial Number Range
[□] MC155-11900	155-11900, A1636-24	Aux Wheel	F337G s/n all (When equipped with D-30665);
D		Aux Wheel	F337H s/n all (When equipped with D-30665);
D		Aux Wheel	T337G* s/n P3370028 thru P3370282 (When equipped
			with D-30665);
D		Aux Wheel	T337H s/n all (When equipped with D-30665);
D		Aux Wheel	340 s/n all (When equipped with D-30665);
D		Aux Wheel	340A* s/n 340A0001 thru 340A1000 (When equipped with D-30665);
D		Aux Wheel	402 s/n all (When equipped with D-30665);
D		Aux Wheel	402A s/n all (When equipped with D-30665);
D		Aux Wheel	402B s/n all (When equipped with D-30665);
D		Aux Wheel	404 s/n all (When equipped with D-30665);
D		Aux Wheel	414 s/n all (When equipped with D-30665);
D		Aux Wheel	414A s/n all (When equipped with D-30665);
D		Aux Wheel	421 s/n all (When equipped with D-30665);
D		Aux Wheel	421A s/n all (When equipped with D-30665);
D		Aux Wheel	421B s/n all (When equipped with D-30665);
D		Aux Wheel	421C s/n all (When equipped with D-30665);
^E MC156-00100	156-00100, 156-00300, 156-1	Main Wheel	150C s/n all (When equipped with 40-57A);
D		Main Wheel	180H* s/n 18051775 thru 18051993 (When equipped with 40-66);
D		Main Wheel	185 s/n all (When equipped with 40-32);
D		Main Wheel	185A s/n all (When equipped with 40-32);
D		Main Wheel	185B s/n all (When equipped with 40-66);
D		Main Wheel	A185E* s/n 185-1150 thru 185-1447 (When equipped with 40-66);
D		Main Wheel	210-5 (205) s/n all (When equipped with 40-67);
D		Main Wheel	210C s/n all (When equipped with 40-21);
		Main Wheel	336* s/n 336-0001 thru 336-0098 (When equipped with 40-67);

Denotes partial model eligibility

"MC" prefix denotes McFarlane Aviation, Inc. manufacture

Report Generated: 1/15/2018 12:30:26PM

